

# Honeywell

THE POWER OF **CONNECTED**

## EchoView User's Guide



Rev. F  
January 2019  
P/N: F04-4001-000

# EchoView User's Guide

## Product Registration

Register your product online by visiting:

<https://www.honeywellanalytics.com/en/support/product-registration>

By registering your product, you can:

- Receive notification of product upgrades or enhancements
- Be alerted to training classes in your area
- Take advantage of special offers and promotions

# EchoView Host User's Guide

## Contents

1. Standard Contents.....	7
2. General Information.....	7
2.1. Key Features.....	8
3. Physical Description.....	9
3.1. LCD Display (Monitoring).....	10
3.2. LCD Display (In Alarm).....	10
4. Specifications.....	11
5. Operation.....	12
5.1. Enable The FMC2000 Controller's EchoView Function.....	12
5.2. Turning The EchoView On.....	13
5.3. Turning The EchoView Off.....	14
5.4. Battery Indicator.....	15
5.5. Buzzer (Audible Alarm) Off Indicator.....	15
5.6. Wireless Communication Indicator.....	16
6. Deploying The EchoView.....	16
7. Programming The EchoView.....	17
7.1. Settings.....	18
7.1.1. Buzzer On/Off.....	18
7.1.2. LCD Contrast.....	19
7.1.3. Serial Number.....	19
7.1.4. Firmware Version.....	20
7.1.5. Factory Reset.....	20
7.1.6. Edit Password.....	21
7.1.7. Page Disable (EchoView Host).....	22
7.1.8. Exit.....	23
7.2. Wireless.....	23
7.2.1. Ping Net.....	24
7.2.2. PAN ID Setup.....	24
7.2.3. Join Net.....	25
7.2.4. Channel Setup.....	26
7.2.5. Exit.....	27
8. Viewing Data From Connected Monitors.....	27
8.1. Viewing Alarm Data.....	28
8.2. One Monitor In Alarm.....	28
8.3. Multiple Monitors In Alarm.....	29
8.4. Peak Value Reading For Online Or Offline Monitors.....	30
8.4.1. Clearing Offline Monitors.....	30
8.5. Panic Alarm.....	31
8.6. Enabling/Disabling The "Panic Button" Function.....	31
8.7. Using The "Panic" Function.....	32
8.7.1. Trigger All Relays.....	33
8.7.2. Trigger A Selected Relay.....	33
8.7.3. Clear Relays.....	33
8.7.4. Alarm Abbreviations.....	34
8.7.5. Alarm Signal Summary.....	34

# EchoView User's Guide

8.8. Offline Monitor(s).....	34
8.9. Backlight.....	34
9. Internal Battery Replacement.....	35
10. Troubleshooting.....	37
11. Year Of Manufacture.....	38
12. Appendix A: External Battery Replacement.....	39
12.1. External Battery Usage.....	40
12.2. External Battery Replacement Process.....	42
13. Appendix B: Installation.....	43
13.1. Magnet-Mount Installation.....	43
13.2. Fixed Installation.....	44
13.3. Magnetic Mount Alternative Installation.....	47

# EchoView User's Guide



This Manual must be carefully read by all individuals who have or will have the responsibility of using, maintaining, or servicing this product. The product will perform as designed only if it is used, maintained, and serviced in accordance with the manufacturer's instructions. The user should understand how to set the correct parameters and interpret the obtained results.

For safety reasons, this equipment must be operated and serviced by qualified personnel only. Read and understand the user manual completely before operating or servicing.

## AVERTISSEMENT

Pour des raisons de sécurité, cet équipement doit être utilisé, entretenu et réparé uniquement par un personnel qualifié. Étudier le manuel d'instructions en entier avant d'utiliser, d'entretenir ou de réparer l'équipement.

## Read Before Operating

This manual must be carefully read by all individuals who have or will have the responsibility of using, maintaining, or servicing this product. The product will perform as designed only if it is used, maintained, and serviced in accordance with the manufacturer's instructions. The user should understand how to set the correct parameters and interpret the obtained results.

### CAUTION!

To reduce the risk of electric shock, turn the power off before opening this instrument or performing service. Never operate the instrument when the instrument is open. Service this product only in an area known to be non-hazardous.

### WARNING!

Use only the Lithium battery or external rechargeable battery provided by Honeywell RAE Systems. This instrument has not been tested in an explosive gas/air atmosphere having an oxygen concentration greater than 21%. Substitution of components may impair suitability for intrinsic safety. Replace batteries only in non-hazardous locations.

**STATIC HAZARD:** Clean only with a damp cloth.

For safety reasons this equipment must be operated and serviced by qualified personnel only. Read and understand instruction manual completely before operating or servicing. Any rapid up-scale reading followed by a declining or erratic reading may indicate a gas concentration beyond upper scale limit, which may be hazardous.

## Intrinsically Safe Marking



Cl. I, Div. 1, Gr A, B, C, D T4  
Ta = -40° C to +50° C  
IECEX SIR 18.0066X  
Sira 18ATEX2251X  
⊕ Ex II Ex ia IIC T4 Ga  
⊕ Ex IM1 Ex ia I Ma



Ui = 3.6V, Ci=78μF, Li/Ri=3.5μH/ohm

### WARNING!

Substitution of components may impair suitability for intrinsic safety. Replace batteries only in non-hazardous locations.

# EchoView User's Guide

## WARNING!

To prevent ignition of flammable or combustible atmospheres, disconnect power before servicing.

## Proper Product Disposal At End Of Life



### EU Directive 2012/19/EU: Waste Electrical and Electronic Equipment (WEEE)

This symbol indicates that the product must not be disposed of as general industrial or domestic waste. This product should be disposed of through suitable WEEE disposal facilities. For more information about disposal of this product, contact your local authority, distributor, or the manufacturer.

## Wireless Security Warning

Wireless data transmission can extend beyond your walls and can be received by anyone with a compatible adapter. Without proper protection, data can be compromised. Use the security features of all wireless equipment in your network.

- Bluetooth communication should always be set to OFF unless the functionality is required.
- If possible, pair devices ONLY when in a physically secure area.

## CAUTION!

This device complies with Part 15 of the FCC Rules / Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

# EchoView Host User's Guide

## Brazil Radio Specifications

**Radio model:** RM2400A

**Frequency range:** 2.400 to 2.4835GHz

**Modulation:** 802.15.4 DSSS BPSK

**RF power(Tx):** 20dBm

**Data rate:** 250kbps


## 1. Standard Contents

Standard Package includes:

- EchoView
- Antenna
- Swivel Belt Clip
- Maintenance/battery replacement tool
- User's Guide

## 2. General Information

The EchoView wirelessly receives the data shown on an FMC2000 controller in a MeshGuard network and displays them on its screen and delivers audible and visible alerts. The EchoView contains no sensors. Its built-in radio board operates on a frequency of 2.4GHz and complies with IEEE 802.15.4 standard. It works with the FMC2000 wireless controller on a flexible, robust wireless network to provide reliable, low-cost operation. Up to four EchoViews can operate on a single network. It also works in a ProRAE Guardian network with a PC.

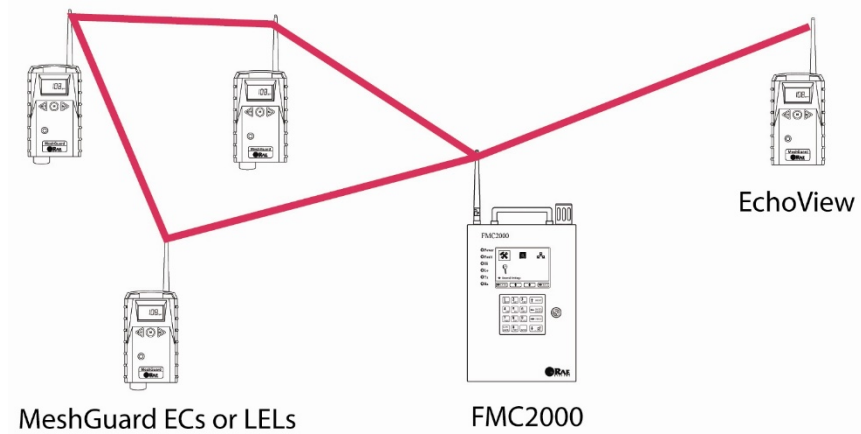

# EchoView User's Guide

## 2.1. Key Features

- Up to 45 days continuous operation using external battery box
- IEEE 802.15.4 Mesh network functionality with 64-bit encryption
- Mesh network with auto network forming and configuration
- Operating distance: up to 300 m, line of sight
- Very low-cost installation – no hardwiring involved
- Large area coverage with multi-hop mesh network
- Field-replaceable battery
- Loud audio alarm, 90dB @ 30cm (12")
- Easy-to-read continuous display of signal strength
- Bright red flashing alarm
- Highly resistant to RFI interference
- IP-65 rated for outdoor use in harsh environments

# EchoView User's Guide

## 3. Physical Description

The EchoView is available in a metal enclosure or a plastic enclosure. Functionality is identical, regardless of the enclosure.


1	LED alarm
2	LCD (with backlighting)
3	Buzzer alarm
4	Battery cover (on bottom)
5	Y/+, MODE, and N/- keys
6	Antenna



# EchoView User's Guide

## 3.1. LCD Display (Monitoring)


### LCD Display (Monitoring)

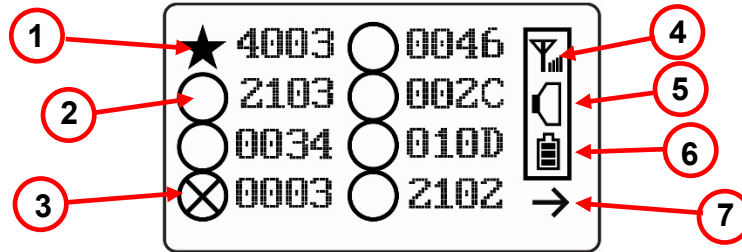

1	Selected monitor (solid circle or star)*
2	Unselected monitor (open circle or star)
3	Offline monitor (open circle with "X")
4	Radio transmission indicator ("H" is shown for "Host")
5	Audible alarm on/off indicator ("on" shown)
6	Battery indicator
7	Arrow indicating more than 8 instruments, pointing to next "page"

**Note:** The Unit ID is typically the radio ID, depending on the portable monitor's setting.

## 3.2. LCD Display (In Alarm)

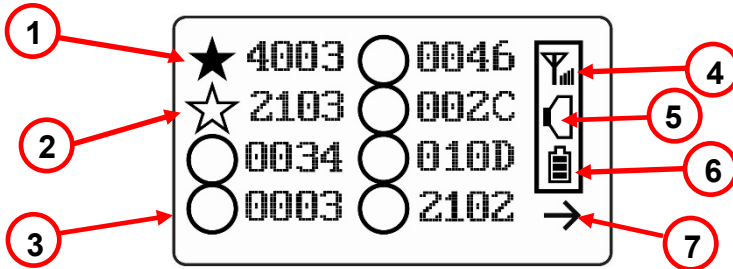

1	Monitor in alarm and selected (solid star)
2	Unselected monitor in alarm (open star)
3	Unselected monitor not in alarm (open circle)
4	Radio transmission indicator ("H" is shown for "Host")
5	Audible alarm on/off indicator ("on" shown)
6	Battery indicator
7	Arrow indicating more than 8 instruments, pointing to next "page"

# EchoView User's Guide

## 4. Specifications

<b>RF Certifications</b>	FCC Part15 CE EN 300328 Wireless Approval For UAE In Middle East ( <b>TRA REGISTERED No:</b> ER36063/14 <b>DEALER No:</b> HONEYWELL INTERNATIONAL MIDDLE EAST - LTD - DUBAI BR <b>TRA REGISTERED No:</b> ER36635/15 <b>DEALER No:</b> HONEYWELL INTERNATIONAL MIDDLE EAST - LTD - DUBAI BR) Wireless Approval for QATAR In Middle East ictQATAR Type Approval Reg. No.: R-4465 Type Approval Reg. No.: R-4635
<b>Display</b>	Graphical LCD (1 x 1.5") with backlight
<b>Audible alarm</b>	90dB @ 30cm
<b>Visual alarm</b>	2 super-bright red LEDs
<b>Calibration</b>	None necessary
<b>EM Immunity</b>	No effect when exposed to 0.43mW/cm <sup>2</sup> RF interference (5-watt transmitter at 12")
<b>Operating Range</b>	Up to 300 meters/1,000 feet to Mesh Router, or up to 1km/0.6 miles
<b>User Interface</b>	Three keys (Y/+, MODE, N/-)
<b>Power Supply</b>	D-size Lithium replaceable battery, +3.6V
<b>Operation Time</b>	Internal Battery: Up to 10 days External Battery: Up to 45 days
<b>Operating Temperature</b>	-4° to 122° F (-20° to +50° C)
<b>Humidity</b>	0% to 95% relative humidity, non-condensing
<b>Dimensions</b>	Metal Enclosure: 15.7cm x 9.3cm x 5.1cm (6.2" x 3.7" x 2.0") Plastic Enclosure: 26.5cm x 9.5cm x 5.5cm (10.5" x 3.7" x 2.1")
<b>Weight</b>	Metal Enclosure: 1.2 kg (2.65 lbs) Plastic Enclosure: 0.6 kg (1.3 lbs)
<b>IP Rating</b>	IP-65
<b>Mounting</b>	Optional stainless-steel bracket with pole mount or magnetic mount

### FCC Part 15 Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

# EchoView User's Guide

## 5. Operation

The EchoView only operates in RTR (Router) mode. Therefore, when it is turned on, it is always operational.

Whenever you start EchoView, it tries to rejoin the last network it was part of. Therefore, if the network is within range and if the channel and Pan ID have not changed, the EchoView should be able to rejoin the network without action on your part.

Make sure the battery with sufficient charge is installed before operating the EchoView. Refer to page 35 for information on battery installation and replacement.

### 5.1. Enable The FMC2000 Controller's EchoView Function

The EchoView can only receive data from an FMC2000 Controller if the controller is configured to broadcast data to it by enabling its EchoView Function. Therefore, you should perform this simple configuration before adding one or more EchoViews to a network.

To enable the Pager function on the FMC2000 Controller:

1. Press the "MENU" key from Normal Operation Mode to enter the Configuration menu.
2. Provide a 4-digit password (the default value is 1234).
3. Press "Enter."
4. The "General Settings" icon is highlighted. Press "Enter."
5. Scroll to "Advanced Settings."
6. Press "Enter."
7. Input the advanced (6-digit) password.
8. Press Enter.
9. Input the 6-digit advanced password (the default is 123456).
10. Press Enter.
11. Scroll through the options until "EchoView" is highlighted.
12. Press "Enter."
13. Select "All Alm" (all alarms) or "SNS Alarm" (sensor alarms, including High, Low, etc.) by using the up and down arrows. (There is also a "Disable" option that shuts off EchoView functionality.)
14. Press "Enter" to lock in your selection and exit the EchoView Function menu.

The FMC2000 Controller is now broadcasting its data for EchoViews.

# EchoView User's Guide

## 5.2. Turning The EchoView On

Hold down the [MODE] key and release it when the EchoView display and LED lights light up. The display indicates that the unit is now on:

**Power on**

During startup, the display shows the firmware version:

**Version 2.00**

Next, it shows the firmware's build date and time:

**Build Date:**  
**Oct 14 2012**

**Build time:**  
**16:30:01**

This is followed by the Unit Mode and Modem Type:


**Mode:**  
**Host**

**Modem type: 10**

**Note:** Modem type relates to its permanently set operating frequency. For further information, refer to page 23.

# EchoView User's Guide

Then the EchoView initializes the wireless network. When the network is found and communication is established, the main reading screen is shown. It includes signal strength, battery charge, and the identification numbers of all monitors on the network:

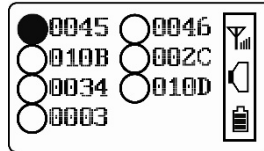

The monitor name shown on the EchoView screen is either the ID of the monitor's radio.

**Important!** Each name on a network must be unique. The automatically assigned radio ID is unique by default.

**Note:** If no monitors are within the EchoView's range, its display will only show the radio-on indicator, battery charge, and buzzer on/off icon.




If you see this screen, check the following:

- Is the antenna attached?
- Does the Pan ID match the network you want to join?
- Does the Channel match the channel on which the other instruments are operating?
- Are the other instruments turned on and within range?
- Did you change the Pan ID or Channel? If so, restart the instrument.
- Is the FMC2000 Controller's Pager Function enabled? If not, enable it.

## 5.3. Turning The EchoView Off

Hold down the [MODE] key through the "5...4...3... 2... 1... Power Off" sequence. The EchoView is off when the display is blank. Release the [MODE] key.

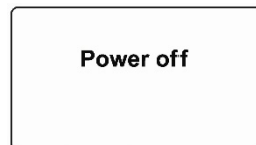


The EchoView is now off.

# EchoView User's Guide

## 5.4. Battery Indicator

The EchoView's internal battery is designed to provide power for up to 10 days. When the battery gets low, the EchoView beeps once per minute and the battery icon is empty. See page 35 for the replacement procedure. It is recommended that the battery be changed immediately, to minimize potential downtime. When the battery is almost completely depleted, the LCD displays "Power off," and the LED and buzzer alarms activate once per second. The battery icon also blinks on and off. The low battery alarm continues until the battery runs out. Then the unit shuts down automatically.

Battery power is indicated with an icon in the lower right corner of the screen, below the wireless communication indicator and buzzer icon:

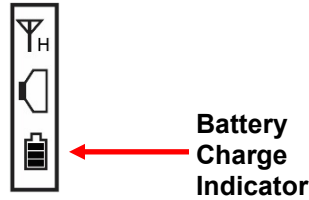



Battery charge is shown from empty to full:



**Note:** For a fixed-system application, an external power source, the RAE PowerPak, can be used as a substitute for the internal battery. Only remove the external battery adapter in non-hazardous locations.

## 5.5. Buzzer (Audible Alarm) Off Indicator


The EchoView's buzzer (audible alarm) can be turned off, so the LED visible alarms flash but there is no sound when in alarm. The icon on the main screen indicates its state.

	Buzzer on
	Buzzer off

# EchoView User's Guide

## 5.6. Wireless Communication Indicator

The display employs an antenna icon to show that the radio is on. A letter "H" indicates that the EchoView is operating in the Host mode. It is located in the upper right corner of the display:

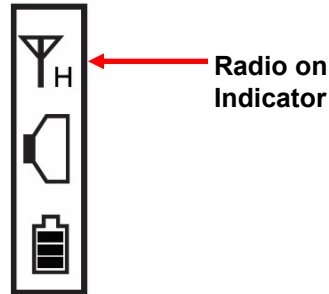

Signal strength is represented by vertical bars to the right of the antenna icon. The greater the number of bars to the right of the antenna icon, the better the connection quality.



**Note:** An "X" indicates no signal is detected.

## 6. Deploying The EchoView

When deploying a MeshGuard network that utilizes EchoViews, make sure the rest of the network has been set up before using an EchoView. The EchoView gets its information about the monitors on a network from the FMC2000 controller. It does not aggregate network data from all its nodes. Therefore, make sure the FMC2000 is operational and in communication with all monitors on the network, as well as with the EchoView.


Before deploying an EchoView, it is important to have the Pan ID and Channel number on which the rest of the network is operating. Without these numbers to program into your EchoView, you cannot make it communicate with the network.

# EchoView User's Guide

## 7. Programming The EchoView

Programming Mode is accessed by first providing the correct password.


Press and hold [MODE] and [N/-] until you see this screen:

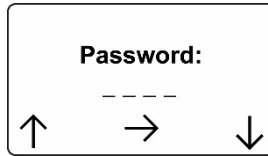

Input the 4-digit password:

- Increase the number from 0 through 9 by pressing [Y/+].
- Decrease the number from 9 through 0 by pressing [N/-].
- Step from digit to digit using [MODE].


Once all the four digits have been entered, press [MODE] again to see the following screen appear. Press [Y/+] to enter the password.

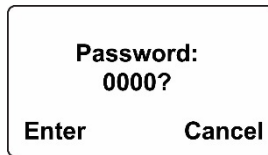

If you make a mistake, you can cycle through the digits by pressing [MODE] and then using [Y/+] and [N/-] to change the number in each position.


**Note:** The default password is 0000.

If your password is incorrect, you see this screen:

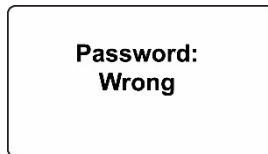

After a few seconds, the EchoView exits to its main screen.

When you have successfully entered Programming Mode, you see this screen:

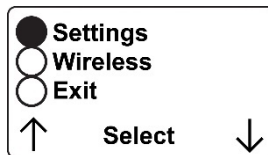

**Note:** If you do not make a selection in 60 seconds, the EchoView automatically exits to the main screen.

Press [Y/+] or [N/-] to scroll to "Settings," "Wireless," or "Exit." Then press [MODE] to select your choice.


# EchoView User's Guide

**Settings** provides information about your instrument. Some screens are read-only (you cannot edit them), but other screens allow you to change settings.

**Wireless** consists of parameters you can set/change that affect wireless functionality, network configuration, etc.


## 7.1. Settings

Settings include some read-only information (Serial Number and Firmware Version) and some settings that you can change.

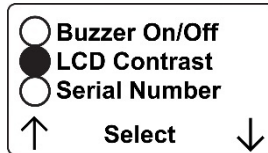

Press [Y/+] to scroll up or [N/-] to scroll down.

**Note:** Two more screens contain additional options:

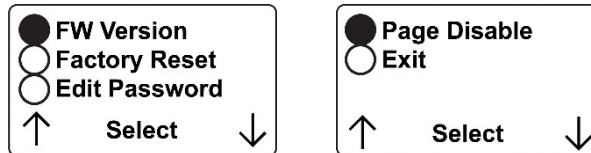

**Note:** The scrolling “wraps,” so once you reach the first or last item, it starts scrolling through the items again.

Eight choices (including Exit) are available:


- Buzzer On/Off
- LCD Contrast
- Serial Number (read-only)
- Firmware Version (read-only)
- Factory Reset
- Edit Password
- Page Disable
- Exit

To make a selection, scroll until the circle to the left of your choice is black, and then press [MODE].

**Note:** If you do not make a selection in 60 seconds, it automatically exits to the main screen.


### 7.1.1. Buzzer On/Off

You can turn the buzzer (audible alarm) on or off. To access the parameter, press [MODE] when its name is highlighted (dark circle):

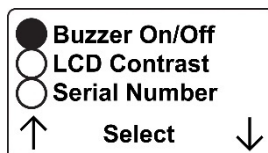


# EchoView User's Guide

You are asked whether you want to disable (or enable, if it is already disabled) the audible alarm:

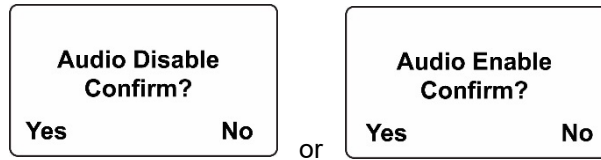


To toggle the audible alarm from on to off (or off to on), press [Y/+], and a confirmation message appears. To exit without performing the reset, press [N/-].

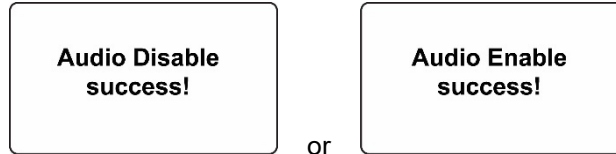


## 7.1.2. LCD Contrast

The display's contrast is adjustable via this menu. To access it, press [MODE] when its name is highlighted (dark circle):

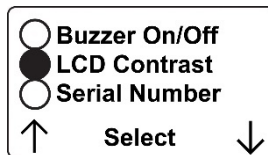


The contrast value is shown in the display. Step through the digits from left to right by pressing [MODE]. Change a digit's value by pressing [Y/+] to increase and [N/-] to decrease. After the third digit, you see a flashing "?"

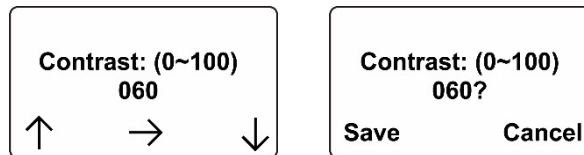

- Save your changes by pressing [Y/+].
- Exit without saving changes by pressing [N/-].
- Step back to the first digit by pressing [MODE].

## 7.1.3. Serial Number

This shows the Serial Number of the EchoView. To view it, press [MODE] when "Serial Number" is highlighted (dark circle):

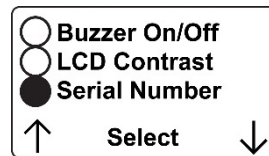

# EchoView User's Guide


The serial number is shown in the display:



Press [MODE] to return to the Settings menu. If you do not make a selection in 60 seconds, the unit automatically exits to the menu.

## 7.1.4. Firmware Version

This shows the firmware version incorporated in the instrument. It is read-only. You cannot make changes to the information. To view it, press [MODE] when its name is highlighted (dark circle):

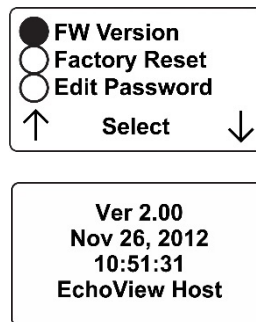


Press [MODE] to return to the Settings menu. If you do not make a selection in 60 seconds, it automatically exits to the menu.

## 7.1.5. Factory Reset

You can perform a factory reset to the instrument's original settings. To access it, press [MODE] when its name is highlighted (dark circle):



You are asked whether you want to perform the factory reset:

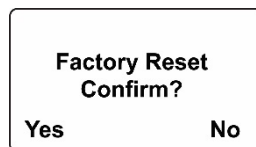

To perform the reset, press [Y/+]. To exit without performing the reset, press [N/-].

# EchoView User's Guide

While the EchoView is being reset to its original factory settings, the screen shows that the activity is taking place:



When the reset is complete, this screen appears:



Then the unit returns to the Settings menu.

**Note:** Factory Reset changes all EchoView settings to factory-default values. These include:

- PAN ID
- Channel

## **IMPORTANT!**

**All custom-configured settings are removed and cannot be retrieved!**

### **7.1.6. Edit Password**

You can change the password by selecting "Edit Password."



At this screen, input your new password over the old one (or the default):

- Increase the number from 0 through 9 by pressing [Y/+].
- Decrease the number from 9 through 0 by pressing [N/-].
- Step from digit to digit using [MODE].


# EchoView User's Guide

**Note:** If you make a mistake, you can cycle through the digits by pressing [MODE] and then using [Y/+] and [N/-] to change the number in each position.



Once all the four digits have been entered, press [MODE] again to see the following screen appear.

- Save your changes by pressing [Y/+].
- Exit without saving changes by pressing [N/-].
- Step back to the first digit by pressing [MODE].

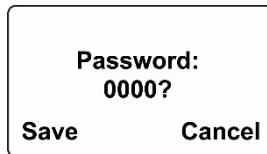


Saving the password takes a moment, and a screen indicates that it has been successfully saved:




## 7.1.7. Page Disable (EchoView Host)

The Page feature can be enabled to allow up to four additional EchoView Host “mimic panels” to be used as part of a closed-loop system.

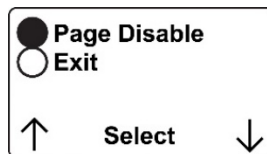

When the Page feature is enabled, the EchoView Host broadcasts instrument data. These data can be picked up by mimic panels. If no mimic panels are planned to be used, this feature should be disabled, in order to ensure data privacy. **Note:** The default value is “Disabled.”

To enable (or later to disable) the feature, press [MODE] to reach this screen (if it is already enabled, it will say “Page Disable?”):

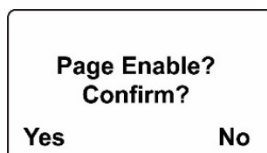


# EchoView User's Guide

Press [Y/+] to change the setting. After the setting is accepted, this screen is shown (or one that says "Page Disabled"):



## 7.1.8. Exit

Scroll until "Exit" is selected.

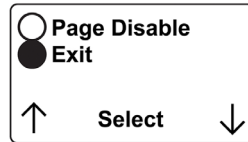


Press [MODE] to return to the Programming Menu.

**Note:** If you do not make a selection in 60 seconds, it automatically exits to the menu.

## 7.2. Wireless


Wireless consists of editable parameters and actions to configure, form, and test a closed-loop wireless network.

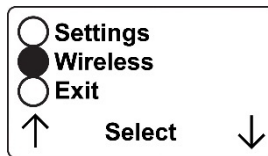

Under Programming Menu, select "Wireless."

Press [Y/+] to scroll up or [N/-] to scroll down through wireless sub-menus.

**Note:** When you reach the last item and continue scrolling, a second screen appears:

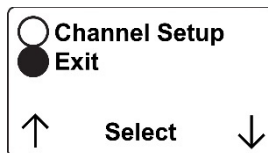

The scrolling "wraps," so once you reach the first or last item of either screen, it starts scrolling through the items in the other screen again.

Five choices (including Exit) are available:

- Ping Net
- PANID Setup
- Form Net
- Channel Setup
- Exit

# EchoView User's Guide


To make a selection, scroll until the circle to the left of your choice is black, and then press [MODE].

**Note:** If you do not make a selection in 60 seconds, it automatically exits to the main Programming Menu.


## 7.2.1. Ping Net

Pinging tests the radio connection between the EchoView and other units on its network. (A “ping” is a short signal sent to the network to prompt a reply; it contains no other data.)

Scroll until “Ping Net” is selected.

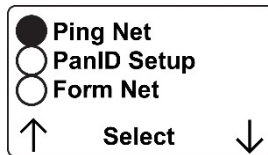

Press [MODE] to ping the network. This message appears:

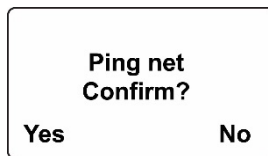

Press [Y/+]. The Echoview broadcasts a ping signal to its network. All devices in the network that receive the ping signal respond with a beep if they are within the range. (The Echoview does not beep or flash its LED lights.) You can also ping from an instrument in the network. If it is within range, the EchoView responds with a beep and an LED light flash.


If a network ping is unsuccessful, check the following:

- Is the antenna attached?
- Does the PAN ID match the PAN ID of other instruments in the network?
- Does the Channel match the channel on which the other instruments are operating?
- Are the other instruments turned on and within range?

## 7.2.2. PAN ID Setup

All units on a network must be programmed with the same PAN ID (Personal Network Identifier) to ensure communication compatibility.


When you see this screen, press [MODE] to view the current PAN ID or to change it:

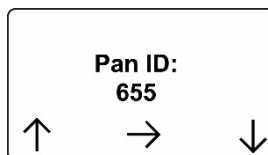

**Important!** The allowed range for PAN ID numbers is 001 through 999.

# EchoView User's Guide

The screen shows the PAN ID, with the cursor blinking on the first digit. Step through the digits from left to right by pressing [MODE]. Change a digit's value by pressing [Y/+] to increase and [N/-] to decrease. After the third digit, you see a flashing “?”

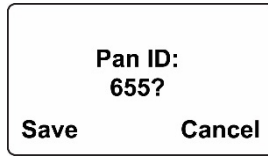

- Save your changes by pressing [Y/+].
- Exit without saving changes by pressing [N/-].
- Step back to the first digit by pressing [MODE].

**Note:** If you do not press a key within 60 seconds, the screen reverts to the programming Menu screen showing Settings, Modem, and Exit.

## 7.2.3. Join Net

This screen is for joining an existing network. When you see this screen, press [MODE] to form a network. This function allows the radio to scan all available channels and choose the least-congested one:



The screen now displays a message asking if you want to confirm your choice to join a network:



- Press [Y/+] to join a network and automatically find the best channel to operate on.
- Press [N/-] to exit without joining a network.

While the instrument starts joining a network, this message appears:



Once the device has selected the least-congested channel and a network is joined, this message is displayed:



# EchoView User's Guide

## 7.2.4. Channel Setup


All units in a network must operate on a single channel. The available channels vary by the internal wireless modem's frequency, and channel ranges are set by RAE Systems by Honeywell to correspond with the wireless modem frequency.

These are the modem frequencies and channel ranges:


**2.4 GHz:** Channels 11 through 26

**Note:** You can use "Form Net" to automatically have the EchoView select the least-congested channel.


Scroll until "Channel Setup" is selected.

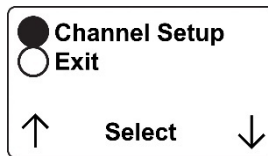

Press [MODE] to view or change the channel. The range of available channels is shown in parentheses. The screen also shows the channel number, with the cursor blinking on the first digit:

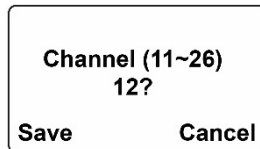


Step from digit to digit from left to right by pressing [MODE]. Change a digit's value by pressing [Y/+] to increase and [N/-] to decrease. When you press [MODE] you see a flashing "?" after the second digit:

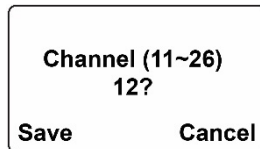

- Save your changes by pressing [Y/+].
- Exit without saving changes by pressing [N/-].
- Step back to the first digit by pressing [MODE].


If you have saved the channel number successfully, you see this screen:

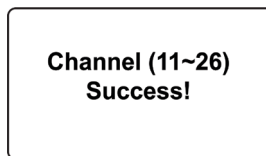

**Important!** Remember that the range of allowed channels for instruments on a EchoView's network depends on the wireless modem frequency. Therefore, you may not be able to change the channel


# EchoView User's Guide

to a number outside of its assigned set of numbers. If you select an incompatible channel number, you will see this screen, and then the EchoView returns to the Wireless menu.

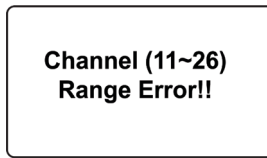

## 7.2.5. Exit

To exit Wireless and return to the main Programming Menu, scroll until "Exit" is shown:

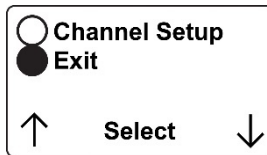


With "Exit" selected, press [MODE]. The EchoView now returns to the Programming Menu screen.

## 8. Viewing Data From Connected Monitors

You can view the data from each monitor on the network, even if the monitor is not in alarm.

To view the selected monitor's data, select the monitor you want to view. Scroll up or down the list by using the [Y/+] and [N/-] keys.

To make your selection, press [MODE]. The screen changes to show the data. For example:

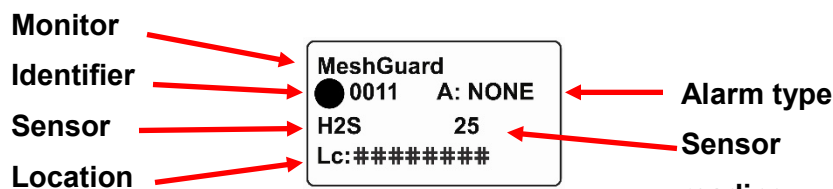

This provides you with an overview, including


- The monitor's location (if it has been programmed into the FMC2000 controller)
- The type of monitor
- The type of sensor
- The alarm state (NONE is shown when a monitor is not in alarm)
- The level or concentration of the substance being monitored (the unit depends on the type of sensor)

To exit from this screen back to the main reading screen, press [MODE].

# EchoView User's Guide

## 8.1. Viewing Alarm Data

Whenever the FMC2000 controller in a network receives alarm data from a monitor on the network, the EchoView also receives it. When monitoring the network and when no alarms are present, the EchoView's display looks like this:

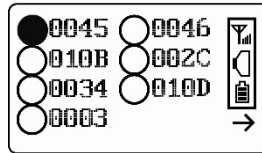

All monitors are represented with a unique identifier and a circle. (A filled—dark—circle indicates the selected monitor for viewing, whereas an unfilled circle indicates the monitor's presence on the network and no alarm.)

To select a monitor: Press [Y/+] to scroll up or [N/-] to scroll down.


**Note:** The scrolling “wraps,” so once you reach the top or bottom item, it starts scrolling through the items again. If there are more monitors than the display can show on one screen, it advances to the next screen. When the last monitor on that screen is reached, it “wraps” back to the first item on the initial screen.

To make a selection: Scroll until the circle to the left of your choice is black, and then press [MODE].

**Note:** If you do not make a selection in 60 seconds, it automatically exits to the main reading screen.

## 8.2. One Monitor In Alarm

Whenever a monitor on the network goes into alarm the EchoView also receives it and displays it. When monitoring the network and when no alarms are present, the EchoView's display looks like this:

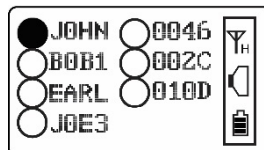

All monitors are represented with a unique identifier and a circle. (A filled—dark—circle indicates the monitor has been selected for viewing.)

**To select a monitor:** Press [Y/+] to scroll up or [N/-] to scroll down.

**Note:** The scrolling “wraps,” so once you reach the top or bottom item, it starts scrolling through the items again. If there are more monitors than the display can show on one screen, it advances to the next screen. When the last monitor on that screen is reached, it “wraps” back to the first item on the initial screen.


**To make a selection:** Scroll until the circle to the left of your choice is black, and then press [MODE].

**Note:** Only one monitor can be selected for viewing at a time.

# EchoView User's Guide

## 8.3. Multiple Monitors In Alarm

If any other monitors on the network go into alarm while one is already in alarm, the circle accompanying second monitor in alarm also changes to a star. However, if the monitor is not the one currently selected, the star is unfilled:

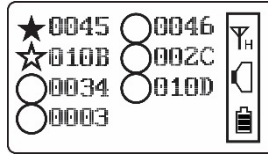


To view a monitor's data:

Scroll up or down through the list of monitors by pressing the [Y/+] or [N/-] key. As the selection advances down the list, each subsequent circle or star is filled (black).

**Note:** Only one monitor can be selected for viewing at a time.

When the icon of the monitor you want to view is highlighted, then you can make your selection.

Press [MODE]. The screen changes to show the data. For example:

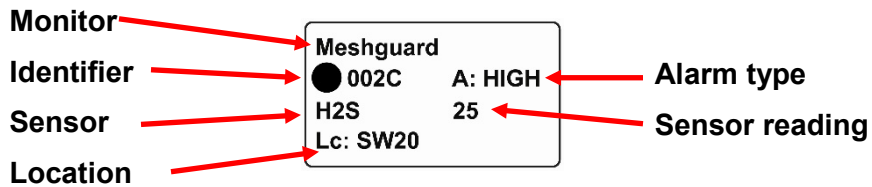

This provides you with an overview of the alarm state, including

- The monitor's location (if it has been programmed into the FMC2000 controller)
- The type of monitor
- The type of sensor
- The type of alarm state (HIGH alarm, LOW alarm, STEL, alarm, etc.)
- The level or concentration of the substance being monitored (the unit depends on the type of sensor)

To exit from this screen back to the main reading screen, press [MODE].


# EchoView User's Guide

## 8.4. Peak Value Reading For Online Or Offline Monitors


The peak value reading from monitors on the network can be viewed anytime. Scroll down to the instrument and select it. If the monitor is currently offline, its last received peak reading is shown. This value is retained until communication with the monitor is restored.

To view a monitor's peak reading:


1. Press [Y/+] or [N/-] to scroll through the list of monitors. Then press [MODE] to select the highlighted monitor.

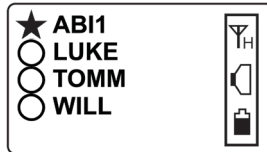


The monitor's type and status are shown (A = Alarm, R = Real-time Reading):

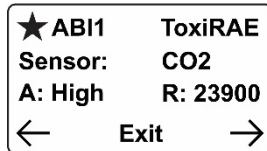

2. Press [N/-] to advance through the sensor's information (L = Low Alarm, H = High Alarm):

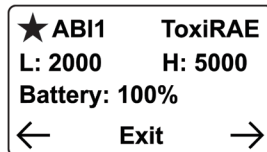

3. Hold the [Y/+] key for 3 seconds, and the peak value is shown (P = Peak, A = Alarm Status):

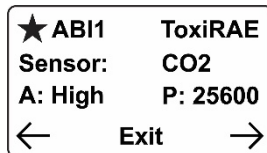


To continue with readings, press [Y/+] or [N/-]. To exit, press [MODE].

### 8.4.1. Clearing Offline Monitors

At the main screen, press the [Y/+] key for 3 seconds. This clears all offline monitors.

# EchoView User's Guide

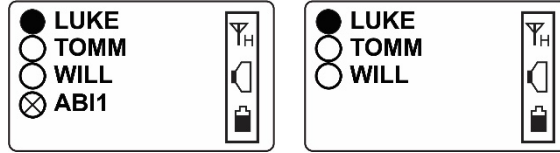

As soon as an offline monitor comes back online, or as readings come from an online monitor, the EchoView shows them.

## 8.5. Panic Alarm


The EchoView has a “Panic” function, where you can manually trigger the relays at the main FMC2000 controller in the network. This must be configured in the EchoView in advance. This function allows you to trigger any individual relay or all relays simultaneously.

## 8.6. Enabling/Disabling The “Panic Button” Function


**Note:** By default, the “Panic Button” feature is disabled.

1. Start the EchoView in Diagnostic mode by pressing and holding the [Y/+] and [MODE] keys simultaneously.
2. Once startup is completed and the main screen is shown, enter Programming mode by pressing and holding [MODE] and [N/-] simultaneously.
3. Provide the 4-digit password and press [Y/+] to enter it.  
**Note:** The default password is “0000.”

This screen appears:

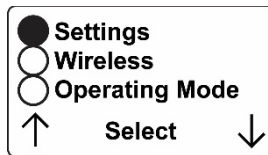


4. Press [N/-] until “Operating Mode” is highlighted.
5. Press [MODE] to select “Operating Mode.”  
“Panic Enable” or Panic Disable is highlighted.

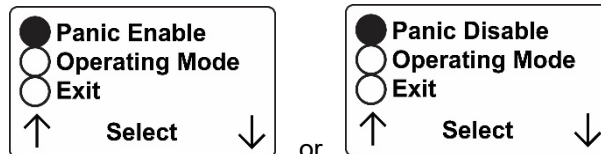


or

# EchoView User's Guide


6. Press [MODE] to make your selection. You are asked to confirm your selection.

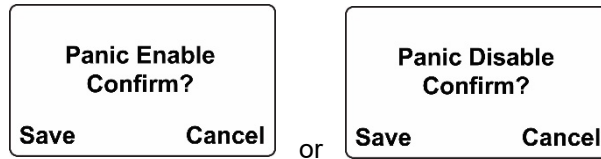

7. Press [Y/+] to save it or [N/-] to cancel any change. The change is registered, and you see the "success" screen:

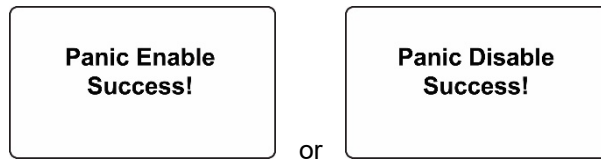

After a few seconds, it returns to the menu screen with "Operating Mode" selected. Press [N/-] to advance to the screen with "Exit" highlighted.

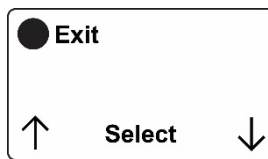


Press [MODE] to exit to the main operating screen.


## 8.7. Using The "Panic" Function

The "Panic" function is designed so that it is very difficult to invoke by accident.

Start at the normal operating mode screen:

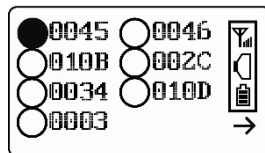


1. From the normal operating mode screen, press and hold all three buttons until you see this screen:

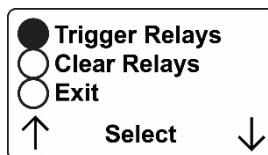

2. Now press "Trigger Relays." This screen is now shown:

# EchoView User's Guide

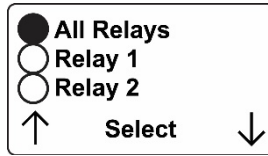

## 8.7.1. Trigger All Relays

With “All Relays” highlighted, press [MODE] to trigger all relays simultaneously.

## 8.7.2. Trigger A Selected Relay


Scroll down the list of relays (1 through 5) by pressing [N/-]. Once you have highlighted the individual relay you want to trigger, press [MODE]. This triggers only that one selected relay.

**Note:** The relay on the FMC2000 controller remains triggered until it is cleared, either at the FMC2000 or at the EchoView.

## 8.7.3. Clear Relays

Clear relays clears all of the relays on the controller, even if only one relay was triggered.

Select “Clear Relays” and then press [MODE] to clear the relays.

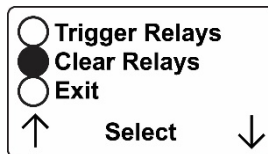

After clearing the relays, you can exit by using [N/-] to scroll down to “Exit.” Then press [MODE].

The main screen is shown.

# EchoView User's Guide

## 8.7.4. Alarm Abbreviations

Because some alarm type names are too long to display completely on the EchoView, abbreviations are used. In some cases, the message is not shortened. This chart explains the messages:


Alarm Type	Displayed On EchoView
Super Alarm	Super (or Super Alarm)
LEL Off/Over	Over
VOC Lamp	Lamp
Sensor Fail	Fail
Max	Max
Over Range	Over
High	High
Low	Low
Neg	Neg
STEL	STEL
TWA	TWA
Dose	Dose
Cal Fail	Cal
Bump Fail	Bump
Unit Fail	UFail (or Unit Fail)
Battery Low	Bat (or Battery Low)
None	None

## 8.7.5. Alarm Signal Summary

Alarm Mode	Buzzer & LED
EchoView low battery	1 beep per minute
Monitor fault (such as low battery, sensor error, etc.)	1 beep per second
Monitor low alarm	2 beeps per second
Monitor high alarm	3 beeps per second

## 8.8. Offline Monitor(s)

If any other monitors on the network go offline, the circle accompanying the monitor's name changes to a circle with an "X" through it. In addition, offline monitors are moved to the last position in the list. If the monitor comes back online, then the "X" disappears.

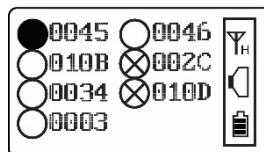


## 8.9. Backlight

Whenever you press any key while viewing the data, the backlight turns on for 15 seconds and then automatically shuts off.


# EchoView User's Guide

## 9. Internal Battery Replacement

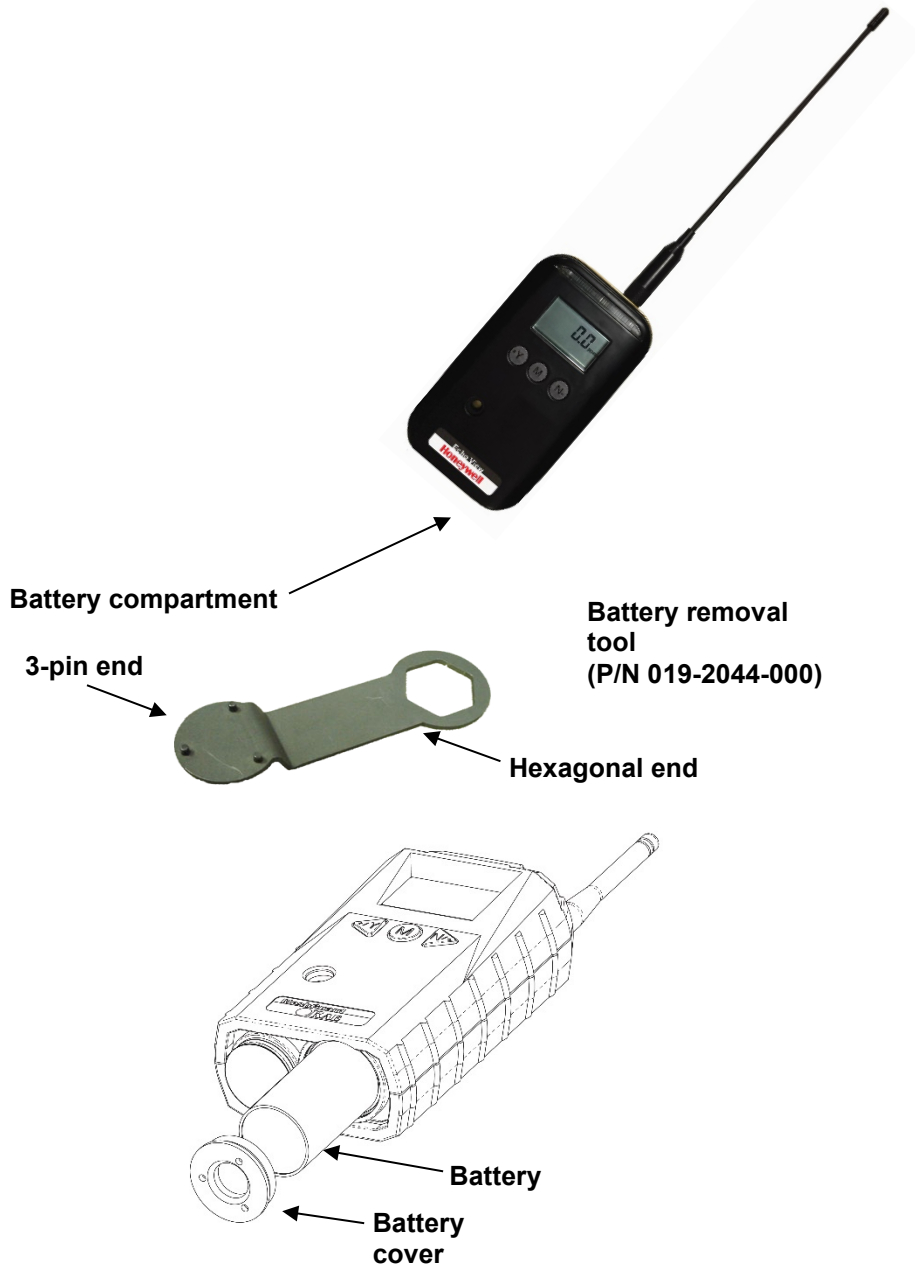

# EchoView User's Guide

1. Use the 3-pin end of the tool to unscrew and open the battery cover (located on the bottom of the instrument) by turning it counterclockwise.
2. Remove the battery and dispose of it properly. Do not place it in general waste.
3. Insert the new battery with its positive (“+”) pole towards the inside of the instrument.
4. Replace the battery cover by turning it clockwise with the 3-pin end of the tool.

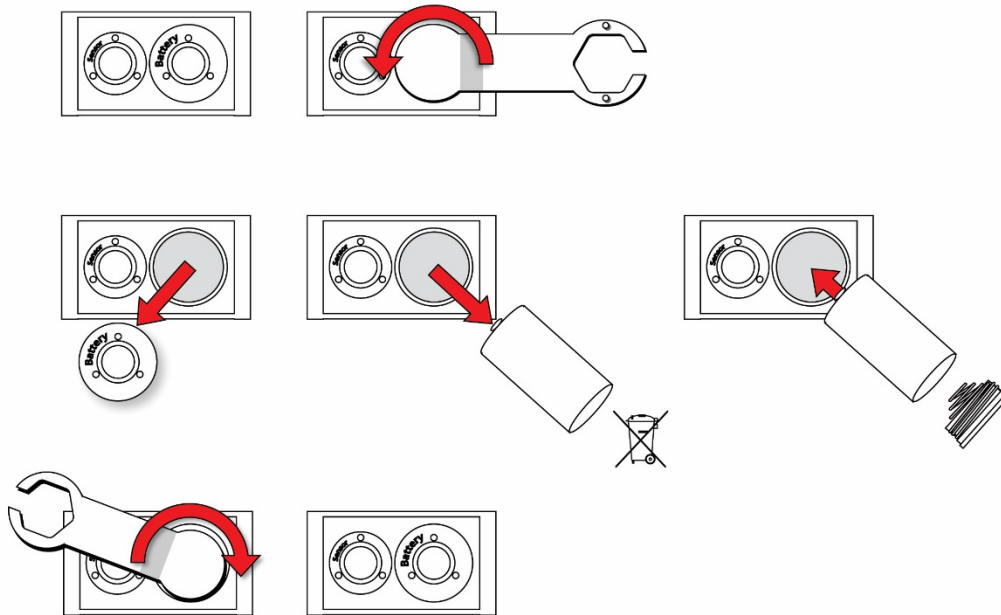

**Note:** After changing the battery, wait at least 60 seconds before turning the EchoView on.

## **WARNING!**

Only change the internal battery in non-hazardous locations and use the battery Honeywell RAE Systems provides (P/N: 500-0111-000, EVE ER34615 or XENO XL-205F).

# EchoView User's Guide

## 10. Troubleshooting

Failure Symptom	Cause	Solution
Cannot turn on	Battery charge too low  Battery has been changed	Replace battery  Wait at least 60 seconds to turn on EchoView  Check RAE Systems' web site for information on batteries
EchoView Host cannot receive a monitor's signal	Too much distance between the EchoViews on the network  There is an obstruction between EchoViews.  Battery is low  EchoViews have different PAN ID and/or Channel numbers	The distance should be around 300m/1.000 ft, line of sight. Relocate EchoViews or deploy MeshRouters to extend the range  Relocate the EchoView or deploy one or more MeshRouters to extend the range  Replace battery  Set all units to the same PAN ID and Channel number. Perform "Join Network" on the monitors.
Others		Turn EchoView off and on again.  Consult RAE Systems Customer Service.

# EchoView User's Guide

## 11. Year Of Manufacture

To identify the year of manufacture, refer to the serial number of the instrument.

The letter in the serial number indicates the year of manufacture. For example, "M" indicates the manufacturing year is 2010.


Letter	Year
V	2018
W	2019
A	2020
B	2021
C	2022
D	2023
E	2024
F	2025
G	2026
H	2027
I	2028
J	2029
K	2030

# EchoView User's Guide

## 12. Appendix A: External Battery Replacement

**Warning:** Only remove the external battery adapter in non-hazardous locations.



**Note:** For clarity, EchoView's optional stainless-steel enclosure is not shown.

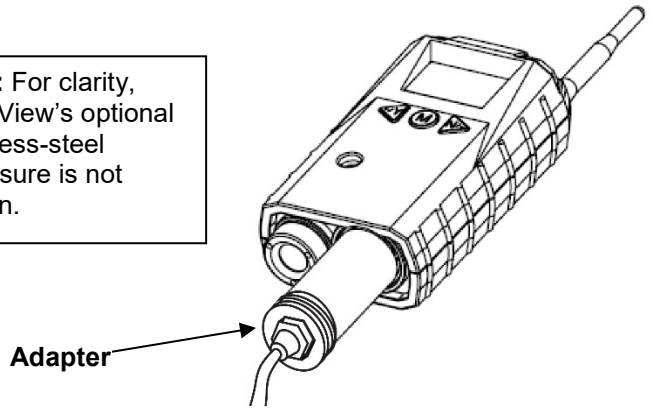



# EchoView User's Guide

## 12.1. External Battery Usage

An external battery unit, the RAE Systems RAE PowerPak, is used to power an EchoView in fixed installations or in situations where extended battery life is necessary. The connector from the external battery screws into the EchoView's battery compartment. Bottom views of the EchoView in its steel enclosure are shown in the procedure below.

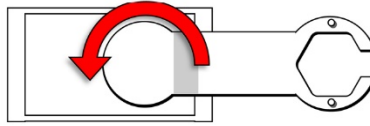
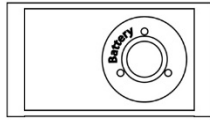


1. Remove battery cover with the 3-pin end of the sensor and battery removal tool by turning counterclockwise.

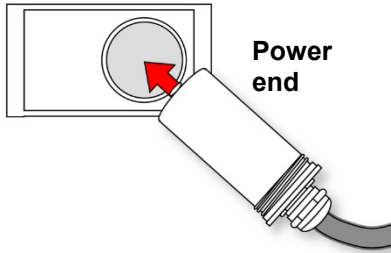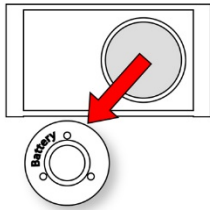

2. Lift off the cover.

3. Insert the power end of the cable connected to the Power Pak.

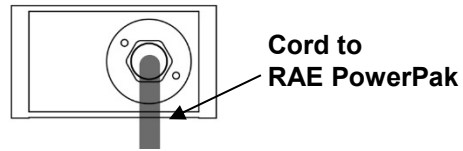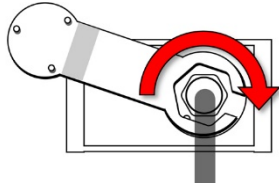


4. Use the open hex end of the wrench, and with both pins mated with the two holes on the power end, tighten by turning clockwise until it is snug. Do not overtighten.

Consult the RAE PowerPak User's Guide for further connection and charging information.


# EchoView User's Guide

The EchoView is permanently mounted to a solid surface by first securing it in its steel enclosure (a screw through the back mates with the EchoView) and then securing the enclosure to a solid surface such as a wall or the metal mounting plate that holds both the EchoView and the RAE PowerPak.

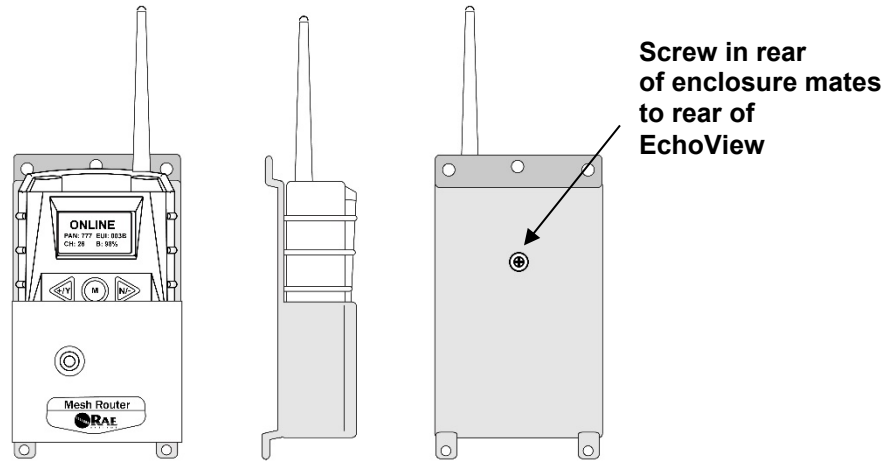


Front, side, and rear views of the steel enclosure show how the EchoView is secured for mounting.

With the EchoView securely in its housing, you can remove the cover over the battery compartment so that you can place the connector from the RAE PowerPak into the EchoView. Use the maintenance tool as shown.

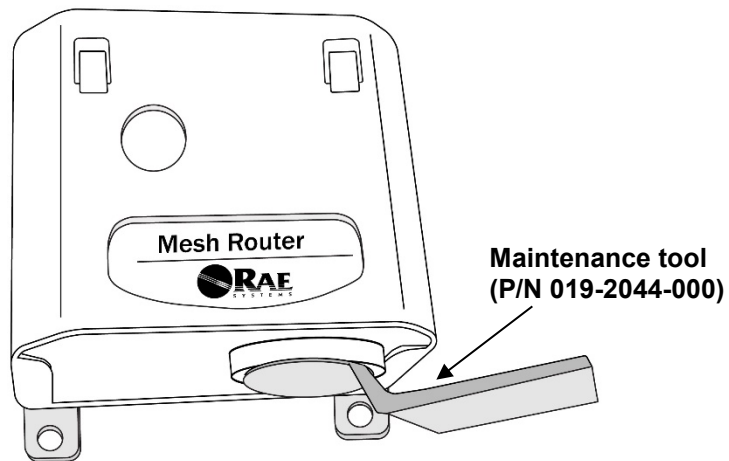

# EchoView User's Guide

## 12.2. External Battery Replacement Process

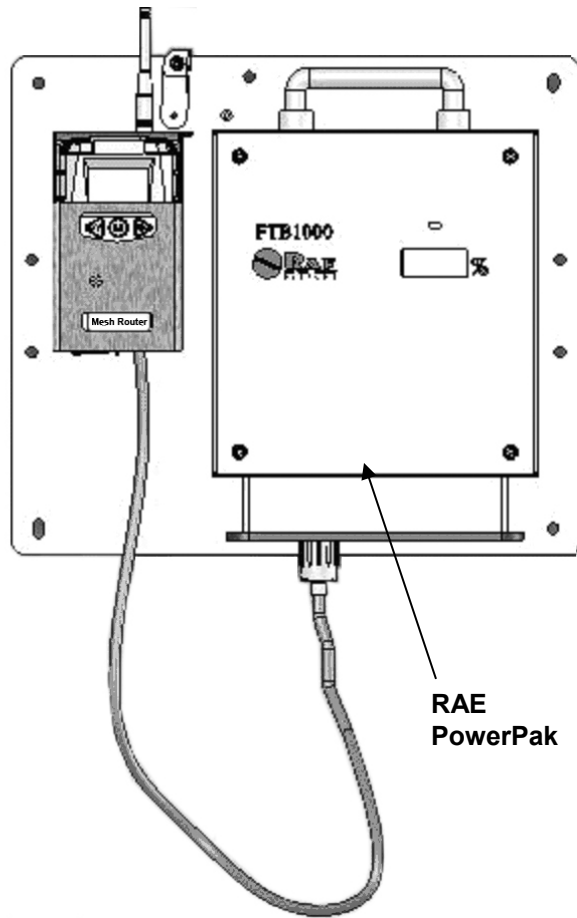

### External battery replacement


1. Unplug the battery connector.
2. Loosen the safety screw holding the battery.
3. Mount a new battery on the mounting bracket.
4. Tighten the safety screw.
5. Connect the EchoView to the battery.
6. Switch on the EchoView.

# EchoView User's Guide

## 13. Appendix B: Installation

Two methods for mounting EchoView make it easy to install. The first method uses a magnet that screws onto the rear of the EchoView, making ideal for moving from one location to another. The second method, for plastic-housing models, uses a specially designed stainless-steel enclosure that is permanently mounted. It protects the plastic-body EchoView from damage in industrial settings.

### 13.1. Magnet-Mount Installation

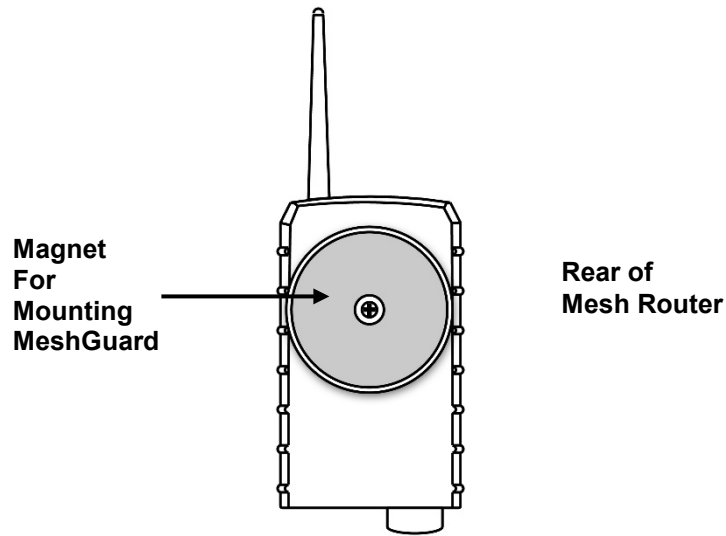


This magnet is powerful enough to support the EchoView when it is placed against a flat steel or iron surface.

**Important!** Keep the magnet away from computer hard drives. The strong magnet can corrupt or erase data on these.


# EchoView User's Guide

## 13.2. Fixed Installation

Four reinforced holes in the rear of the enclosure allow for a screw to pass through to the mounting brackets.

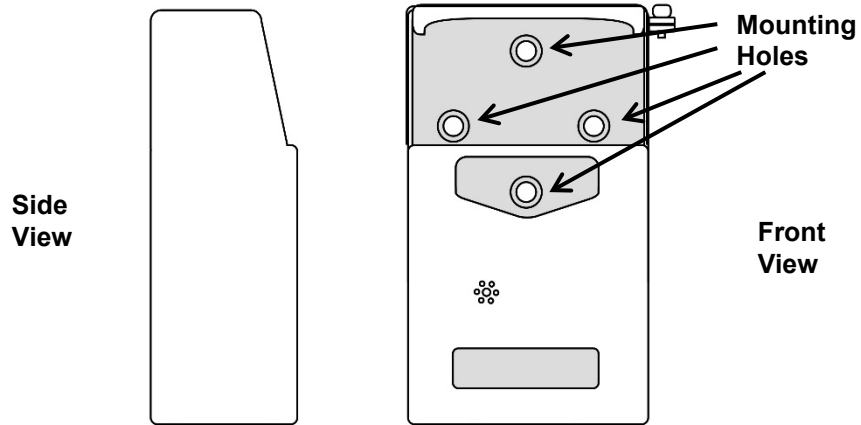


The enclosure can be mounted to a vertical or horizontal pole.

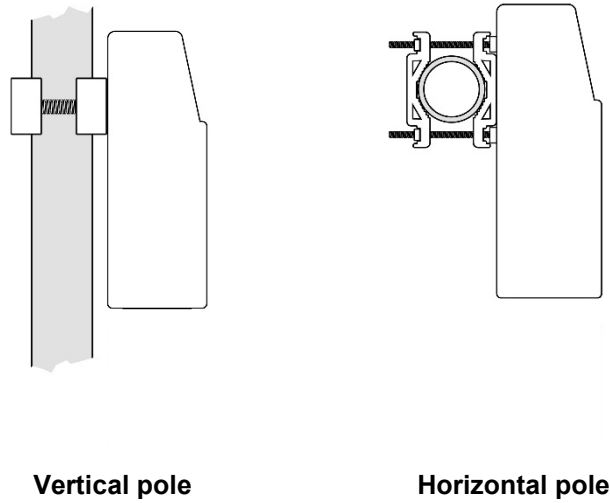


# EchoView User's Guide

Slip the screws through the two holes that are side by side in order to mount the enclosure to a vertical pole. Otherwise slip the screws through the two vertically aligned holes to attach the enclosure to a horizontal pole.


Loosely assemble the clamp parts around the pole. Note that the screws have nuts that fit into the clamp parts. The clamp parts are designed to hold the nut so that you do not need to use a wrench. Hand-tighten the parts until snug.

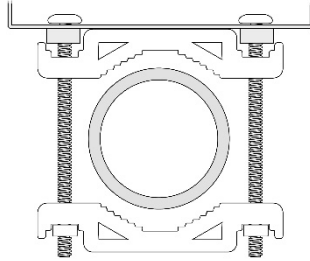

Tighten the hex screws from the front of the enclosure:

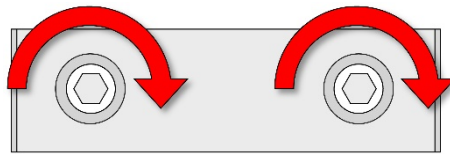

Once the clamp parts and the enclosure are securely held against the pole, stop tightening.

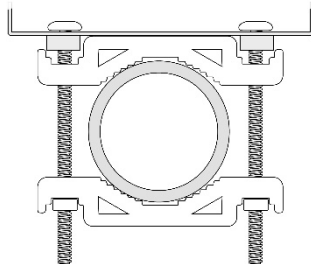


**Note:** The pole must be between 25mm (1") and 63mm (2.5") in diameter.

# EchoView User's Guide

Next, place the EchoView into the enclosure:

1. Lift up the hinged cover of the enclosure.
2. Slide the EchoView into the enclosure from the top.
3. Close the cover of the enclosure.
4. Insert the hex screw into the cover's locking portion, and tighten it.
5. The EchoView is now ready to use.

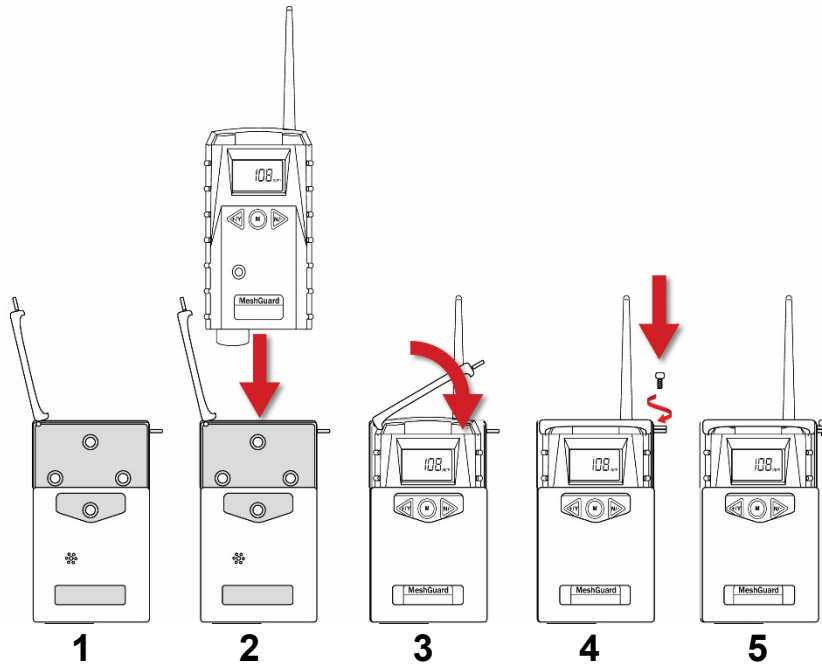


**Note:** The sensor cover on the bottom of the enclosure can be removed so that the filter and sensor can be inspected without removing the EchoView from the enclosure. Simply pull off the cover and follow the maintenance procedures in this guide.

# EchoView User's Guide

## 13.3. Magnetic Mount Alternative Installation

The magnet-mount disc can be attached to the steel enclosure instead of the clamps. This approach provides the protection of the enclosure with the ease of installation afforded by the magnetic mounting.

1. Insert screw through magnetic disc.
2. Place the magnetic disc over the bottom hole on the rear of the enclosure.
3. Tighten the screw until the disc is snug.

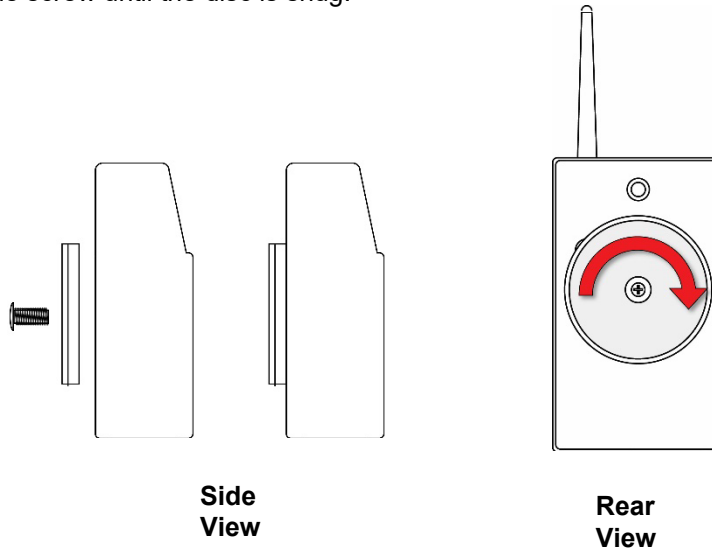

# Honeywell

THE POWER OF **CONNECTED**

**For more information**  
[www.raesystems.com](http://www.raesystems.com)



**D**ETECTION | **S**AFETY | **P**ROTECTION

For Pricing or Further  
Information Please Contact Us.



**+441158390495**



**[www.manonglobal.com](http://www.manonglobal.com)**



**[sales@manonglobal.com](mailto:sales@manonglobal.com)**

---

**Leading UK Suppliers In  
Gas Detection, Safety & Protection  
Products  
Brand New & Genuine OEM Parts  
UK & Worldwide Deliveries Available**



Worldwide Delivery



1000+ Genuine Parts & Equipment