









Operating Manual

- [Table of Contents](#)
- [Introduction](#)
- [Installation](#)
- [Startup](#)
- [Operation](#)
- [Maintenance](#)
- [Troubleshooting](#)
- [Installation Drawings](#)
- [Specifications](#)
- [Detectable Gases](#)
- [Replacement/Consumable](#)
- [Optional Relay Specs](#)
- [Network Interfaces](#)
- [LIT Option](#)
- [Warranty Statement](#)

Vertex™ 72-Point Continuous Monitor

Vertex Continuous Monitor Symbols

| Symbol | Description |
|---|--|
| | Power on |
| ○ | Power off |
| NOTICE | Potential damage to the device or other property, maintenance procedures, and “refer to manual” instructions. |
|  CAUTION | Lifting instructions, low clearances, slipping/tripping hazards, minor corrosive dangers. Also used when defining personal protective equipment (gloves, dust masks, etc.) |
|  WARNING | Personal injury risk: machinery hazards around guarded equipment, moving parts, crush/pinch hazards, flying debris, and arc flash hazards. |
|  DANGER | The most dangerous or potentially lethal hazards: unguarded equipment, confined space entrances, and lockout labels. |
|  | Caution: possibility of electric shock |
|  | Caution: hot surface |
|  | Protective conductor terminal (ground terminal) |

Vertex™ 72-Point Continuous Monitor

EMC Considerations

Your Honeywell Analytics continuous gas monitor has been designed to comply with applicable Electromagnetic Compatibility (EMC) standards at the time of manufacture. The design includes filtering, shielding and bypassing techniques. At the time of certification, simulated customer Input/Output (I/O) schemes were tested.

All methods used in your equipment for emission suppression and reduction of susceptibility are interactive. Modifications to the monitor could result in increased emissions and higher vulnerability to other radiated fields.

Following the guidelines in this EMC Considerations section will ensure your monitor maintains the highest degree of EMC integrity. The guidelines listed apply only to I/O emissions and do not apply to A.C. and D.C. monitor power connections.

FCC Compliance Statement



CAUTION: Changes or modifications not expressly approved could void your authority to use this equipment.

This device complies with Part 15 of the FCC Rules. Operation to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Industry Canada Statement

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Vertex™ 72-Point Continuous Monitor

Cabling

At a very minimum, all cables should include a braided shield. Ideal results have been obtained with twisted pair cabling which has a foil shield surrounding each pair plus foil and 90% braid shielding around the bundle. In addition, ensure local electrical code requirements are met.

The following cable parameters must be considered:

| | |
|---------------------------|---|
| Braid | Must have a minimum 90% coverage |
| Foil | When used with braid, provides 100% coverage Do not use foil alone. It has a tendency to break. |
| Twisted Pair | Provides for cancelling of magnetic fields |
| Stranded Pair | Provides the greatest surface area |
| Shield Termination | Continuation of the shield to the cabinet earth ground is most important. For discrete wire terminations, pigtailed to the cabinet (connector) ground should be extremely short (absolutely no greater than three inches). For multiconductor connector terminations, only 360° shielded shells should be used. |

Note:

Honeywell Analytics product testing uses >90% braid with foil (around the bundle); twisted pair; stranded 24 AWG (minimum wiring for all qualification and certification testing.)

Connectors

All qualification and certification of Honeywell Analytics products were achieved with high quality connectors, providing 360° shield coverage. These connectors generally had metal shells.

Failure to properly secure the connector to the equipment will result in high emission levels. Also, poorly constructed or improperly assembled connectors can be a high source of radiated noise and provide a path for external signals into the monitor.

Table of Contents

| | |
|--|-------------|
| <u>Vertex Continuous Monitor Symbols.....</u> | <u>i</u> |
| <u>EMC Considerations.....</u> | <u>ii</u> |
| <u>Cabling</u> | <u>ii</u> |
| <u>Connectors</u> | <u>iii</u> |
| 1 Introduction | |
| 1.1 System Overview | 1-2 |
| 1.1.1 Manufacturer | 1-2 |
| 1.1.2 General Safety..... | 1-2 |
| 1.2 System Components | 1-2 |
| 1.2.1 Vertex Front..... | 1-3 |
| 1.2.2 Vertex Back | 1-4 |
| 1.2.3 Exhaust and Wiring Ports | 1-5 |
| 1.2.4 Module Front - Door Closed..... | 1-6 |
| 1.2.5 Analyzer Side Panel (exterior) | 1-7 |
| 1.2.6 Analyzer Side Panel (interior)..... | 1-8 |
| 1.2.7 Sample Tubing Connections (detail)..... | 1-9 |
| 1.2.8 System Controls (behind screen)..... | 1-10 |
| 1.2.9 Analyzer Front..... | 1-12 |
| 1.2.10 Data Acquisition Computer (rear) | 1-13 |
| 1.2.11 ChemCam USB Hub..... | 1-15 |
| 1.2.12 Back of Chemcassette® Module | 1-16 |
| 1.2.13 Main PLC..... | 1-17 |
| 1.2.14 Relay Option PLC..... | 1-18 |
| 1.3 Menu Map | 1-19 |
| 1.4 Analyzer Modules | 1-20 |
| 1.5 Sampling System..... | 1-21 |
| 1.6 Chemcassette® Detection System..... | 1-22 |
| 1.6.1 Detector Optics | 1-22 |

Vertex™ 72-Point Continuous Monitor

| | |
|---|------|
| 1.6.2 Stain Pattern..... | 1-23 |
| 1.6.3 Chemcassette® Tapes..... | 1-25 |
| 1.6.4 Optional ChemCam..... | 1-25 |
| 1.6.6 Cooling Fans and Filters..... | 1-25 |
| 1.7 Pyrolyzer Module Detection System..... | 1-26 |
| 1.7.1 Pyrolyzer Fan..... | 1-26 |
| 1.8 Vacuum Pumps..... | 1-27 |
| 1.9 Multiple Gas Monitoring..... | 1-28 |
| 1.10 Control System..... | 1-29 |
| 1.10.1 Data Acquisition Computer..... | 1-29 |
| 1.10.2 Programmable Logic Controller..... | 1-29 |
| 2 Installation | |
| 2.1 Introduction..... | 2-2 |
| 2.2 Surveying the Installation Site..... | 2-3 |
| 2.2.1 Placement of the Vertex System..... | 2-3 |
| 2.2.2 Exposure to Dust and Humidity..... | 2-3 |
| 2.2.3 Sample Transport Time..... | 2-3 |
| 2.2.4 Monitor Dimensions..... | 2-3 |
| 2.2.5 Sample Locations..... | 2-4 |
| 2.2.6 Sample Line Particulate Filter Use..... | 2-4 |
| 2.3 Optional Floor Mounting..... | 2-4 |
| 2.4 Installing Sample Lines/ Filters..... | 2-4 |
| 2.4.1 Sample Line Installation Requirements..... | 2-5 |
| 2.4.2 Sample Line Connections..... | 2-6 |
| 2.4.3 Installing Sample Line Particulate Filters..... | 2-6 |
| 2.5 Installing Pump Exhaust Line..... | 2-7 |
| 2.5.1 Exhaust Line Installation Requirements..... | 2-7 |
| 2.5.2 Exhaust Line Connection..... | 2-7 |
| 2.6 Electrical Power..... | 2-8 |
| 2.6.1 Connecting AC Power..... | 2-8 |
| 2.6.2 Verifying Proper AC Power Connection..... | 2-9 |

Vertex™ 72-Point Continuous Monitor

| | |
|--|------|
| 2.6.3 Vertex Transformer Installation..... | 2-11 |
| 2.6.4 Power On/Off | 2-16 |
| 2.7 Data Acquisition System..... | 2-17 |
| 2.7.1 Optional Keyboard..... | 2-17 |
| 2.7.2 Printer | 2-19 |
| 2.7.3 External Network Connection..... | 2-20 |
| 2.7.4 Network Computer Security..... | 2-20 |
| 2.8 Wiring Alarm Relays..... | 2-21 |
| 2.8.1 Relay Contacts..... | 2-21 |
| 2.8.2 Wiring Guidelines | 2-21 |
| Validating the System | 2-22 |
| 3 Startup | |
| 3.1 Startup | 3-2 |
| 3.1.1 Initial Startup..... | 3-2 |
| 3.1.2 Factory Configuration | 3-2 |
| 3.2 Getting Started..... | 3-3 |
| 3.3 Verify Installation..... | 3-3 |
| 3.4 Startup Sequence | 3-4 |
| 3.5 Power Up | 3-5 |
| 3.6 Start Program..... | 3-7 |
| 3.7 Configuration Utility | 3-9 |
| 3.7.1 Define Gas Location | 3-21 |
| 3.7.2 Configure Analyzers and Points..... | 3-23 |
| 3.7.3 Set Analyzer Window..... | 3-24 |
| 3.7.4 Configure Point | 3-25 |
| 3.7.5 Define and Assign Relays..... | 3-34 |
| 3.7.6 Configure PLC..... | 3-35 |
| 3.7.7 Set Alarm Relays..... | 3-37 |
| 3.7.8 Set Fault Relays | 3-39 |
| 3.7.9 Profile Management-File Menu..... | 3-41 |
| 3.7.10 Other Menu..... | 3-42 |

Vertex™ 72-Point Continuous Monitor

| | |
|---|------|
| 3.7.11 Profile Management Utility..... | 3-43 |
| 3.8 Load Tape..... | 3-44 |
| 3.9 Verify Flow Rates and Supply Vacuum | 3-45 |
| 3.9.1 Set Supply Vacuum (Series 2) | 3-45 |
| 3.9.2 Verify Flow Rates..... | 3-45 |
| 3.10 Leak Checking Sample Lines | 3-49 |
| 3.11 Reconfigure..... | 3-49 |
| 3.12 Moving to a New Site..... | 3-50 |
| 3.13 System Shut Down | 3-51 |
| 4 Operation | |
| 4.1 Introduction..... | 4-2 |
| 4.2 Monitoring Mode Overview | 4-2 |
| 4.3 Main Screen..... | 4-3 |
| 4.3.1 System Display Area | 4-4 |
| 4.3.2 Point Detail Display Area | 4-8 |
| 4.3.3 Function Buttons | 4-10 |
| 4.4 Project Functions | 4-11 |
| 4.4.1 Log In and Log Out | 4-12 |
| 4.4.2 Changing Password | 4-13 |
| 4.4.3 Updating Program | 4-14 |
| 4.4.4 Restore OnScreen Keyboard | 4-14 |
| 4.4.5 Stopping Project | 4-14 |
| 4.5 Review Functions | 4-15 |
| 4.5.1 Event History..... | 4-15 |
| 4.5.2 Data Trend | 4-23 |
| 4.5.3 Optional ChemCam..... | 4-24 |
| 4.5.4 Event List..... | 4-26 |
| 4.6 Menu Buttons..... | 4-28 |
| 4.6.1 Run Time Options..... | 4-28 |
| 4.6.2 Flow Calibration | 4-34 |
| 4.6.3 Maintenance | 4-41 |

Vertex™ 72-Point Continuous Monitor

| | |
|--|-------------|
| 4.6.4 Diagnostics..... | 4-44 |
| 4.6.5 Service | 4-47 |
| 4.6.6 Security Access | 4-51 |
| 4.6.7 Configuration | 4-53 |
| 4.7 OnScreen Keyboard | 4-54 |
| 4.7.1 Restore OnScreen Keyboard | 4-54 |
| 5 Maintenance | |
| 5.1 Introduction..... | 5-2 |
| 5.2 Maintenance Schedules | 5-3 |
| 5.3 Chemcassette® Analyzer Maintenance | 5-4 |
| 5.3.1 Air Filter (Series 1 Analyzers only)..... | 5-4 |
| 5.3.2 Remove and Replace Chemcassette® Analyzer Particulate Filters..... | 5-5 |
| 5.3.3 Remove Filters | 5-6 |
| 5.3.4 Replace Filters | 5-7 |
| 5.3.5 Change Chemcassette® Tape | 5-8 |
| 5.4 Replacing an Analyzer | 5-9 |
| 5.4.1 Disconnecting Cables | 5-9 |
| 5.4.2 Remove Analyzer | 5-11 |
| 5.4.3 Install Analyzers..... | 5-11 |
| 5.5 Remove and Replace Pyrolyzer Filters..... | 5-12 |
| 5.5.1 Remove Filters | 5-12 |
| 5.5.2 Replace Filters | 5-13 |
| 5.6 Remove and Install Pumps | 5-14 |
| 5.6.1 Remove Pump | 5-15 |
| 5.6.2 Install New Pump | 5-16 |
| 5.7 Remove and Install Power Supplies | 5-17 |
| 5.7.1 Remove Supply | 5-17 |
| 5.7.2 Replace Supply | 5-17 |
| 5.8 Clean the Touch Screen..... | 5-18 |
| 5.9 PLC Module Battery Backup Check..... | 5-19 |
| 5.10 File Maintenance..... | 5-20 |

Vertex™ 72-Point Continuous Monitor

| | |
|---|------|
| 5.11 Optics Cleaning | 5-21 |
| 6 Troubleshooting | |
| 6.1 Introduction..... | 6-2 |
| 6.2 General System Problems | 6-3 |
| 6.3 Maintenance Faults | 6-7 |
| 6.4 Instrument Faults..... | 6-16 |
| 6.5 Information Events | 6-26 |
| 6.6 Manual Analyzer Override..... | 6-30 |
| A Installation Drawings | |
| A.1 Introduction | A-2 |
| B Specifications | |
| B.1 Introduction | B-2 |
| B.2 Filter Compatibility..... | B-3 |
| B.3 Vertex General Specifications | B-4 |
| B.4 Nominal Transport Times..... | B-5 |
| C Detectable Gases | |
| C.1 Detectable Gases | C-2 |
| D Replacement and Consumable Items | |
| D.1 Consumables..... | D-3 |
| D.1.1 Chemcassettes®..... | D-3 |
| D.1.2 End of Line Particulate Sample Filters - See Appendix B | D-3 |
| D.1.3 Common to all Analyzers (Series 1 or Series 2, Chemcassette® or Pyrolyzers) | D-3 |
| D.1.4 Common to all Pyrolyzers (Series 1 or Series 2)..... | D-3 |
| D.1.4.1 Series 1 Analyzers (Chemcassette® or Pyrolyzer)..... | D-3 |
| D.1.5 Common to all Rack Systems (Series 1 or Series 2) | D-3 |
| D.1.5.1 Series 2 Rack | D-3 |
| D.2 Printed Circuit Boards | D-4 |
| D.2.1 Common to all Pyrolyzers | D-4 |
| D.2.1.1 Series 1 Pyrolyzers..... | D-4 |
| D.2.1.2 Series 2 Pyrolyzers..... | D-4 |

Vertex™ 72-Point Continuous Monitor

| | |
|--|-------------|
| <u>D.2.2 Series 1 Analyzers (Chemcassette® or Pyrolyzer)</u> | D-4 |
| <u>D.2.3 Series 2 Analyzers (Chemcassette® or Pyrolyzer)</u> | D-4 |
| <u>D.2.4 Series 2 Power Distribution Module</u> | D-4 |
| <u>D.3 Components</u> | D-4 |
| <u>D.3.1 Common to all Analyzers(Series 1 or Series 2, Chemcassette® or Pyrolyzer)</u> | D-4 |
| D.3.1.1 Series 1 Analyzers (Chemcassette® or Pyrolyzer)..... | D-4 |
| D.3.1.2 Series 2 Analyzers (Chemcassette® or Pyrolyzer)..... | D-4 |
| <u>D.3.2 Common to all Pyrolyzers (Series 1 or Series 2)</u> | D-5 |
| D.3.2.1 Series 1 Pyrolyzers..... | D-5 |
| D.3.2.2 Series 2 Pyrolyzers..... | D-5 |
| <u>D.3.3 Common to all Rack Systems (Series 1 or Series 2)</u> | D-5 |
| D.3.3.1 Series 1 Rack Systems | D-5 |
| D.3.3.2 Series 2 Rack Systems | D-6 |
| <u>D.3.4 Common to all Pump Modules (Series 1 or Series 2)</u> | D-6 |
| D.3.4.1 Series 1 Pump Module | D-6 |
| <u>E Optional Relay Specifications</u> | |
| <u>E.1 Relay Output Contacts</u> | E-2 |
| <u>E.2 Relay Contact Ratings</u> | E-3 |
| <u>E.3 Default Relay Assignments</u> | E-4 |
| <u>E.3.1 Introduction</u> | E-4 |
| <u>E.3.2 Main PLC</u> | E-5 |
| <u>E.3.3 Optional Relay PLC</u> | E-6 |
| <u>E.3.4 Terminal Assignment of 1746-OW16 Relay Module</u> | E-7 |
| <u>E.3.5 Terminal Assignment of 1746-OX8 Relay Module</u> | E-14 |
| <u>F Network Interface and Options</u> | |
| <u>F.1 Network Interface and Options</u> | F-2 |
| <u>F.2 OLE for Process Control (OPC) Interface</u> | F-3 |
| <u>F.2.1 Setting Up an OPC Client</u> | F-3 |
| <u>Application</u> | F-3 |
| <u>F.3 Data Values Common to Fieldbus Networks</u> | F-7 |
| <u>F.3.1 Alarms and Faults</u> | F-7 |

Vertex™ 72-Point Continuous Monitor

| | |
|--|-------------|
| <u>F.3.2 Concentrations</u> | <u>F-7</u> |
| <u>F.3.3 Heartbeat</u> | <u>F-8</u> |
| <u>F.4 Data Map.....</u> | <u>F-9</u> |
| <u>F.5 Profibus Option</u> | <u>F-11</u> |
| <u>(P/N 1295-0275)</u> | <u>F-11</u> |
| <u>F.5.1 Termination</u> | <u>F-11</u> |
| <u>F.5.2 Profibus Module Configuration</u> | <u>F-12</u> |
| <u>F.6 DeviceNet Interface</u> | <u>F-13</u> |
| <u>(P/N 1295-0329)</u> | <u>F-13</u> |
| <u>F.7 ControlNet Interface</u> | <u>F-14</u> |
| <u>F.8 DF1 Interface (P/N1295-0343)</u> | <u>F-15</u> |
| <u>F.9 Modbus Plus Interface</u> | <u>F-16</u> |
| <u>(P/N1295-0330)</u> | <u>F-16</u> |
| <u>F.10 LonWorks Interface</u> | <u>F-17</u> |
| <u>(P/N 1295-0329)</u> | <u>F-17</u> |
| <u>F.11 Modbus/TCP (P/N1295-0520)</u> | <u>F-18</u> |
| <u>F.11.1 Configuring the IP Address</u> | <u>F-18</u> |
| <u>F.12 Ethernet/CIP (P/N1295-0519)</u> | <u>F-20</u> |
| <u>F.12.1 Configuring the IP Address</u> | <u>F-22</u> |
| <u>F.13 RSView32 Active Display.....</u> | <u>F-23</u> |
| <u>Set-Up Instructions.....</u> | <u>F-23</u> |
| <u>G Line Integrity Test Option</u> | |
| <u>H Warranty Statement</u> | |
| <u>Chemcassette® Device Warranty Statement</u> | <u>H-2</u> |
| <u>Chemcassette® Warranty</u> | <u>H-3</u> |



Vertex™ 72-Point Continuous Monitor

1 Introduction

Vertex™ 72-Point Continuous Monitor

1.1 System Overview

The Honeywell Analytics Vertex™ System continuously monitors up to 72 remote locations for toxic gases. It responds to gases that exceed programmed levels by:

- Triggering alarms and opening event windows to warn operators of high or low concentrations
- Triggering relays to external devices
- Displaying the location, gas type and gas concentration
- Storing the alarm information in a database

The Vertex System provides fast response to a wide range of gases. Each location may be up to 400 ft (122 m) from the Vertex System. The system uses one or more of Honeywell Analytics' Chemcassette® analyzers, with or without pyrolyzer, to provide a monitoring system tailored to meet the requirements of the facility.

The Vertex System incorporates a range of redundant and protective features for maximum uptime:

- Intelligent analyzer modules allow one to stop monitoring with no effect on the remaining modules
- Power supplies are redundant
- Pumps are redundant
- The system powers up in the same state as when powered down

- Filters, Chemcassettes® and major components in one of the analyzers can be replaced while the remaining analyzers continue to function

Operation can be through an LCD touch screen or through a local area network (LAN).

Chemcassette® is a registered trademark of Honeywell Analytics, Inc.

1.1.1 Manufacturer

The Vertex System is manufactured by:

Honeywell Analytics Inc.

405 Barclay Boulevard

Lincolnshire, IL 60069 USA

www.honeywellanalytics.com

1.1.2 General Safety

Follow all installation and operational instructions to ensure the safe and reliable operation of this unit.


If this monitor is used in a manner not specified by Honeywell Analytics Inc., the protection provided by the equipment may be impaired.

1.2 System Components

The following photos illustrate Vertex System components, ports, connections and controls. From the main front and back photos, click on the labels to see the detail photos.


Vertex™ 72-Point Continuous Monitor

1.2.1 Vertex Front

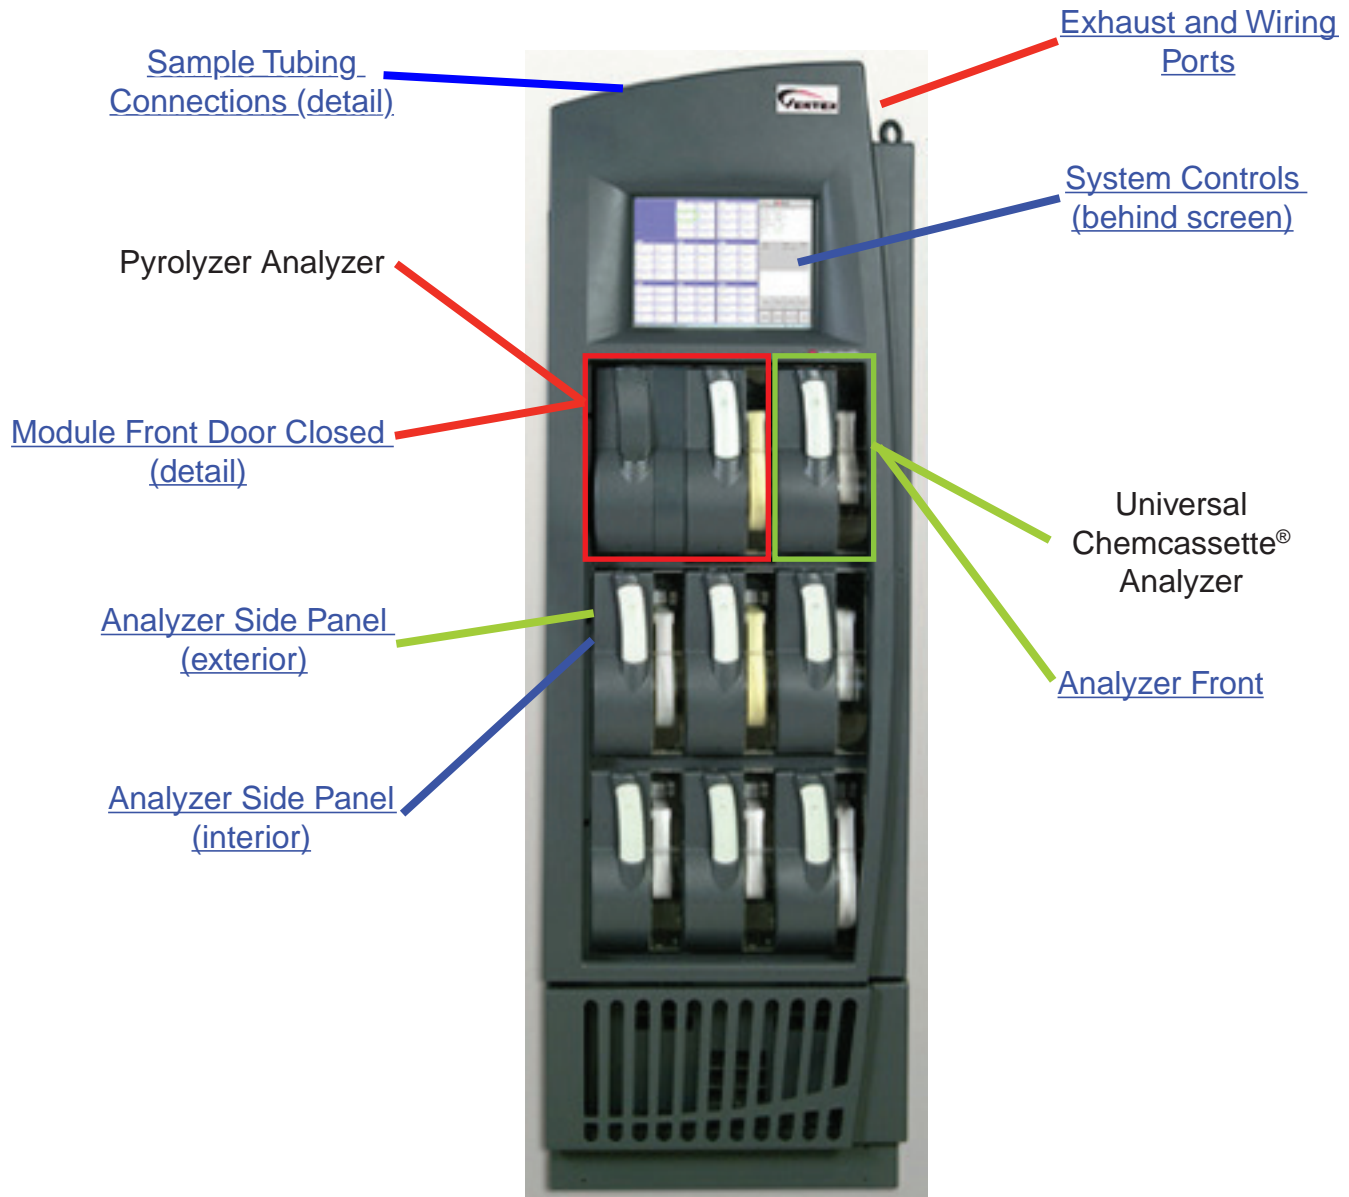


Vertex™ 72-Point Continuous Monitor

1.2.2 Vertex Back

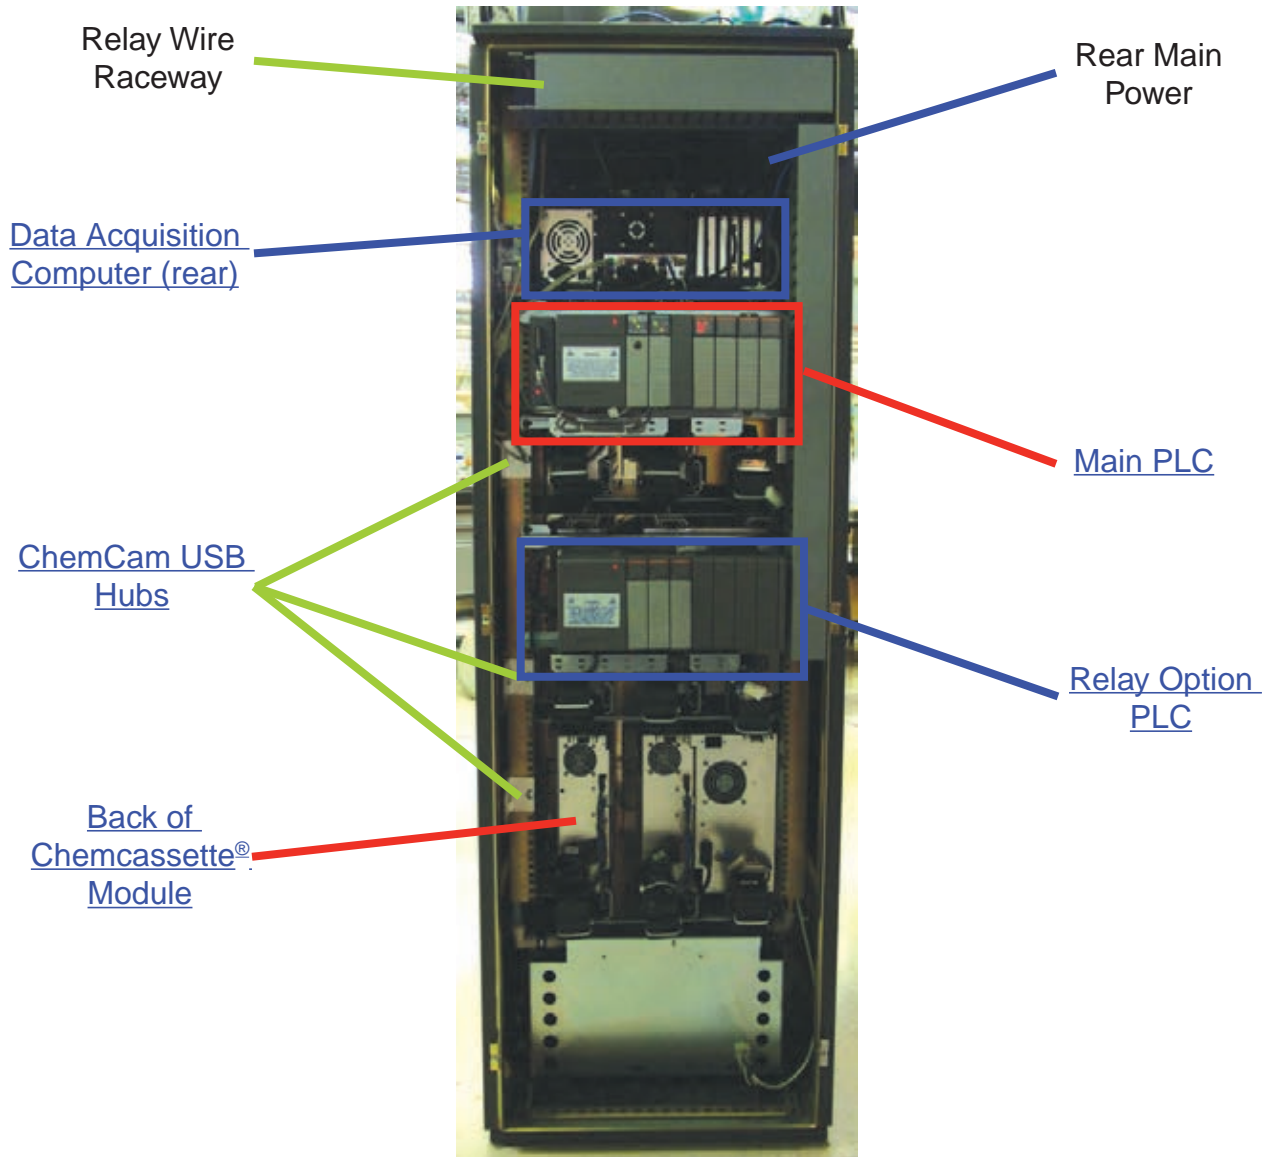


Vertex™ 72-Point Continuous Monitor

1.2.3 Exhaust and Wiring Ports

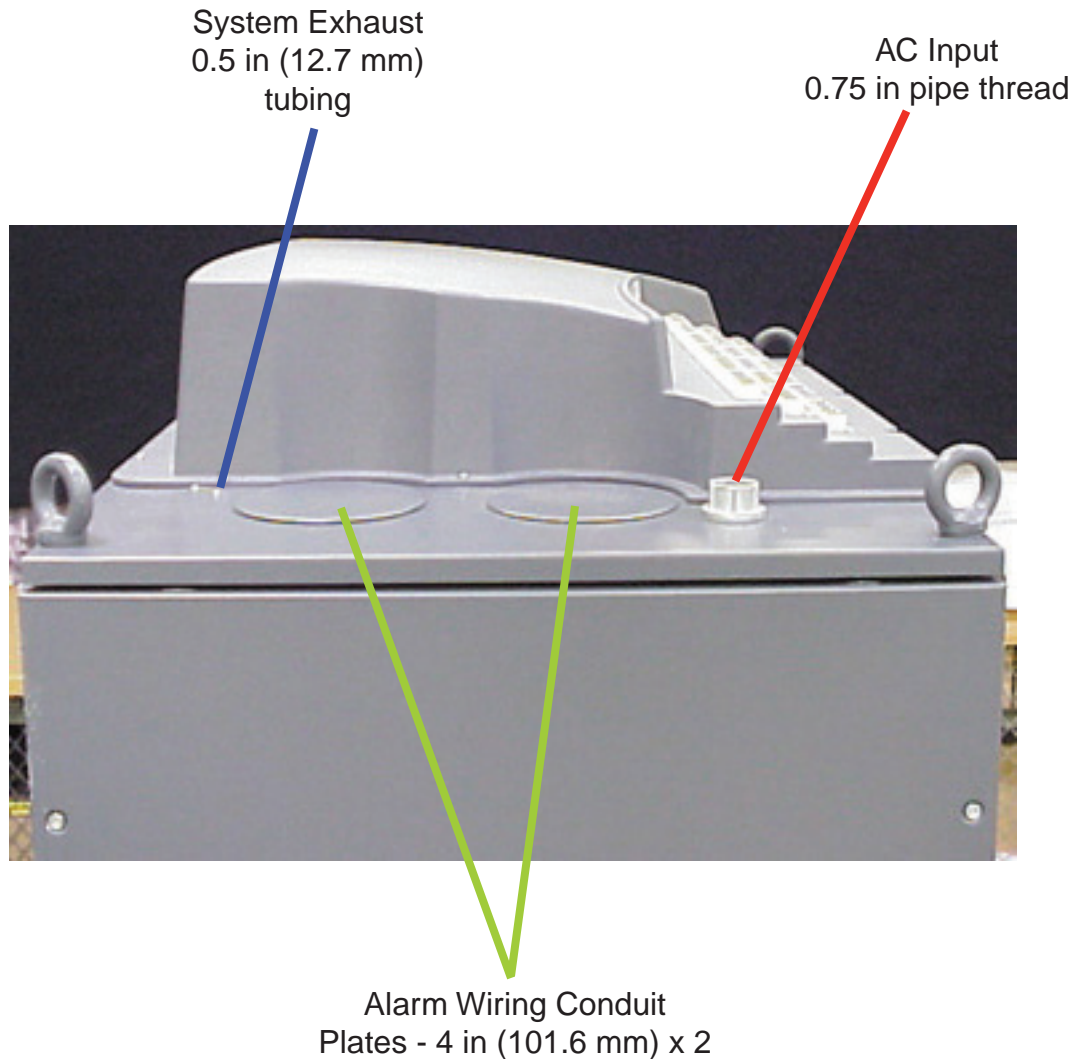


Vertex™ 72-Point Continuous Monitor

1.2.4 Module Front - Door Closed

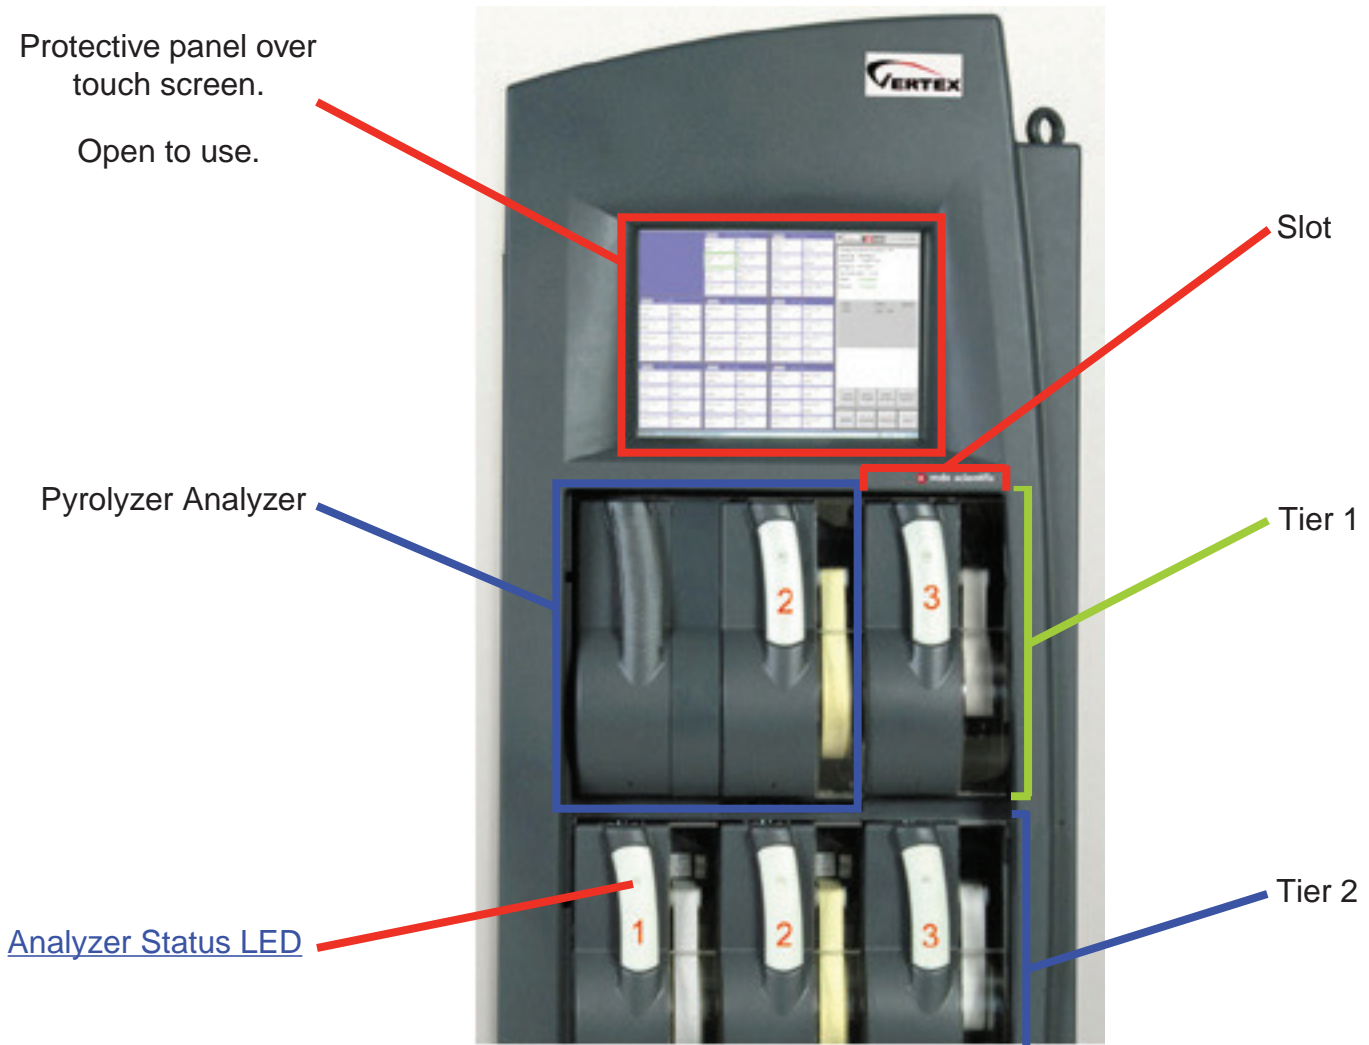


Vertex™ 72-Point Continuous Monitor

1.2.5 Analyzer Side Panel (exterior)

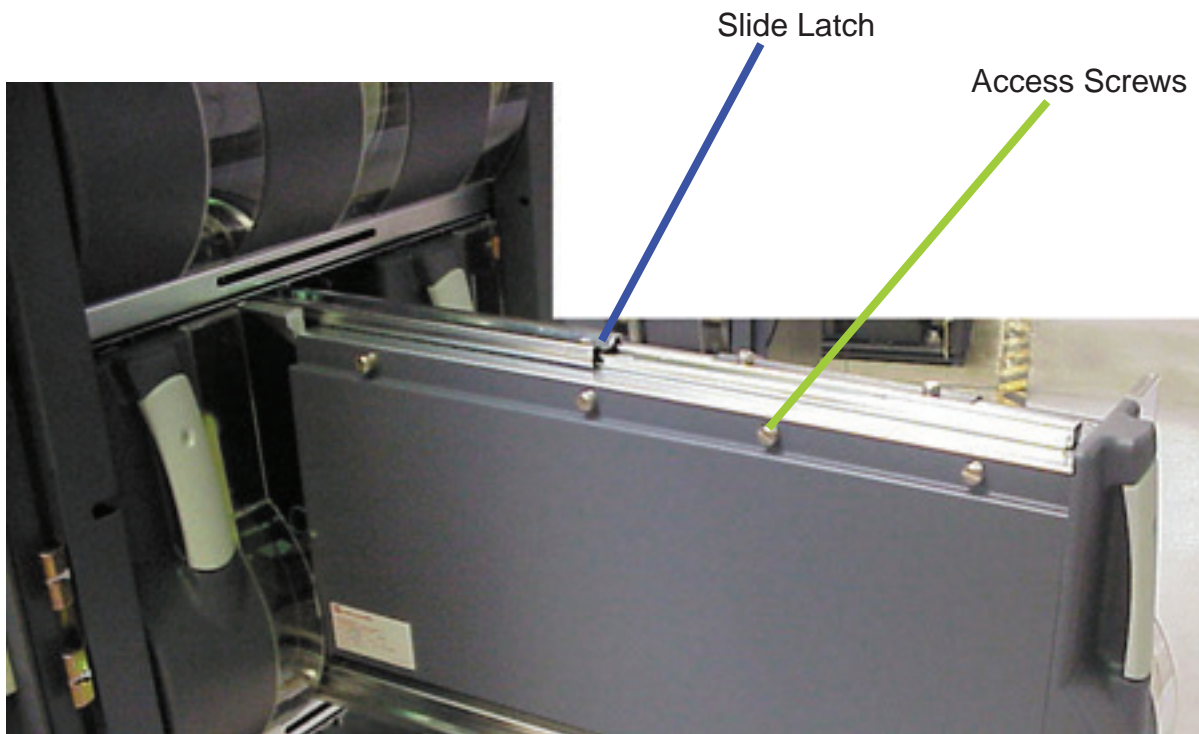


Vertex™ 72-Point Continuous Monitor

1.2.6 Analyzer Side Panel (interior)

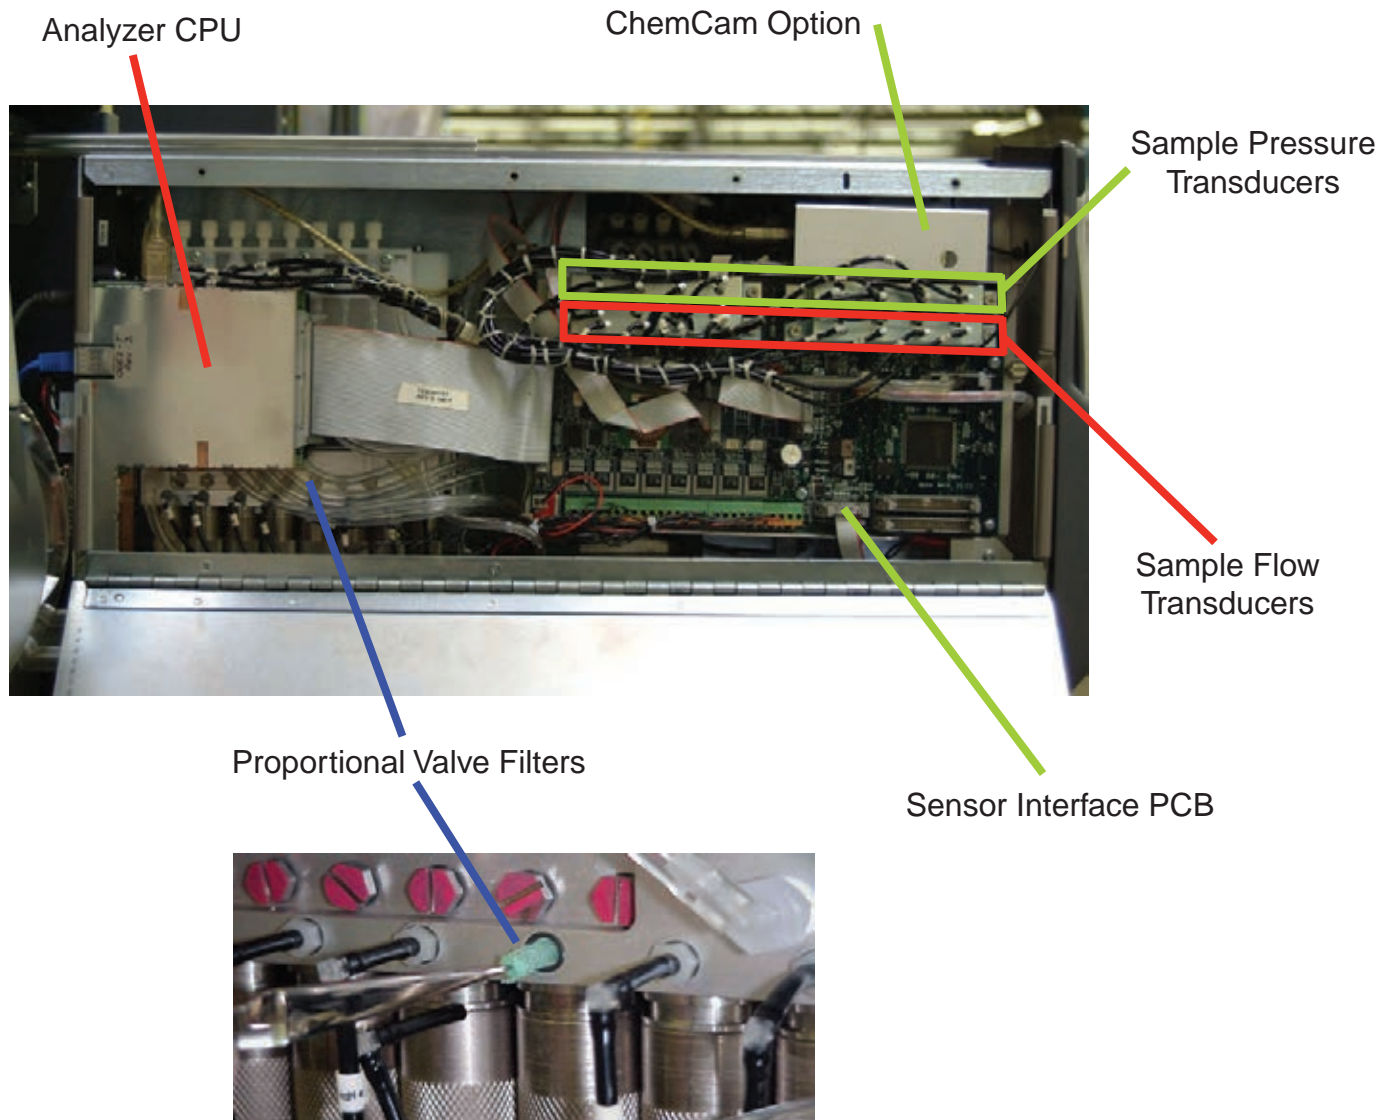


Vertex™ 72-Point Continuous Monitor

1.2.7 Sample Tubing Connections (detail)

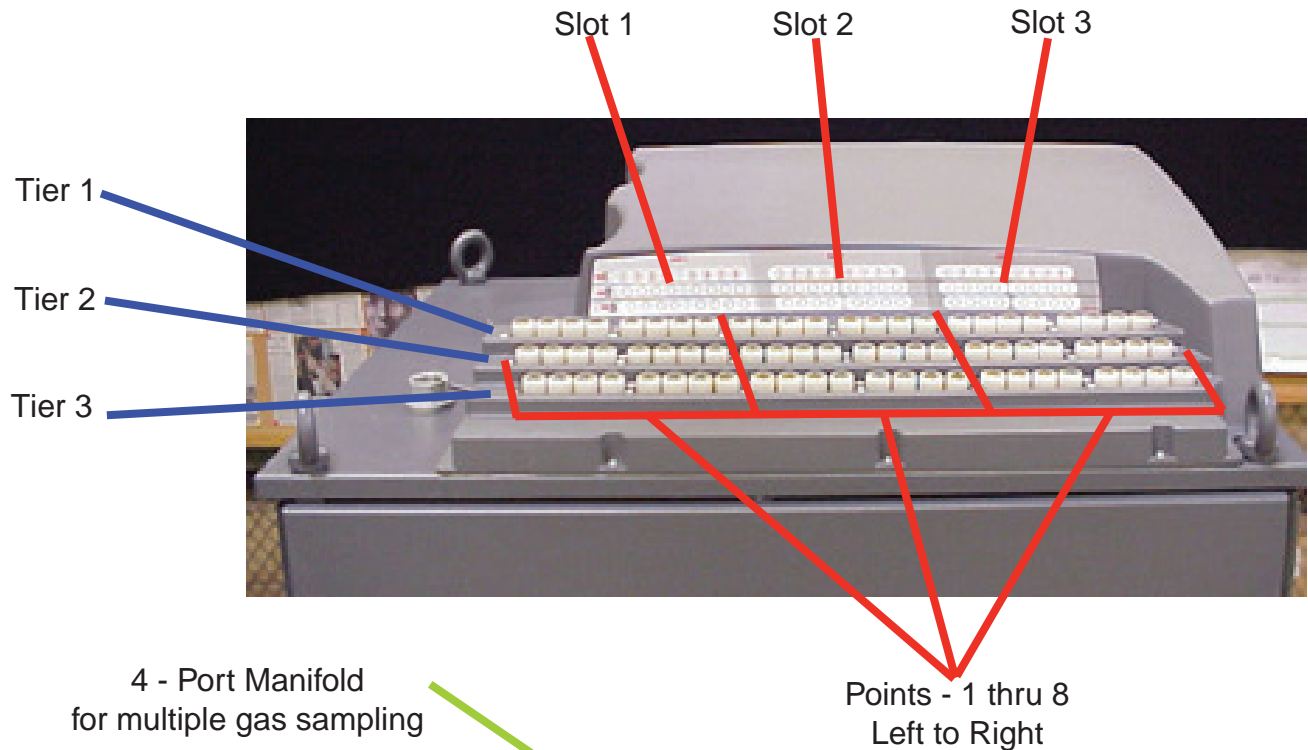


See [Section B.4, Nominal Transport Times](#) for tubing length limitations

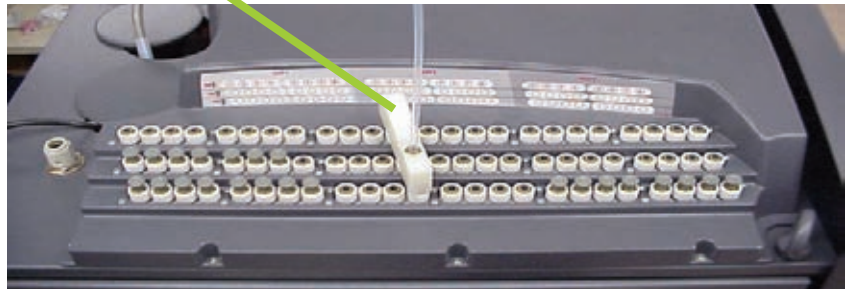

Vertex™ 72-Point Continuous Monitor


1.2.8 System Controls (behind screen)

Series 2 Units

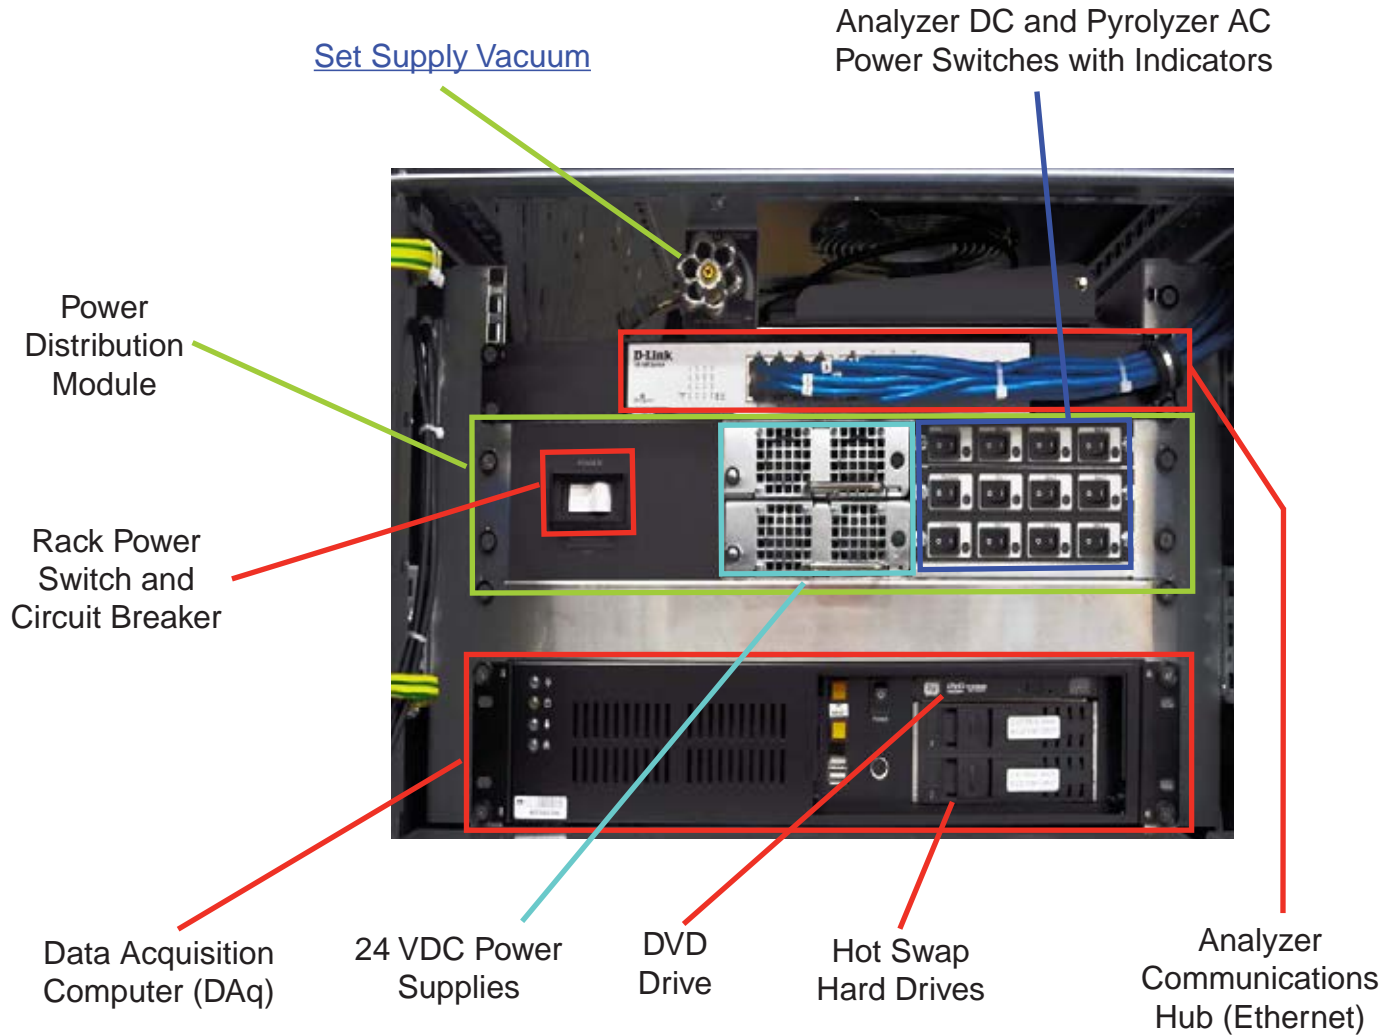


Vertex™ 72-Point Continuous Monitor

Series 1 Units

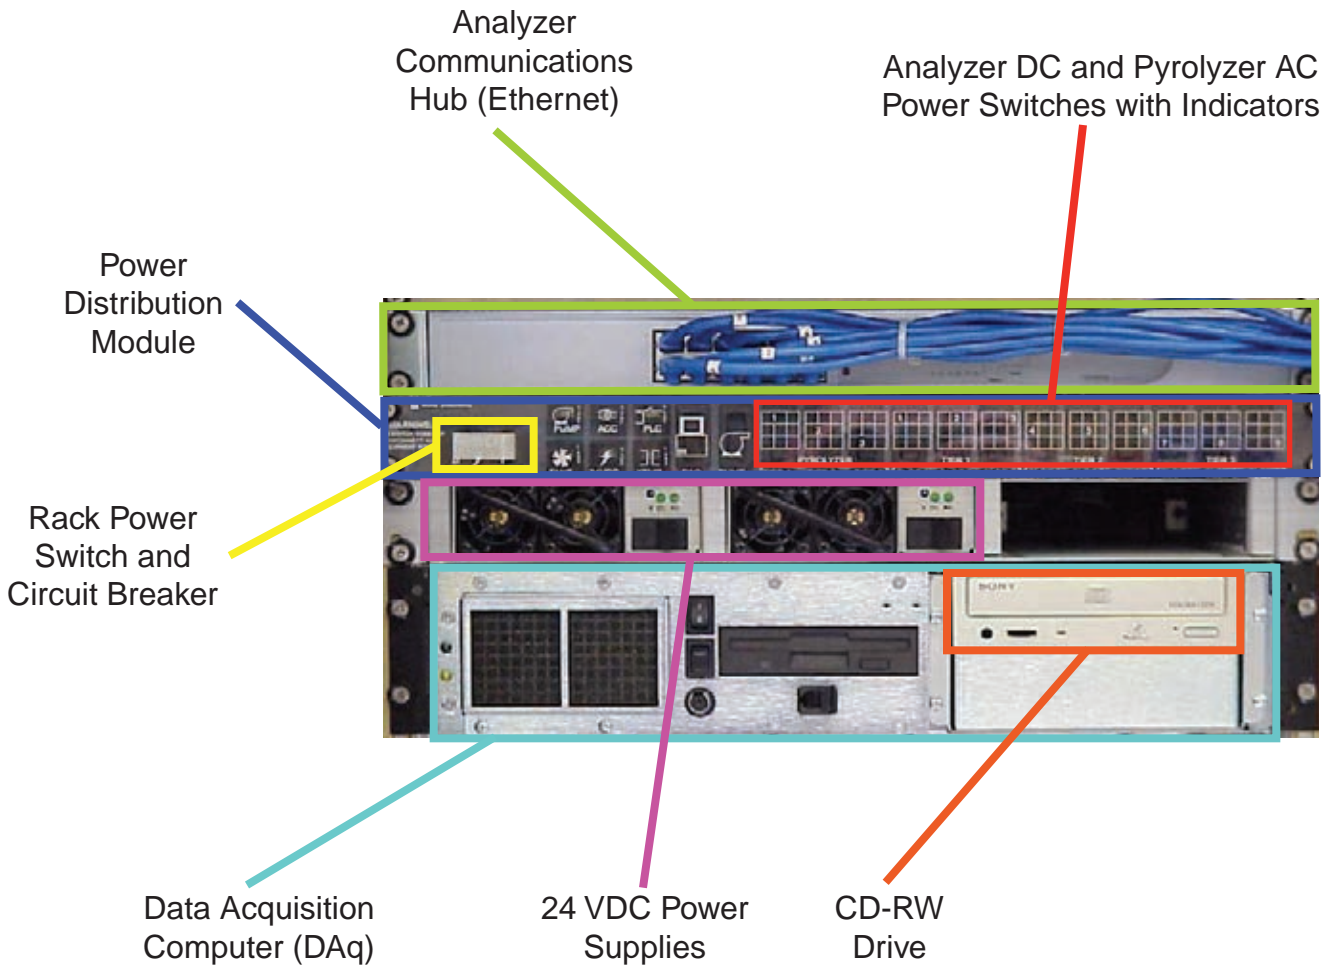

Vertex™ 72-Point Continuous Monitor


1.2.9 Analyzer Front

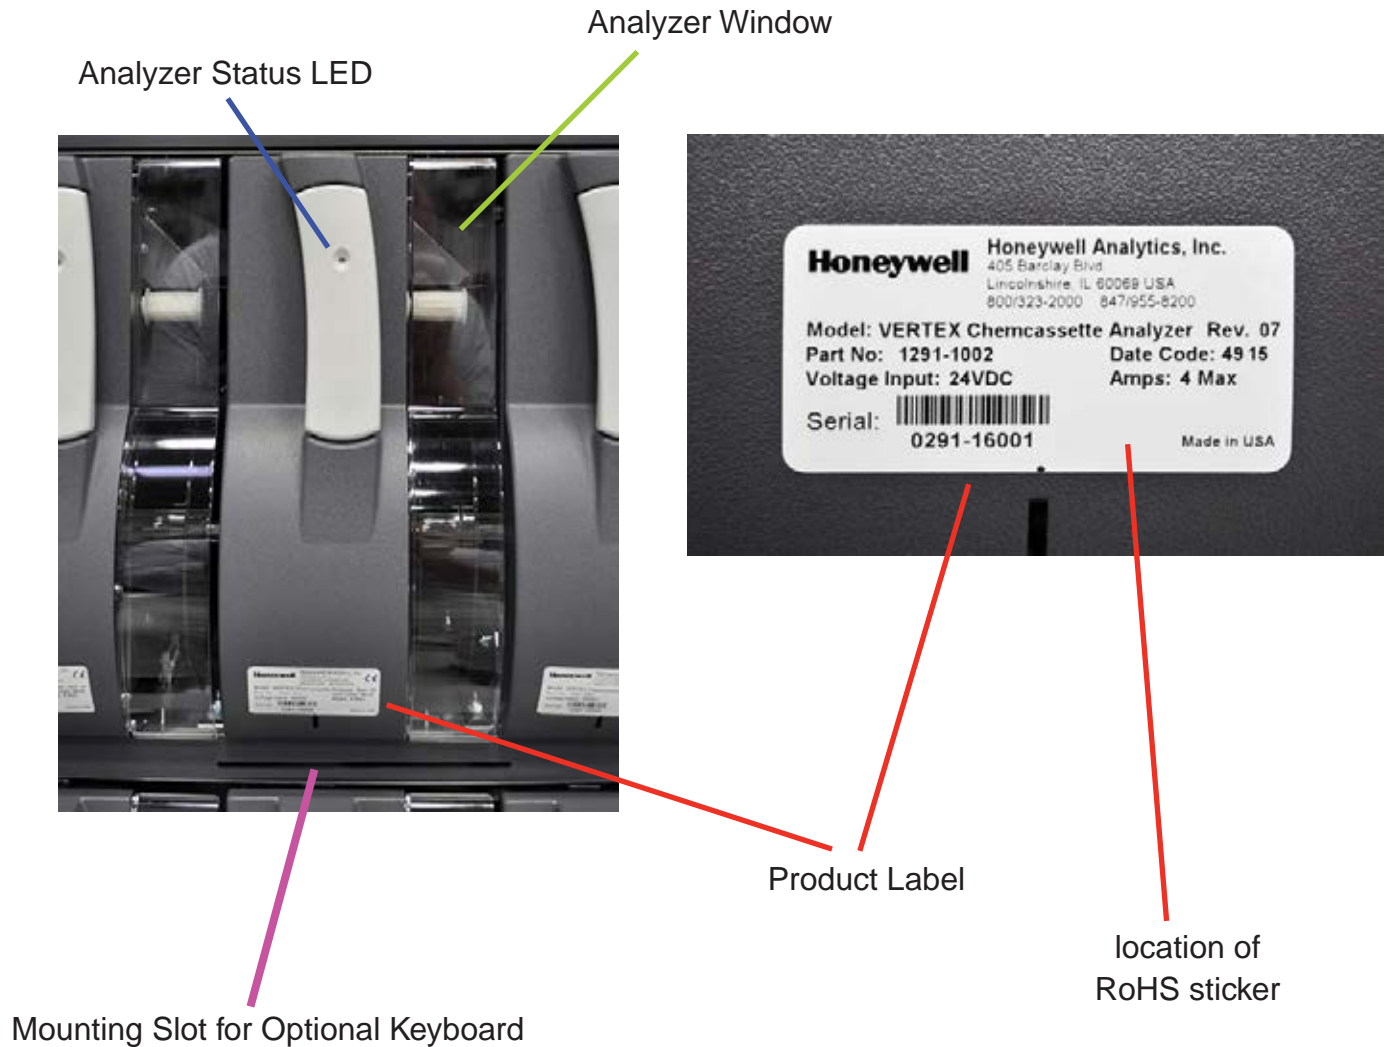

Vertex™ 72-Point Continuous Monitor

1.2.10 Data Acquisition Computer (rear)

Series 2 Units

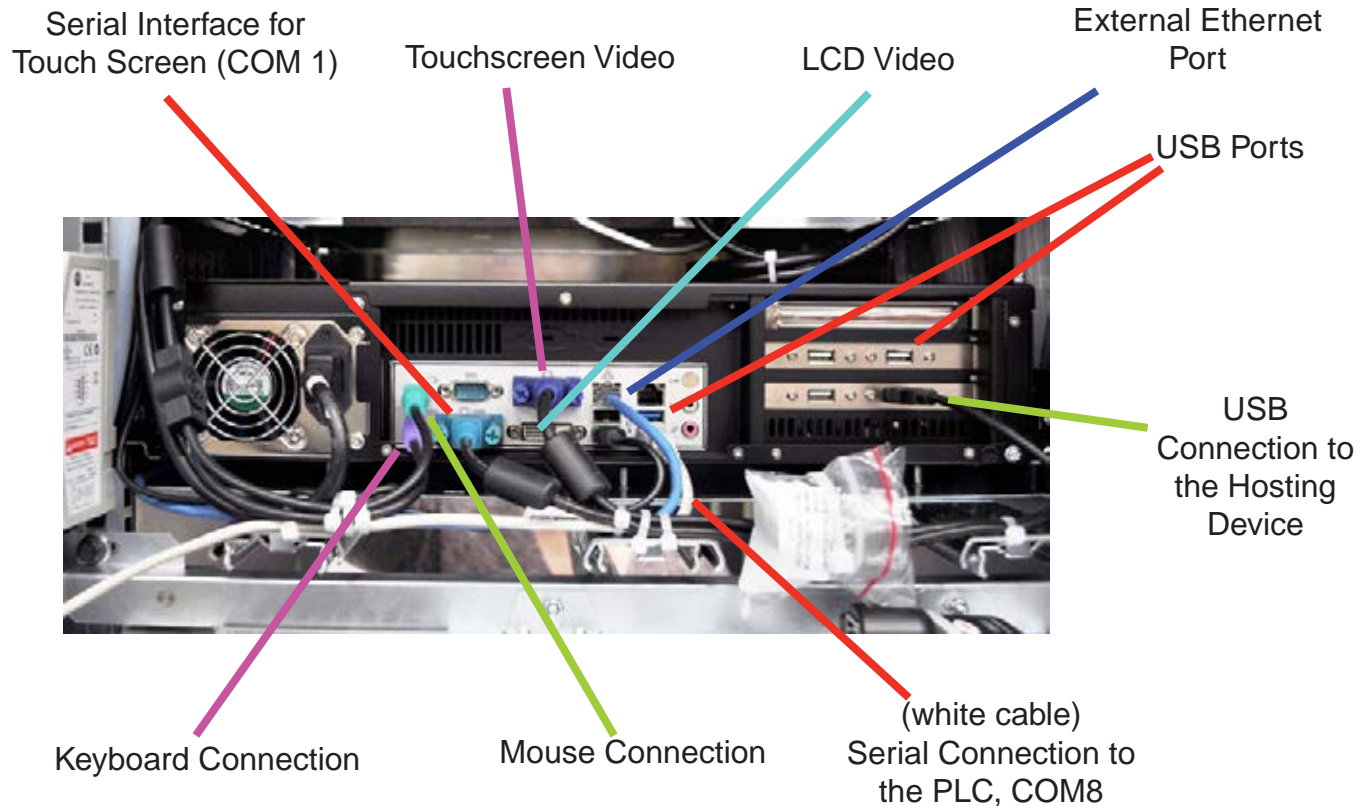

Note:


This photo shows a typical port configuration. Port and slot locations on your monitor may vary.

Caution:

Restrict access to the USB port to reduce the risk of malicious software being introduced.

Vertex™ 72-Point Continuous Monitor

Series 1 Units

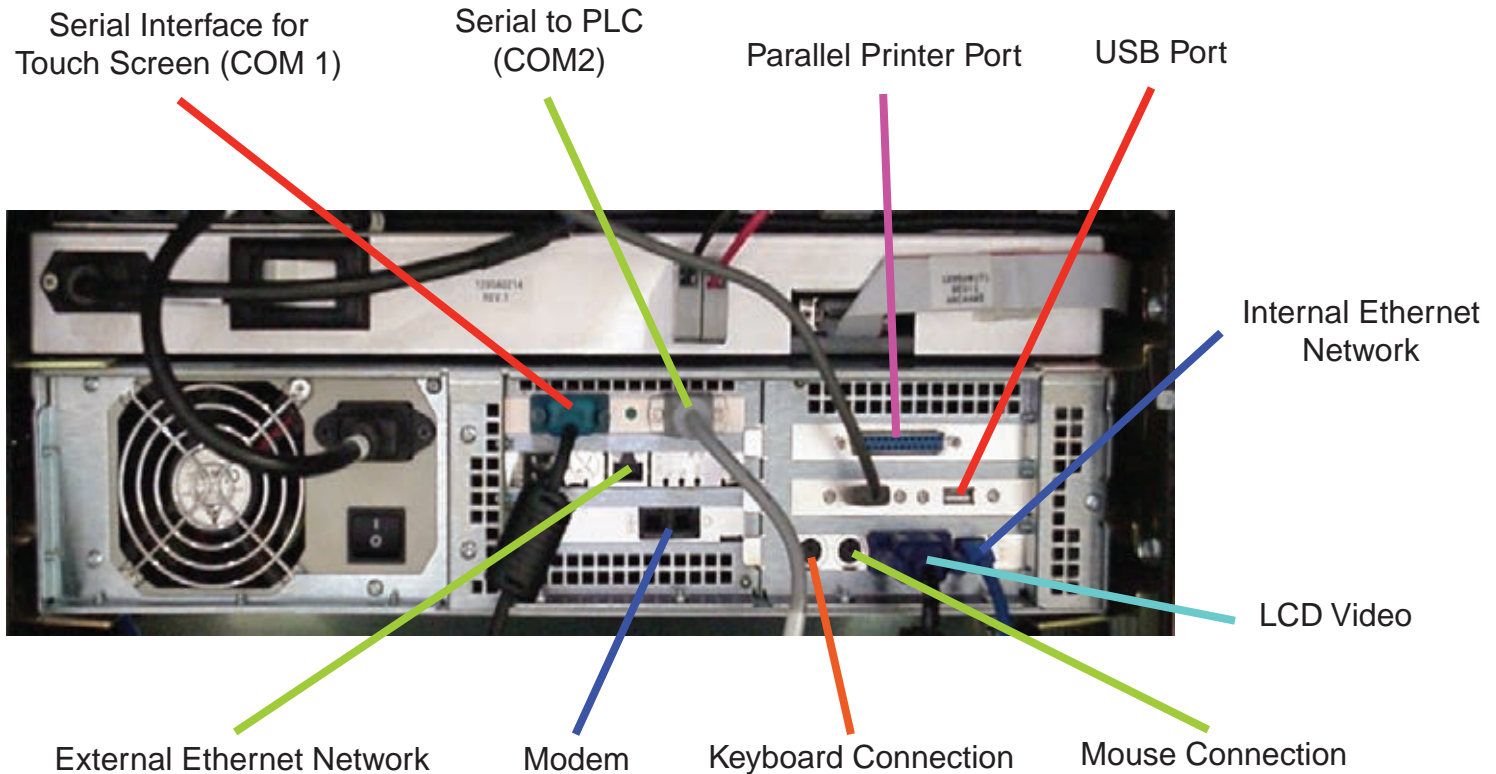


Note:

This photo shows a typical port configuration.
Port and slot locations on your monitor may vary.

Vertex™ 72-Point Continuous Monitor


1.2.11 ChemCam USB Hub

ChemCam
USB Hubs
(3)

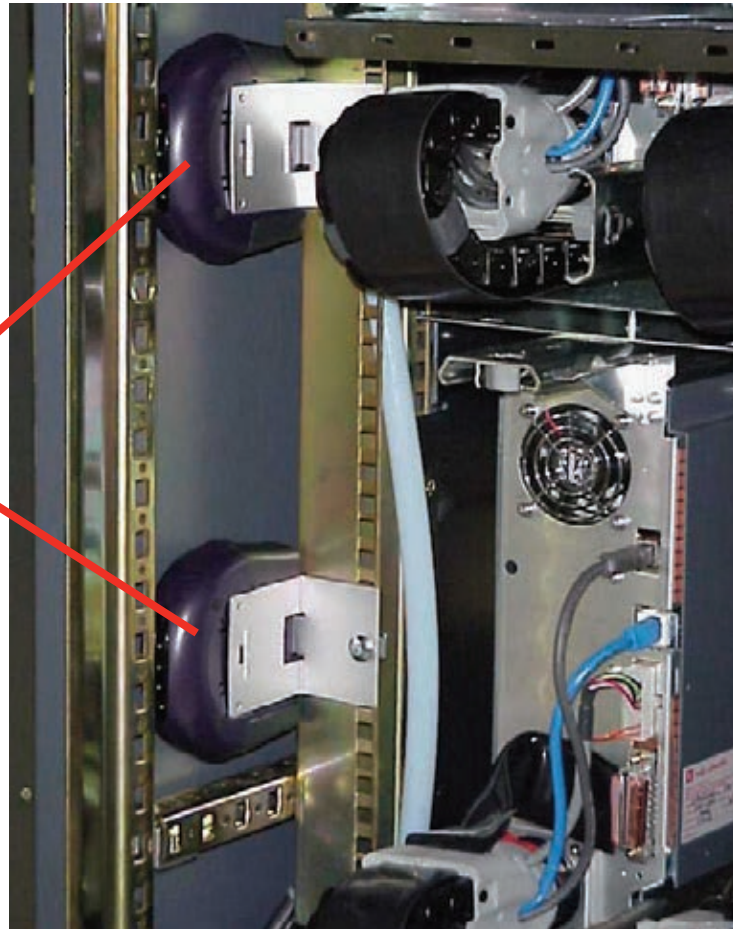

Vertex™ 72-Point Continuous Monitor

1.2.12 Back of Chemcassette® Module

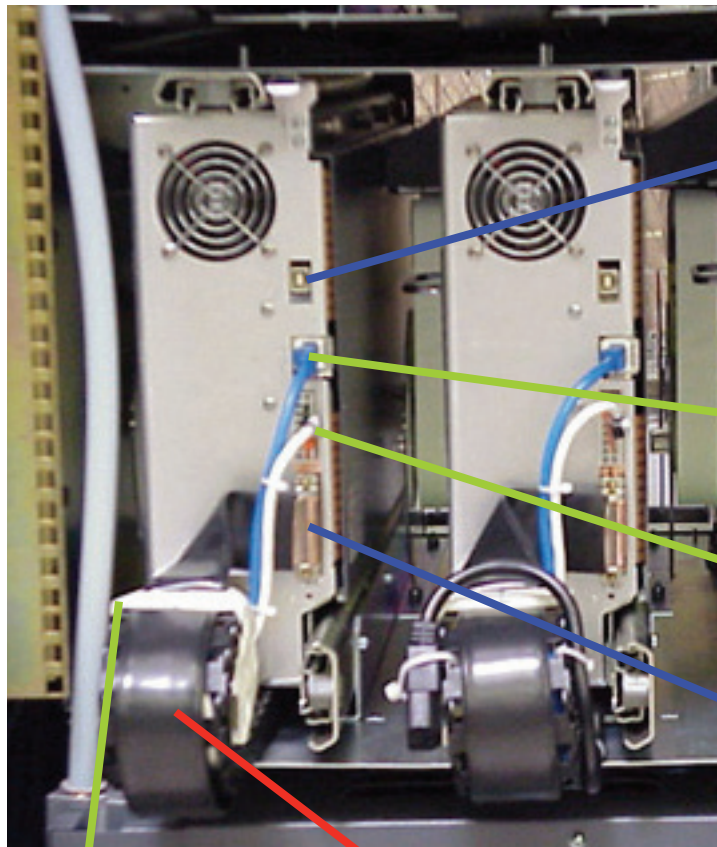

ChemCam USB
Connection (option)

Analyzer
Communications
(Ethernet)

Analyzer 24V
Power Supply

Multifunction
Connector

Note:


Connection secured
by slide latch. Push up
to open. Push down to
close.

Circular Tubing
Harness

Cable Carrier

Vertex™ 72-Point Continuous Monitor


1.2.13 Main PLC

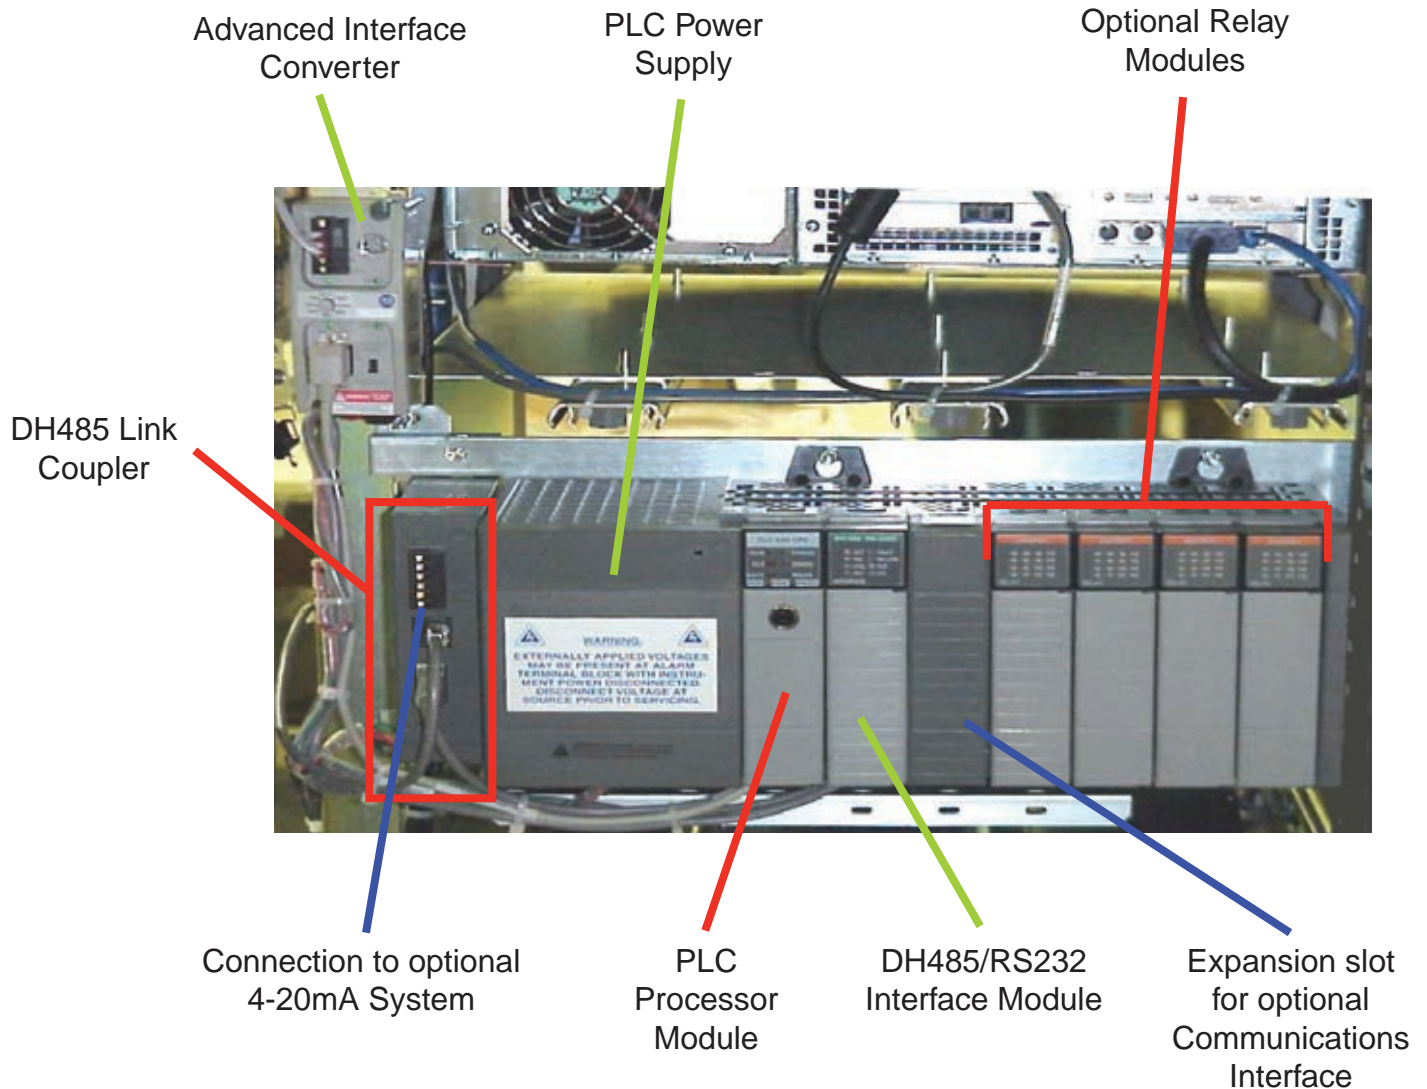

Vertex™ 72-Point Continuous Monitor

1.2.14 Relay Option PLC


Power Supply

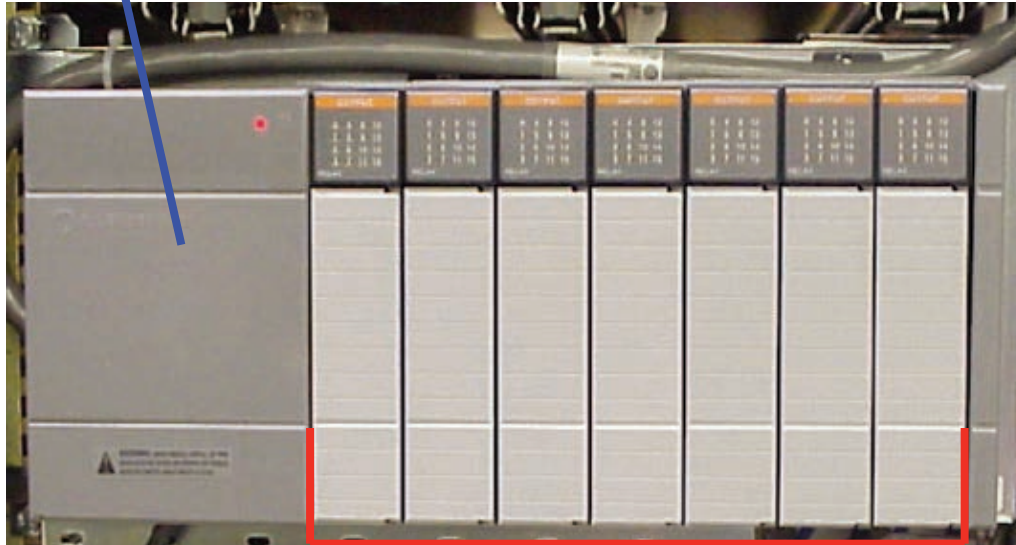

Relay Module (up to seven) cards

Vertex™ 72-Point Continuous Monitor

1.3 Menu Map

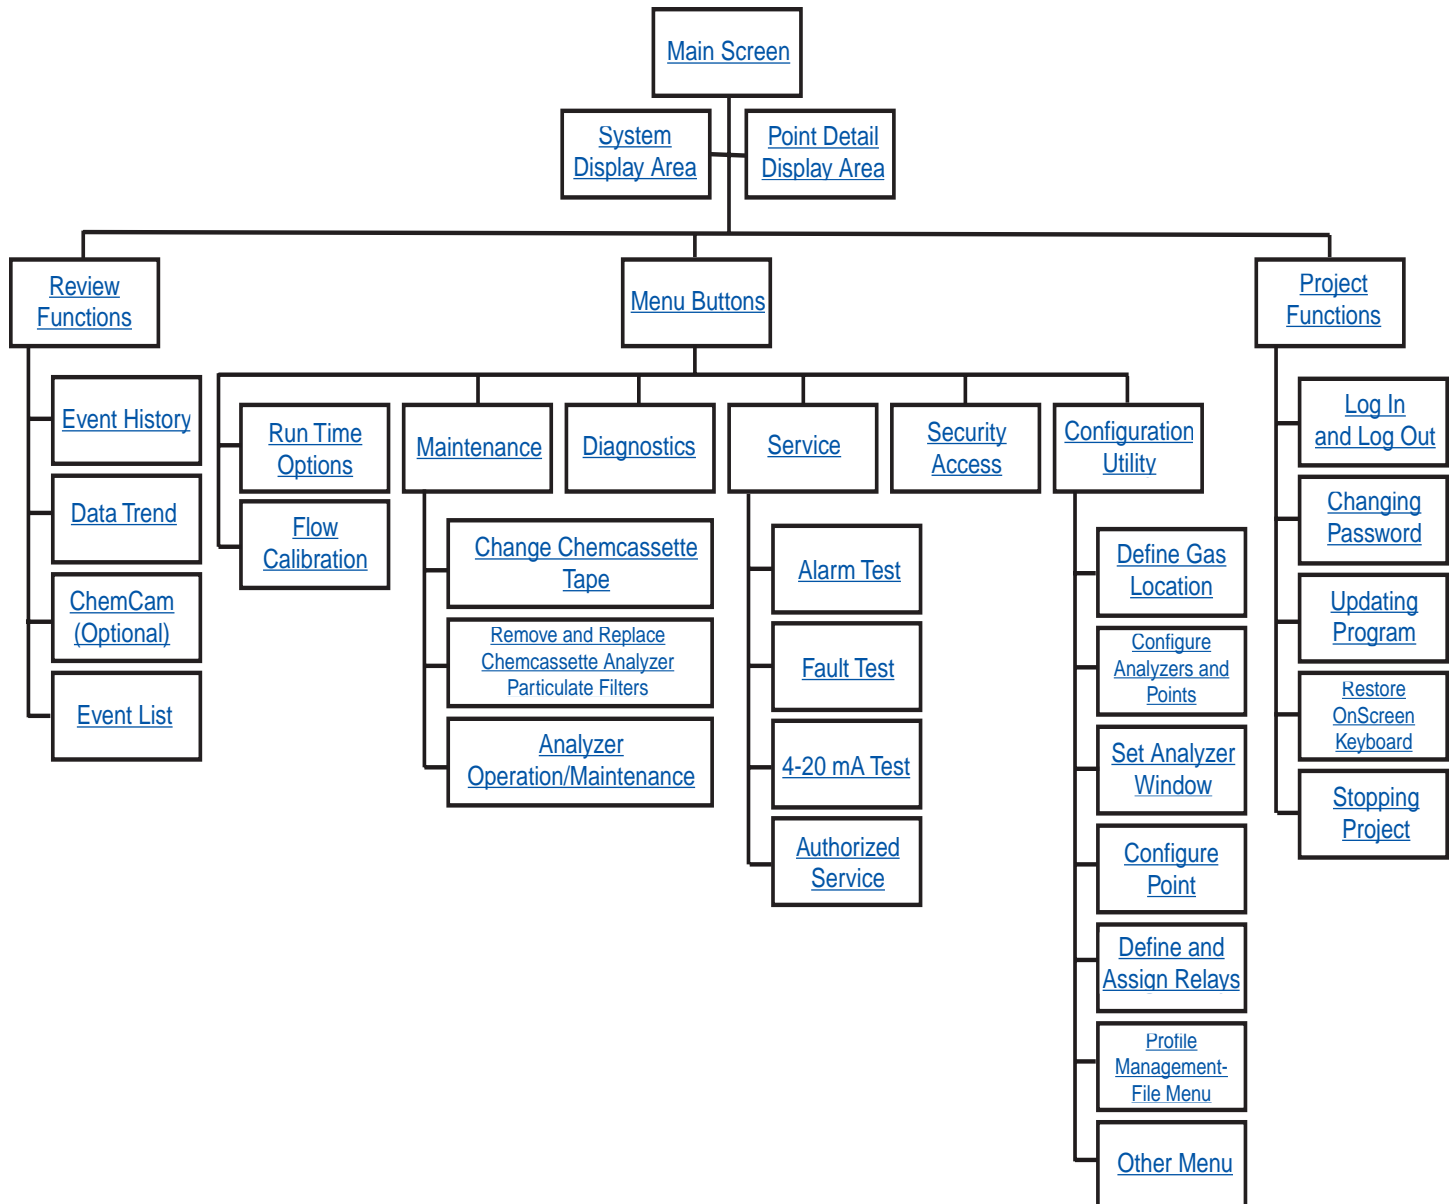

Vertex™ 72-Point Continuous Monitor

1.4 Analyzer Modules

The Vertex System is populated with one or more types of analyzer modules. Each system may contain Chemcassette® modules or Pyrolyzer modules. Modules are installed in slots on one of three tiers. Each tier includes three slots for a total of nine slots in a Vertex System.

| | | | |
|--------|--------|--------|--------|
| Tier 1 | CC | CC | CC |
| | PYRO | | |
| Tier 2 | CC | CC | CC |
| | PYRO | | |
| Tier 3 | CC | CC | CC |
| | PYRO | | |
| | Slot 1 | Slot 2 | Slot 3 |

Table 1-1: Module Tier Structure

Chemcassette® modules occupy one slot each. However, Pyrolyzer Chemcassette® modules are to be installed in slots 1 and 2. Pyrolyzer configuration and status information will appear in slot 2.

| | Number of Points | Installed into Slots | Total Possible per Vertex System |
|---------------|------------------|----------------------|----------------------------------|
| Chemcassette® | 8 | 1, 2 or 3 | 9 |
| Pyrolyzer | 8 | 1 and 2 Only | 3 |

Table 1-2: Required Slots

Examples of possible combinations in a Vertex System:

- Nine Chemcassette® modules
- Three Chemcassette® modules, three pyrolyzer Chemcassette® modules

Your monitor will include only those modules specified at time of ordering.

Vertex™ 72-Point Continuous Monitor

1.5 Sampling System

Each Analyzer module is a monitoring center for sampling lines from sample locations. As they apply to the Vertex System, the words point, line and location require definition:

- A location is a place to be monitored
- Sample atmosphere runs from the location to the Vertex System via a line
- Each of the 72 sample tubing connections on the Vertex System corresponds to a point. A sample line can be connected directly to a single point or multiple points via a 4-port manifold

The system draws air simultaneously from all locations. Two different types of flow are:

- Transport flow: high-velocity, large-volume air movement through the lines
- Sample flow: air admitted to the Chemcassette® detection system

The high speed of transport flow allows rapid monitoring and response time when using long lines from monitored locations to the Vertex System. A small portion of the transport flow (sample flow) is analyzed to determine concentration levels.

The complete sampling and monitoring system consists of the following components:

- Sample lines to all monitored locations
- Flow connections through quick-connect ports in bulkheads on top of unit
- Moving cable and connectors
- Vacuum pumps
- Analyzers incorporating manifolds, Chemcassette® and filters
- Flow controlling proportional valve
- Top exhaust port

There are 72 inlets, one for each monitored location. One exhaust port is also located on top of the Vertex cabinet.

Vertex™ 72-Point Continuous Monitor

1.6 Chemcassette® Detection System

The Chemcassette® Analyzer module is a self-contained, microprocessor controlled analyzer that occupies one slot in a Vertex tier. Sample lines and the vacuum source are connected to the Chemcassette® via a single 10-tube connector.

The system powers up in the same state as when powered down. Data is stored in the module's memory until the data acquisition computer retrieves it.

The Vertex Analyzer modules use the Honeywell Analytics' Chemcassette® optical detection system. Analyzer modules sample and detect a specific gas or family of gases.

- Each eight-point Analyzer module:
- Manages Chemcassette® tape transport
- Provides optical detection of stain
- Directs sample flow through the Chemcassette®
- Stores data for retrieval by the data acquisition computer

Components of the detection system include:

- Chemcassette® detection tape
- Optics and electronics for the detection system
- Chemcassette® tape transport mechanism
- Self adjusting proportional valves


1.6.1 Detector Optics

The heart of the Chemcassette® module is an optical detection system that measures a stain that develops on the Chemcassette® tape in the presence of a target gas. Each eight-point Analyzer module has two detection heads, each with four individual detectors.

Vertex™ 72-Point Continuous Monitor

1.6.2 Stain Pattern


The following chart shows the stain pattern of sample detection on the Chemcassette® tape.

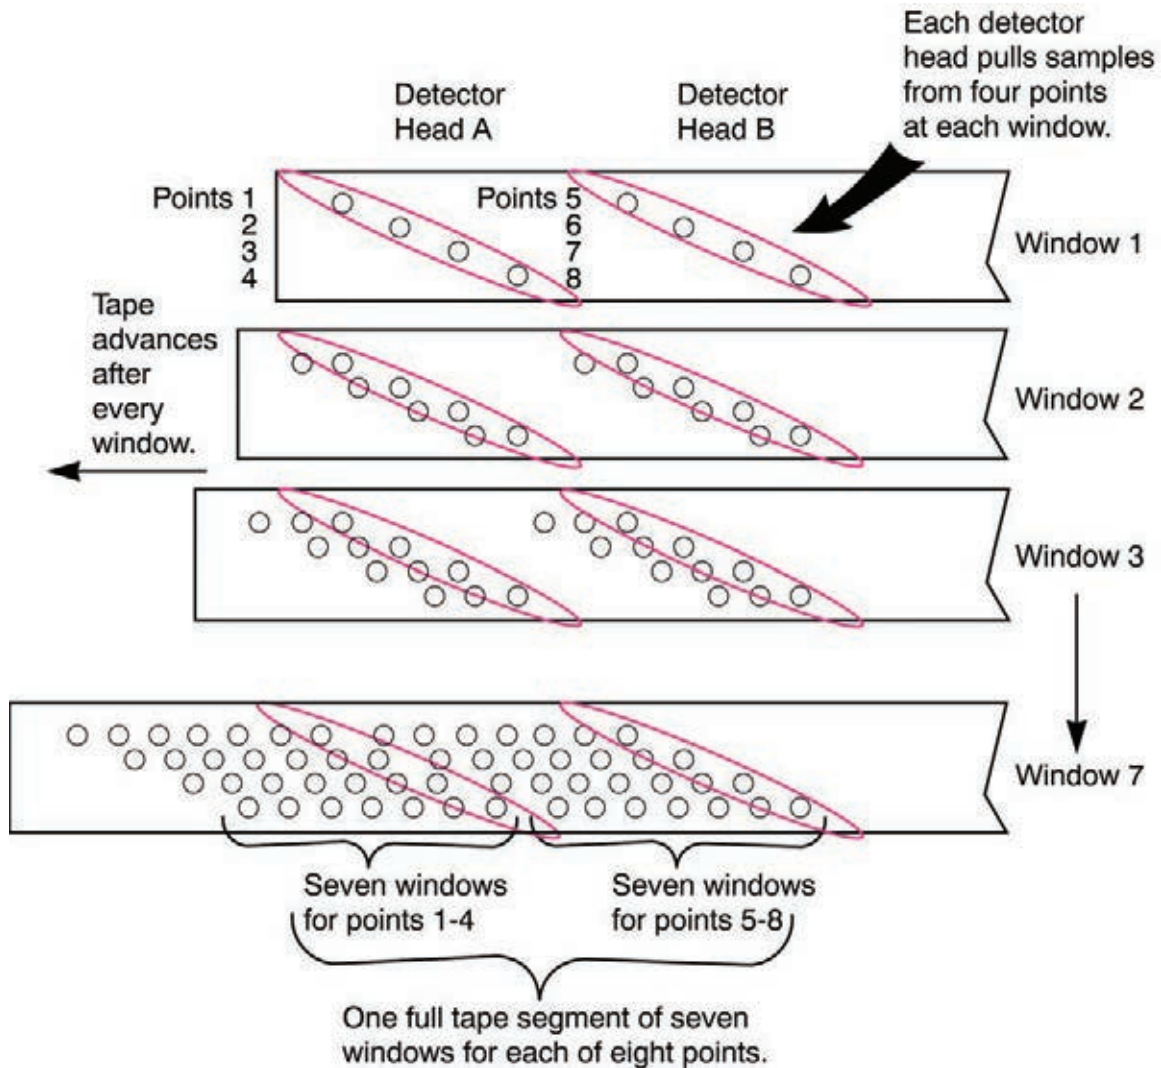

Vertex™ 72-Point Continuous Monitor

When monitoring a location, the system detects and measures a specific gas or a family of gases in the sample. The microprocessor in the analyzer module interprets the data and responds appropriately.


In the legacy detection system, the sample enters the inlet and passes through the Chemcassette tape to the sample outlet. The target gas in the sample flow reacts with the tape and produces a stain density proportional to the gas concentration. An LED in the detector head illuminates the sample stain and the detector then optically measures the stain.

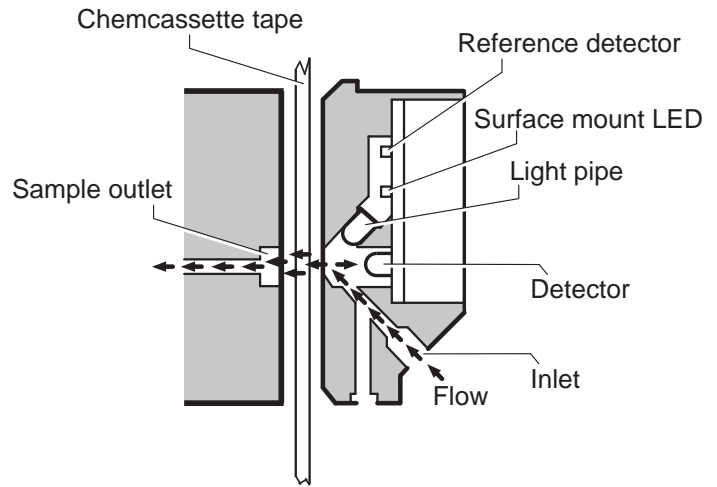

CLO Detection System

In the Closed Loop Optics (CLO) detection system, a reference detector monitors and controls the intensity of the LED.

The microprocessor in the Chemcassette analyzer module interprets the stain. It then calculates and stores a precise concentration level in the module's memory. Gas concentrations are reported in parts-per-million (ppm), parts-per-billion (ppb) or milligrams-per-cubic-meter (mg/m^3).

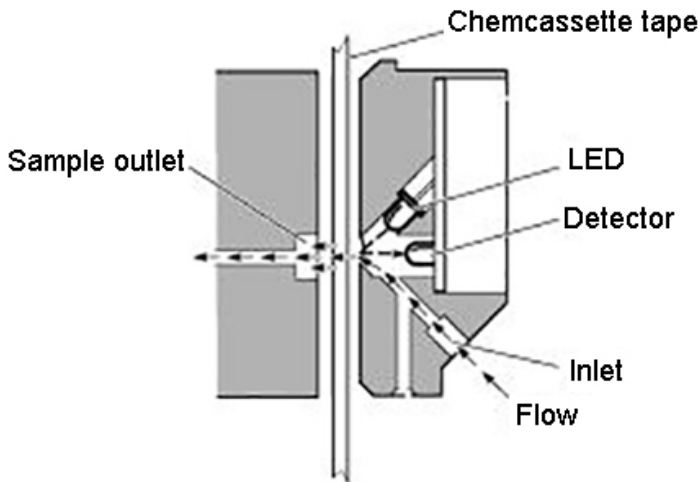

Legacy Detection System

Vertex™ 72-Point Continuous Monitor

1.6.3 Chemcassette® Tapes

Chemcassette® tapes are tagged with a radio frequency identification (RFID) tag to automatically identify the following:

- Serial number
- Gas family/ tape type
- Revision level
- Expiration date of the tape
- Chemcassette® leader parameters

The module uses a leader on the Chemcassette® tape to allow calibration of the optics every time a new tape is installed. This feature can be bypassed.

1.6.4 Optional ChemCam

The ChemCam is a small video camera located between the take-up reel and the optic head on the module. It provides a means to observe alarm level stains.

The Chemcassette® module includes three types of filters in the sample flow system. Particulate filters protect the internal precision orifice from dust particles. An acid filter is used on the common line to the pumps. Both types of filters are located in a removable filter block on the side of the Chemcassette® module. An internal particulate filter protects each proportional valve.

1.6.6 Cooling Fans and Filters

Series 1 Analyzers had two fans and one filter. All Series 2 analyzers have one fan and no filter.

Vertex™ 72-Point Continuous Monitor

1.7 Pyrolyzer Module Detection System

The pyrolyzer module is similar to the standard Chemcassette® module except that it detects nitrogen trifluoride (NF₃). The sample passes through a high temperature heater (pyrolyzer) which converts the NF₃ to hydrogen fluoride (HF). The hydrogen fluoride is then detected with a standard or XPV mineral acids Chemcassette® tape. Detection is identical to the Chemcassette® module.

The correlation algorithm between HF and NF₃ is programmed into the module so the monitor displays the NF₃ concentration.

The Vertex pyrolyzer module detects NF₃ only and cannot be bypassed to detect mineral acids.

The right filter compartment houses eight particulate filters and one acid scrubber, which are identical to the standard Chemcassette® filters. The left filter compartment houses eight charcoal filters which remove the following compounds:

| | |
|-----------|-----------------|
| Freon 12 | Freon 116 |
| Freon 13 | HF |
| Freon 21 | HCl |
| Freon 113 | Cl ₂ |
| Freon 114 | |

Freon® is a registered trademark of E.I. du Pont de Nemours & Company (DuPont).

The charcoal filters may also remove other compounds. Contact Honeywell Analytics for a complete list. Charcoal filters have a part number (P/N 1874-0139) unique to the pyrolyzer module.

The Vertex Pyrolyzer requires two adjacent slots on one tier and always occupies Slot 1 and 2. The bottom rail and latch must be removed from slot 1 to install pyrolyzer.

1.7.1 Pyrolyzer Fan

The Pyrolyzer has a fan that provides cooling to the pyrolyzer.

Note:

Series 2 Pyrolyzer Analyzers (P/N 1291-2002) have a 230V pyrolyzer which is not compatible with Series 1 rack systems (enclosures P/N 1290-0300 and 1290-0302). Series 1 Pyrolyzer Analyzers (P/N 1291-2000) were 120V. These are compatible with the Series 2 rack systems (1290-0019).

1.8 Vacuum Pumps

Two field-replaceable pumps provide a redundant vacuum source for the transport and sample flow system. One pump in the system draws vacuum while the other is idle. The pump exhaust connects to the manufacturing facility central toxic exhaust system.

Note:

The exhaust line from the Vertex should not exceed 50 feet.

The pumps are located in the bottom of the Vertex System cabinet inside a sound-deadening enclosure to reduce noise. Three cooling fans circulate air over the pumps.

The Vertex System draws cooling air in through a filter mounted on the pump module access door.

Pump Status Indicator


See Pump Status Indicator under [Section 4.3.1 System Display Area](#)

Vertex™ 72-Point Continuous Monitor

1.9 Multiple Gas Monitoring

A Vertex System equipped with two or more types of Analyzer modules can monitor more than one gas (or groups of gases such as hydrides or mineral acids) at a location.

Each Vertex Analyzer module can monitor only one gas family (such as hydrides or mineral acids).

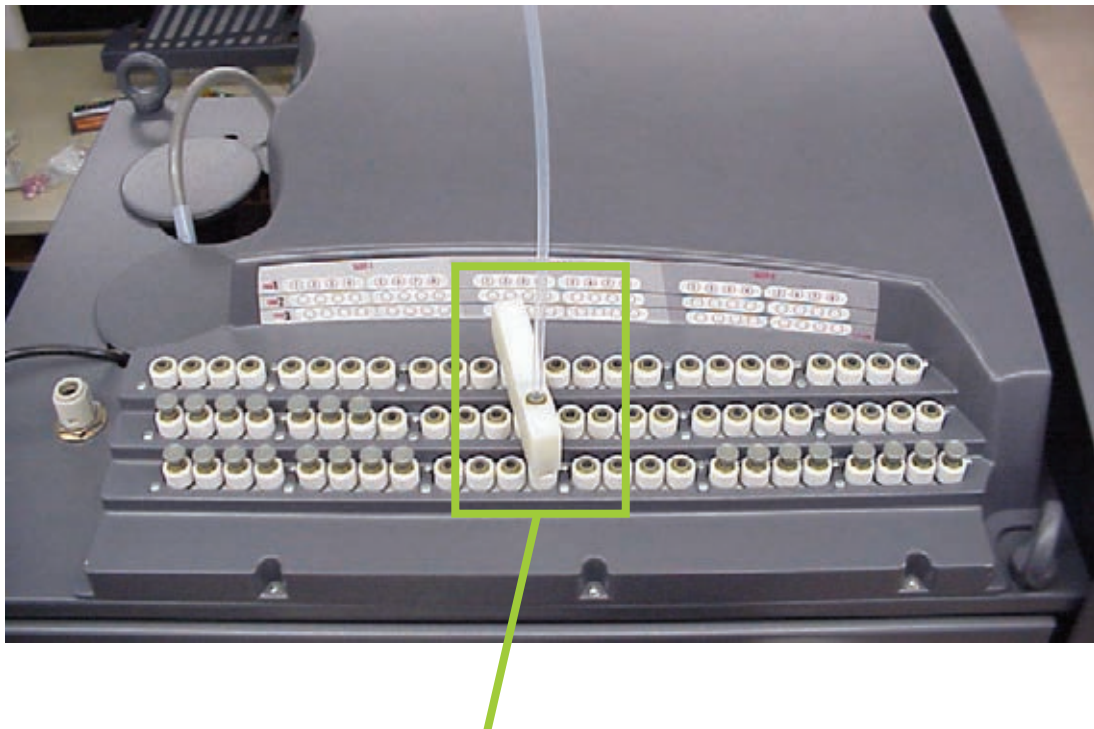


Optional Four-port manifold for multiple-gas monitoring.

Vertex™ 72-Point Continuous Monitor

1.10 Control System

The Vertex control system is a redundant system consisting of a central data acquisition computer (DAq), a programmable logic controller (PLC) and one or more analyzer modules.

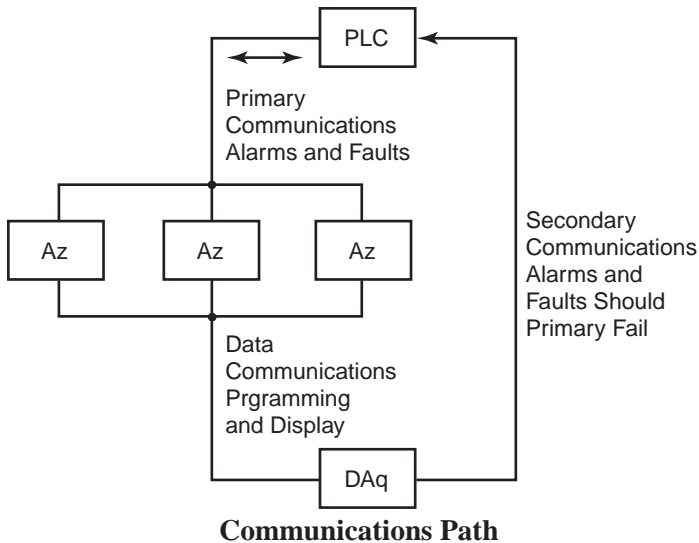

Above is a simplified block diagram of the communications path of the control system. The analyzer modules and PLC are microprocessor controlled and contain non-volatile memory.

1.10.1 Data Acquisition Computer

The data acquisition computer (DAq) is the central processor for the Vertex System. It configures the analyzers, stores data and provides a network interface for data transfer to other computers.

System display and operator control is through an on-screen keyboard or an optional external keyboard.



CAUTION

OPC on TCP/IP via Ethernet not recommended for alarm annunciation.

1.10.2 Programmable Logic Controller

The Programmable Logic Controller (PLC) is the control system path between the DAq and the individual analyzers. The PLC polls the analyzers for current information, activates relays which may be connected to external alarms and provides external communications.



Vertex™ 72-Point Continuous Monitor

2 Installation

2.1 Introduction

The installation and initial start-up procedure for the Vertex System consists of seven steps, described in this and the following sections:

- [2.2 Surveying the Installation Site](#)
- [2.3 Optional Floor Mounting](#)
- [2.4 Installing Sample Lines / Filters](#)
- [2.5 Installing Pump Exhaust Line](#)
- [2.6 Electrical Power](#)
- [2.7 Data Acquisition System](#)
- [2.8 Wiring Alarm Relays](#)

Vertex™ 72-Point Continuous Monitor

2.2 Surveying the Installation Site

A survey of the site helps you make important decisions before installing your Vertex System. Topics in this section assist you with appropriate placement of the Vertex System and in determining if you have special filtering needs at the sampling location.

The site should:

- Be remote from the monitored location, not sharing the atmosphere
- Have sufficient ventilation for cabinet cooling
- Have power available
- Be indoors in an area that is not subject to wide variations in temperature and humidity.

Note:

The specified humidity is 20-65% RH and a temperature between 59°F to 95°F (15°C to 35°C).

Note:

Refer to [Appendix A, Installation Drawings](#) for lifting/mounting information.

2.2.1 Placement of the Vertex System

Install the Vertex System in an environmentally-protected setting remote from the manufacturing or storage locations that it monitors.

You can place the Vertex System up to 400 ft. (122 m) from sample locations.

2.2.2 Exposure to Dust and Humidity

Exposure to corrosive gases or materials, excess moisture, dust and other unusual environmental conditions could seriously hamper the unit's monitoring ability and could cause damage to it.

Allow room around the Vertex System for ventilation and servicing.

2.2.3 Sample Transport Time

Install the Vertex System central to all 72 sample locations to achieve equal sample transport times during monitoring. The shorter the sample line, the shorter the response time. If monitoring a critical location, it may be desirable to place the monitor near that critical area to reduce sample transport time for that location. See Appendix B, Specifications, for transport times.

2.2.4 Monitor Dimensions

Monitor dimensions are important factors in monitor placement. The Vertex System is 24 in. (61 cm) wide, 34-1/2 in. (88 cm) deep and 76 in. (193 cm) in height. The system with 9 analyzers weighs about 1000 pounds (454 kg). Allow for 24 in. (61 cm) door swing; 18 in. (44.3 cm) at rear and 5 in. (12.3 cm) on sides. Allow clearance above the monitor for installing sample lines.

Vertex™ 72-Point Continuous Monitor

2.2.5 Sample Locations

Before installing the Vertex System, evaluate the sampling locations to determine if excessive dust or moisture are present. An external filter must be used in all locations. Make sure you use the correct filter. Dust may be a result of construction as well as manufacturing activities. Moisture may occur from rain entering a line at an outdoor sampling location or from condensation caused by temperature fluctuations. Water condensation in the sample lines could cause false alarms.

Note:

Variables such as airflow, the molecular weight and temperature of the sample gas, and the physical conditions of the areas being monitored influence the placement of the sampling locations. You may need to consult your company's industrial hygienist or safety officer before installing sample lines to determine your company's policy related to sampling locations and monitoring of the desired sample gas.

2.2.6 Sample Line Particulate Filter Use

See [Appendix B, Specifications](#), to determine which filter type should be used at the location.

2.3 Optional Floor Mounting

For added protection with optional floor mounts, prepare floor anchors to secure the base of the cabinet and prevent tipping. See [Appendix A, Installation Drawings](#) for floor mounting instructions.

2.4 Installing Sample Lines/ Filters

Use only FEP Teflon® tubing to assure proper sample transport. Other types of tubing are not sufficiently inert. See [Appendix B, Specifications](#), for tube specifications. FEP tubing can be ordered from Honeywell Analytics.

Install sample lines from each location to the top of the Vertex System. This procedure involves:

- [2.4.1 Sample Line Installation Requirements](#)
- [2.4.2 Sample Line Connections](#)
- [2.4.3 Installing Sample Line Particulate Filters](#)

Teflon® is a registered trademark of E.I. du Pont de Nemours & Company (DuPont).

Vertex™ 72-Point Continuous Monitor

Honeywell Analytics supplies FEP grade Teflon tubing with all new monitors. This tubing is manufactured to our own strict specifications, and has been purged of all byproducts of the manufacturing process. On occasion, users have supplied their own FEP type tubing. Should you choose to use your own tubing, be advised that some brands of FEP tubing off-gas small amounts of HF, which can be detected on start up by Honeywell Analytics monitors configured for detecting mineral acids gases (HBr, HCl, HF, NF₃). Before enabling building alarm systems, make certain that 1) you have installed the correct Chemcassette®, and 2) your monitor reads zero.

2.4.1 Sample Line Installation Requirements

Follow the general requirements listed below when installing sample lines.


- Sample lines should not exceed 400 ft. (122 m) in length.
- Route all lines as direct as possible to improve transport time. See [Appendix B, Specifications](#), for transport times.
- Avoid running sample lines through areas of great temperature extremes, such as adjacent to steam or chiller lines.
- Sample lines should not be crimped, bent to less than a 12 in. (30.5 cm) radius, or placed in an area where weight could collapse

the tubing. Sample lines should be easily accessible for periodic inspection.

- Where possible, leave as many bends exposed for periodic visual inspection of the line for kinked or damaged tubing.
- Check each sample line installation for seal integrity after completing installation of the Vertex System. See [Section 3.9, Leak Checking Sample Lines](#), for the leak check procedure. Also use this procedure to detect leaking or severed tubing after events, such as construction, which may have affected the integrity of the tubing.
- Unused sample line port(s) may be blocked by the user with a plug, or a particulate filter may be installed to keep the system clean. If using a plug, make sure system vacuum level is adjusted.
- If an analyzer is installed in the Vertex with a Chemcassette tape, the optics may need cleaning before activating a previously unused point(s).

Vertex™ 72-Point Continuous Monitor


2.4.2 Sample Line Connections

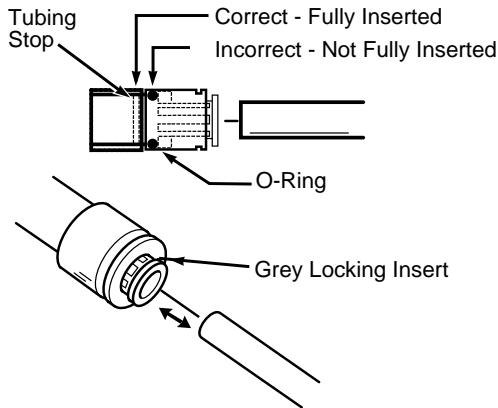

Sample Line Inlet Connections

To prepare for installation of sample lines, remove the FEP Teflon tubing from the installation kit. The top of the unit includes 73 connections:

 - 72 Sample Inlets
- (Point legend follows and is in proper sequence.)
- Exhaust Outlet (See [Section 2.5, Installing Pump Exhaust Line](#), for connection.)

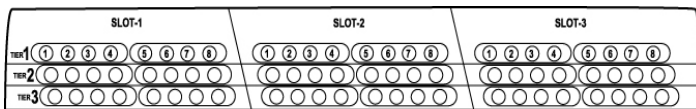

Point Legend

Note:

Always perform a leak check after installing sample lines. See [Section 3.9, Leak Checking Sample Lines](#), for the leak check procedure.

Each inlet has a quick connect/disconnect fitting with an internal O-ring and an external grab ring. To install a tube into a sample line inlet, insert the tube far enough into the fitting to ensure that the tube has passed through both the external grab ring and the internal O-ring and is firmly seated against the stop. The insertion depth for a correctly installed sampling line is 1/2 in. to 5/8 in. (12 mm -16 mm). Verify the insertion depth by holding the tube and marking with your thumb where it emerges from the fitting. Remove the tube to measure the insertion depth.



CAUTION

Improper installation of the tube into the connector results in dilution of the sample.

2.4.3 Installing Sample Line Particulate Filters

Attach a sample line filter to the sampling end of the line for all locations.



CAUTION

Keep in mind that excess amounts of dirt in the filters reduces the sample flow, raises sample vacuum and may affect concentration readings of the analyzer.

See [Appendix B, Specifications](#), to determine the proper filter type to use with each target gas.

Vertex™ 72-Point Continuous Monitor

2.5 Installing Pump Exhaust Line

This section describes exhaust connections and installation. The Vertex System is equipped with a vacuum pump that is located in the bottom of the Vertex System cabinet. The pump exhaust line connects to the manufacturing facility central toxic exhaust system.

2.5.1 Exhaust Line Installation Requirements

Follow the general requirements listed below when installing exhaust lines.

The length of the line should not exceed 50 ft. (15 m). If longer distances are required, contact Honeywell Analytics.

Do not crimp exhaust lines, or place them in an area where weight could collapse the tubing, or bend them to less than a 12 in. (30.5 cm) radius.

Where possible, leave as many bends exposed for periodic visual inspection of the line for kinked or damaged tubing.

Varying exhaust pressure can induce pump failure or flow faults.

2.5.2 Exhaust Line Connection

The instrument includes 20 ft. (6 m) of 3/8 in. (10 mm) I.D. x 1/2 in. (13 mm) O.D. Teflon tubing. Insert the tubing into the exhaust port on the top of the unit to the depth of 0.9 in. (23 mm).



CAUTION

Leaks in the exhaust tubing connection can cause exposure to toxic gases from remote sample areas.

To ensure a leak-free installation:

- Use a polypropylene tube with outside diameter 0.375 in. (9.525mm) +/- .005 in. (0.127mm).
- Verify that the external surface of the tube is free of score marks and scratches that could compromise the O-ring seal used in the fitting over the insertion depth.
- Cut the tube end perpendicular to its length 0.062 inches (1.5 mm) from its end.

Vertex™ 72-Point Continuous Monitor

- Insert the tube in the fitting to a depth of 0.95 in. (24.13mm) ±0.05 inches (1.27mm)

With the system running, verify the leak integrity with a small amount of leak test fluid.

2.6 Electrical Power

The Vertex System requires a connection to a source of electrical power. An easily accessible service disconnect/power switch must be installed near the instrument, and the switch must be marked as the main disconnect for the Vertex unit.

The following warning must be displayed at the switch:



WARNING

Hazardous voltages may exist at the Alarm Contacts in this unit with the power switch turned off. Insure power is disconnected at the source prior to servicing alarm contacts.

2.6.1 Connecting AC Power

AC Source Requirements:

- Operating Voltage: 230 VAC ± 10% (under load) @ 50/60 Hz; 15 Amps maximum, single phase.

The Vertex System requires a dedicated AC circuit rated at 230 volts, 50/60 Hz, 15 Amp single phase providing hot, neutral, and ground lines. Line voltage should fluctuate no more than ± 10%. The external


switch must be clearly labeled and installed in accordance with local electrical codes. Input power cable should be #14 AWG minimum. The safety ground wire must be the same or larger gauge as the line wires. Connect AC power connection to the two-position terminal block in the rear panel of the power module. Connect ground wire to the threaded stud on the side rail of the rack.

See Figure 1.

Note:

Testing has shown that using 208/220VAC phase-to-phase power source instead of the recommended 230VAC phase-to-neutral, can result in voltage excursions on the system ground. The excursions can cause damage to components in the analyzers or PLC. This type of damage is most likely to occur during system power cycles or in cases where the supply power is not a clean source.- up. For applications where 230 VAC single phase power is not available, Honeywell Analytics offers transformers to provide the necessary power. See [Section 2.6.3 Vertex Transformer Installation](#) for complete information.

Vertex™ 72-Point Continuous Monitor

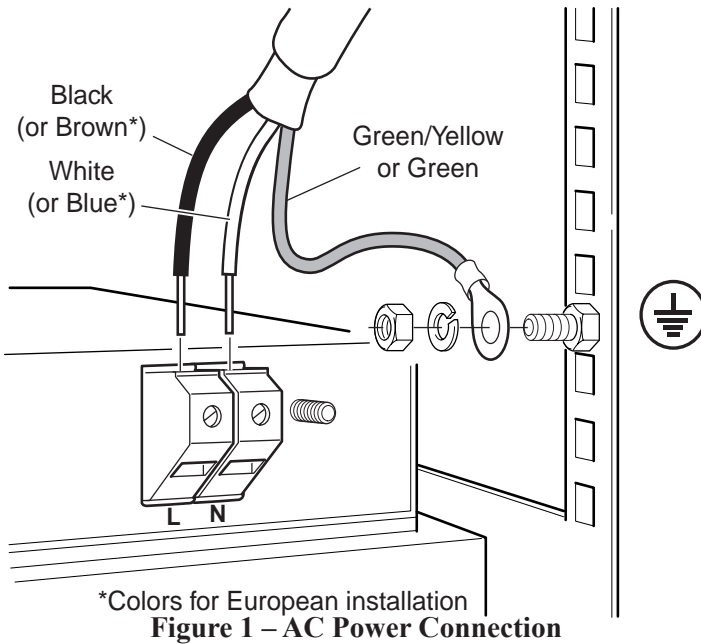

2.6.2 Verifying Proper AC Power Connection

Before powering up the Vertex®, verify the connections using a multimeter to determine the connections are correct and correct voltages are present at the power connection.

Note:

Series 1 and Series 2 Vertex® power connection points differ slightly in their appearance and are illustrated in Figures 2 and 3 below.

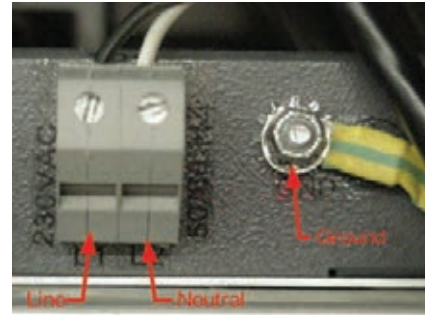


Figure 2 – Vertex® Series 1

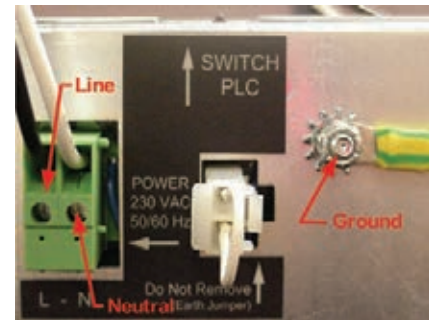


Figure 3 – Vertex® Series 2

Verifying Line Connection:

Touch the red multimeter lead to the line/hot connection and touch the black lead to the ground lug (see Figure 4). The meter should display a voltage verifying the presence of 230 VAC.

Vertex™ 72-Point Continuous Monitor

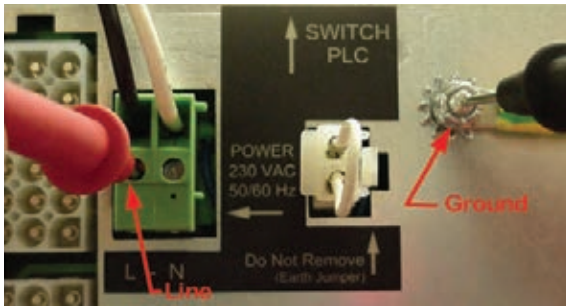


Figure 4 – Verifying Line Connection

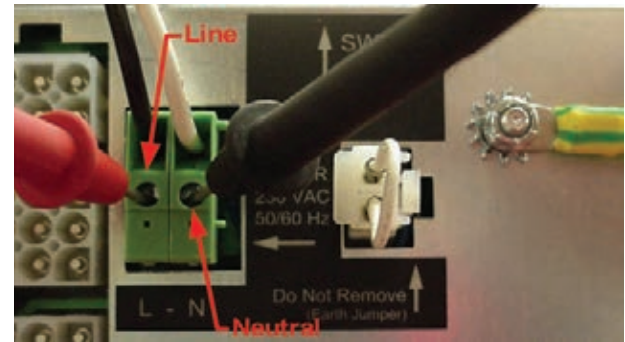


Figure 6 – Verifying Line to Neutral

Verifying Neutral Connection:

Touch the red multimeter lead to the neutral connection and touch the black lead to the ground lug (see Figure 5). The voltage value should not exceed 5 VAC.

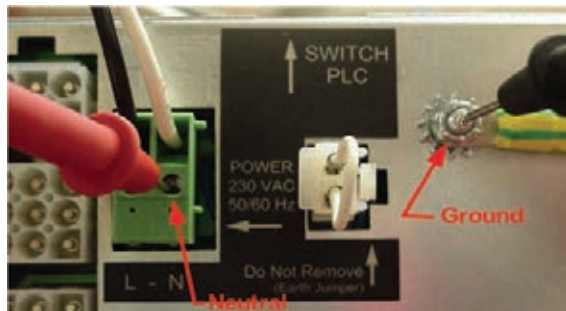


Figure 5 – Verifying Neutral Connection

Note:

After confirming line and neutral connections and the operating voltage is within the specified range, power up the Vertex® and check the operating voltage again to assure the voltage under load is within the specified range for safe operation.

Verifying Operating Voltage:

Touch the red multimeter lead to the line/hot connection and touch the black lead to the neutral (see Figure 6). The meter should display a voltage value of 230 VAC \pm 10%.

Vertex™ 72-Point Continuous Monitor

2.6.3 Vertex Transformer Installation


The directions and diagrams enclosed herein are intended to illustrate the proper installation and wiring of transformers designed to step-down or step-up site voltage to proper levels for Vertex® operation. The information provided has been gathered from Sola/Hevi-Duty for use with their products as specified in this document. For more information on these transformer units, refer to www.solaheviduty.com or Sola Hevi-Duty Technical Services 1-800-377-4384.

These instructions are for high voltage equipment operating life safety equipment. Only qualified electricians or approved Honeywell Analytics service representatives should perform these tasks. Honeywell Analytics is not liable for any damages caused by incorrect installation by unauthorized or unqualified third parties, of electrical apparatus to the Vertex® monitor

Design Characteristics

- UL-3R enclosures for indoor and outdoor service
- Electrostatically shielded for quality power on sizes 1 KVA and larger
- UL class 180°C insulation system, 115°C temperature rise under full load
- Conduit knockouts for side entry into wiring compartment
- Copper lead wire terminations
- Units are encapsulated with electrical grade silica sand

Design Style

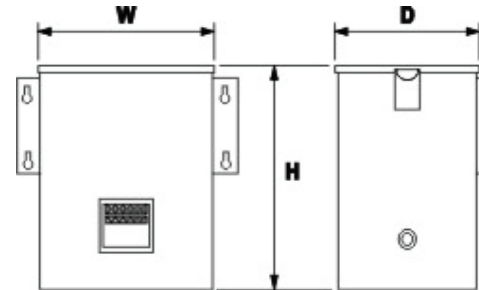

Style 4


| HA Part Number | Catalog Number | KVA | H | W | D | Ship Wt |
|----------------|----------------|-----|----|----|---|---------|
| 0060-1020 | HS5F5AS | 5 | 17 | 14 | 9 | 104 |
| 0060-1021 | HS12F5AS | 5 | 17 | 14 | 9 | 104 |

| HA Part Number | Primary Amps | Secondary Amps |
|----------------|--------------|----------------|
| 0060-1020 | 20.8/10.4 | 41.6/20.8 |
| 0060-1021 | 18.0 | 41.6/20.8 |


Vertex™ 72-Point Continuous Monitor

Step-Down Wiring

0060-1020 as Step-Down Transformer 480v to 240v
 240 x 480 Volt Primary, 120/240 Volt Secondary,
 Taps: 2, 2½% FCAN & FCBN

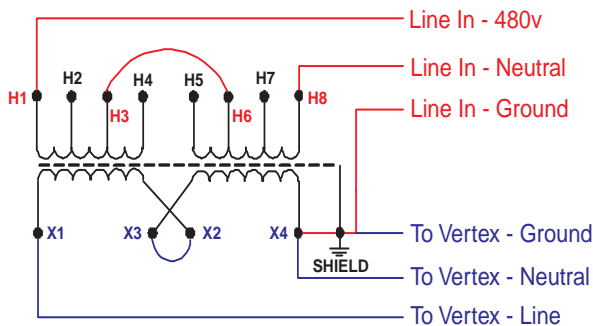


Single 480VAC Line In

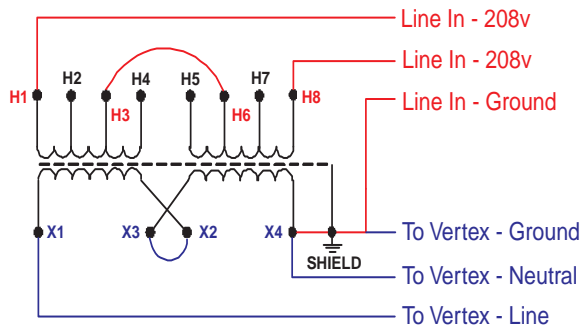


2 208VAC Lines In

| Primary Voltage | Interconnect | Connect Lines to: |
|----------------------------------|--------------|-------------------|
| 480 | H3 to H6 | H1 and H8 |
| Secondary Voltage | Interconnect | Connect Lines to: |
| 240 | X2 to X3 | X1 and X4 |
| *Connect X4 to Ground and Shield | | |

0060-1021 as Step-Up Transformer 208v to 240v
 120/208/240/277 Volt Primary, 120/240 Volt
 Secondary, Taps: None

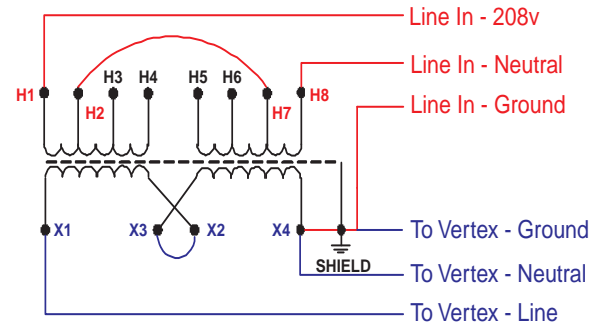

Single 208VAC Line In

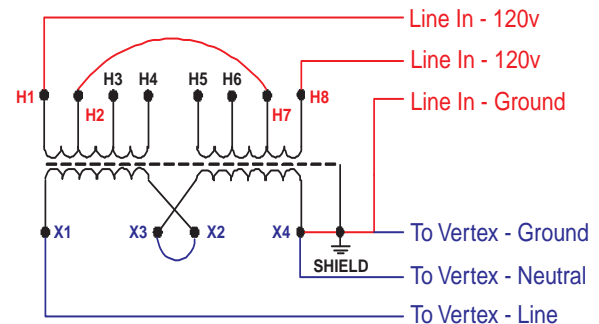

2 120VAC Lines In


| Primary Voltage | Interconnect | Connect Lines to: |
|----------------------------------|--------------|-------------------|
| 208 | H2 to H7 | H1 and H8 |
| Secondary Voltage | Interconnect | Connect Lines to: |
| 240 | X2 to X3 | X1 and X4 |
| *Connect X4 to Ground and Shield | | |

Overcurrent Protection

Step-Up Wiring


Vertex™ 72-Point Continuous Monitor

1. Primary protection only is required if the transformer is single-phase and the secondary has only two wires. Overcurrent protection rating and location are shown below.

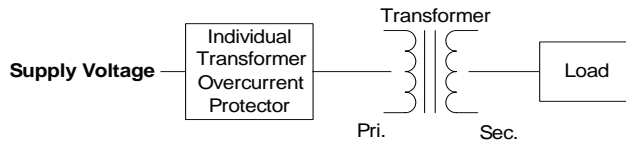


| Primary Current | Overcurrent Protection Rating |
|------------------|---|
| Less than 2 amps | 300% of maximum |
| 2 to 9 amps | 167% of maximum |
| 9 amps or more | 125% of rated primary current (or next highest standard rating) |

2. If the branch circuit feeding the transformer has overcurrent protection to meet the individual protection requirements in Example 1, then individual transformer protection is not required.

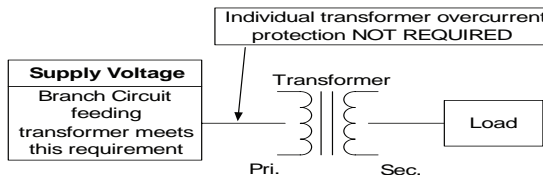


| Primary Current | Overcurrent Protection Rating |
|------------------|---|
| Less than 2 amps | 300% of maximum |
| 2 to 9 amps | 167% of maximum |
| 9 amps or more | 125% of rated primary current (or next highest standard rating) |

1. Primary and secondary protection is required if the transformer has more than two wires on the secondary circuit.

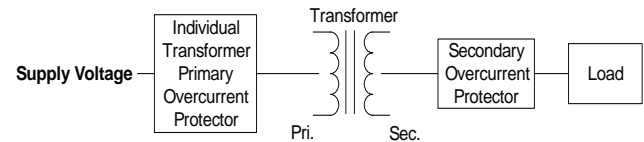

| Primary Current | Secondary Current | Overcurrent Protection Rating |
|----------------------|-------------------|---|
| 250% Primary Current | Less than 9 amps | 167% of maximum |
| Not more than 250% | 9 amps or more | 125% of rated primary current (or next highest standard rating) |

2. If the branch circuit feeding the transformer has overcurrent protection to meet the individual primary overcurrent protection requirements in Example 3, then individual primary protection is not required. Secondary OCP is required as shown below.

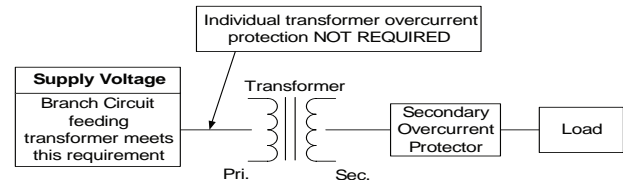

| Primary Current | Secondary Current | Overcurrent Protection Rating |
|----------------------|-------------------|---|
| 250% Primary Current | Less than 9 amps | 167% of maximum |
| Not more than 250% | 9 amps or more | 125% of rated primary current (or next highest standard rating) |

Vertex™ 72-Point Continuous Monitor

2.6.3.1 Specification Guide for Transformers - 2.6.3.1 Low Voltage, Special Purpose, Dry Type (600 Volt class) - 15 KVA and larger

General

Single and three phase distribution transformers (600 Volt and below)

- Provide and install, as referenced on the electrical plans, enclosed dry type transformers as manufactured by Sola/Hevi-Duty or approved equal.

Standards

- Transformers must be listed by Underwriters Laboratory, certified with Canadian Standards Association and designed, constructed and rated in accordance with NEMA ST 20 and applicable IEEE & OSHA specifications.

Construction

Cores

- All transformer cores shall be constructed of low loss, high quality, electrical grade laminate steel. By design, the flux density is to be kept well below the saturation level to reduce audible sound level and minimize core losses. The core volume shall allow operation at 10% above rated primary voltage at no load without exceeding the temperature rise of the unit.

Coils

- Coil conductors shall be either aluminum or copper and must be continuous. The entire core and coil assembly shall be impregnated with a thermal setting varnish and cured to reduce hot spots in the coils and seal out moisture. Coils with exposed magnet wire will not be acceptable. Transformers shall have common core construction.
- All transformers shall incorporate a faraday (electrostatic) shield between primary and secondary windings for the attenuation of voltage spikes, line noise and voltage transients.
- Transformers shall be provided with six 2.5% full capacity taps – two above and four below primary rated voltage.
- General purpose transformers are classified as isolation transformers.

Enclosures

- Transformer enclosures shall be constructed of heavy gauge sheet steel and coated with a grey powder paint finish (ANSI 61). Ventilated transformer enclosures shall be UL/NEMA Type 1 rated and UL/NEMA Type 3R rated for outdoor use with the addition of a weather shield. This information must be listed on the transformer nameplate.
- Maximum transformer enclosure temperature will not exceed 650C rise above a 400C ambient under full load.

Vertex™ 72-Point Continuous Monitor

- Transformers must have vibration isolators located between the core and coil assembly and the transformer enclosure to reduce audible sound levels caused from magnetostriction of the transformer core. No externally located vibration dampening pads shall be used as they tend to increase audible noise. Ventilated transformers are to be floor mounted to a concrete pad.
- The transformer enclosure must be grounded by the installer in accordance with the latest edition of the National Electric Code and any local codes or ordinances.

Performance


- Audible sound levels will not exceed limits established in NEMA ST 20:
 - 10 to 50 KVA 45 db
 - 51 to 150 KVA 50 db
 - 151 to 300 KVA 55 db
 - 301 to 500 KVA 60 db
- Transformers, 15 KVA to 500 KVA, shall incorporate a UL recognized 2200C insulation system and exhibit a maximum 1500C temperature rise above a maximum ambient of 400C under full load.

Vertex™ 72-Point Continuous Monitor

2.6.4 Power On/Off

An internal rack power switch is located behind the touch screen door.

After performing self-diagnostics, the Vertex System main screen opens and the system returns to the same state it was in prior to power down.

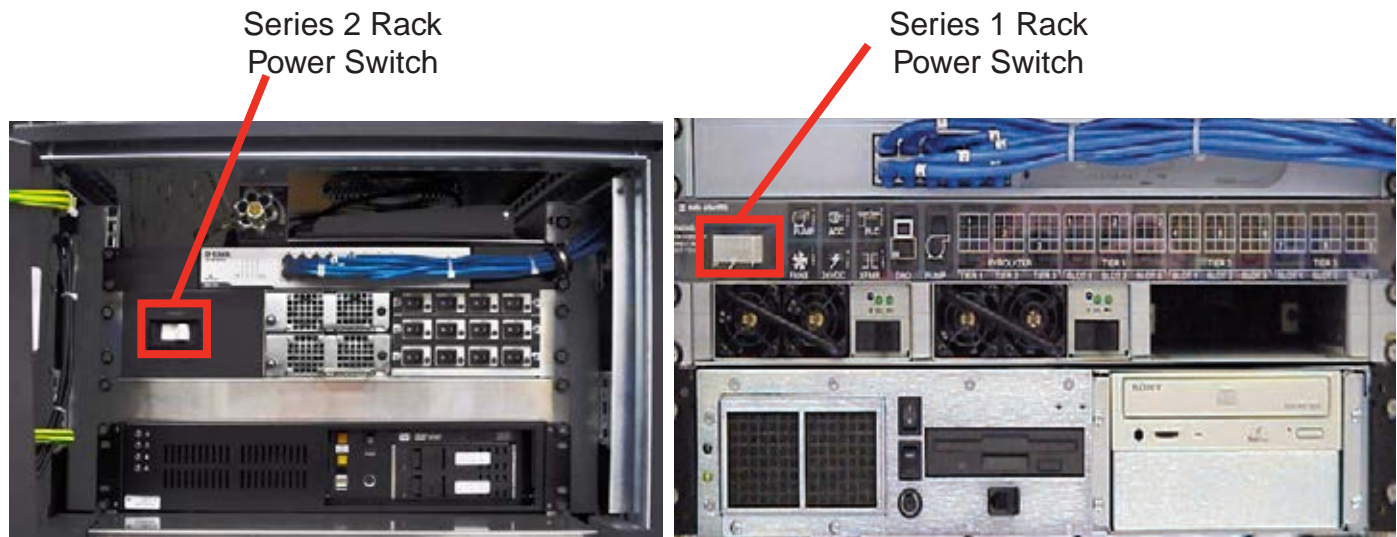

Rack Power Switch



WARNING

Hazardous voltages may exist at the Alarm Contacts in this unit with the power switch turned off. Insure power is disconnected at the source prior to servicing alarm contacts.

Vertex™ 72-Point Continuous Monitor

2.7 Data Acquisition System

The data acquisition computer or DAq is the main computer in the Vertex System. System display and operator control are through an LCD touch screen with on-screen keyboard.

The on-screen keyboard operates similar to a standard keyboard except when using modifier keys (CTRL, ALT, or SHIFT).

To use modifier keys:

1. Touch the modifier key. The key changes to show the modifier key is locked down.
2. Press the second key of the key combination.



Keyboard Storage




On-screen Keyboard

2.7.1 Optional Keyboard

An optional keyboard, with touch pad, is stored behind the display. Use the keyboard to enter text fields at the unit or as a backup to the touch screen.

See illustrations.

Vertex™ 72-Point Continuous Monitor

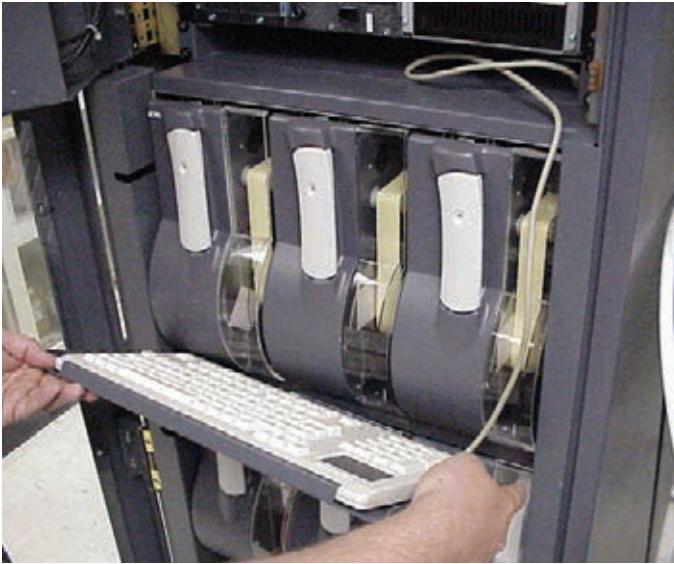

Hooking keyboard to the front of the system

To install the keyboard:

1. Open the display.
2. Remove keyboard from storage shelf. All cables are connected.



Hook front of keyboard tray into slot under first tier of analyzers.


Vertex™ 72-Point Continuous Monitor



1. While holding keyboard tray, push locking pins toward center of tray.
2. Align locking pins with holes in side rail of cabinet.
3. Release pins to lock tray into side of rails of cabinet.
4. Close and latch display.

2.7.2 Printer

The Vertex System software can be programmed to print to either a network or local printer. To install a local printer, connect it to the parallel printer port as shown. You may also use the USB port. The correct printer driver must also be installed.

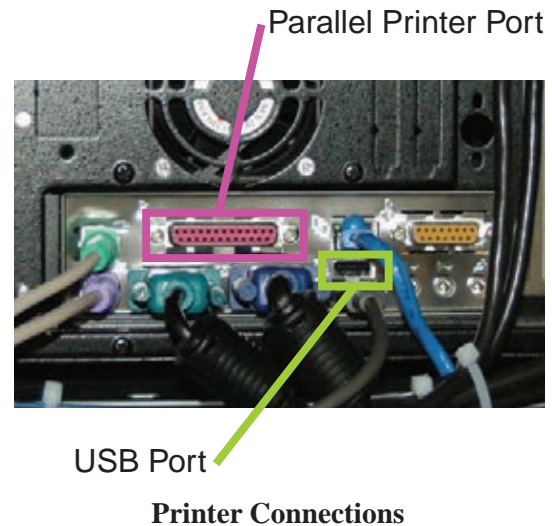


Vertex™ 72-Point Continuous Monitor

2.7.3 External Network Connection

The Vertex System can be connected to an external Ethernet network at the port shown.

External Ethernet Connector

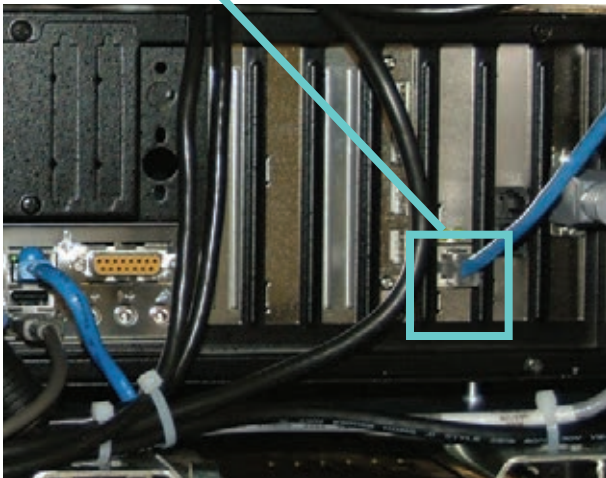

External Ethernet Ferrite

2.7.4 Network Computer Security

The Vertex relies on the RSView system of accounts and passwords to prevent unauthorized tampering as described in section 4.6.6 of this manual. Microsoft Windows provides its own system of accounts and passwords. However RSView32 requires that Windows be run in an account with administrator privileges. Attempting to run the Vertex RSView32 application in a Windows account without administrator privileges will cause error messages to be displayed. The Vertex should be treated and secured as any other networked PC by maintaining the appropriate virus protection and remaining current with Microsoft updates. Use an external hardware firewall to isolate the monitor from malicious Ethernet traffic.



CAUTION

Do not connect an external network to the Vertex Ethernet hub. Use only the external Ethernet connection (as shown above) on the back of the data acquisition computer. Connecting an external network to the hub will impair monitoring capability.

Note:

To maintain EMC certification, the ethernet cable should make 4 loops through the supplied ferrite cable clamp. The clamp should remain on the outside of the Vertex enclosure.

Vertex™ 72-Point Continuous Monitor

2.8 Wiring Alarm Relays

This section describes relay:

- Contacts
- Ratings
- Wiring guidelines



WARNING

Use caution when servicing the PLC terminal blocks. Power to contacts is supplied externally. See [Appendix E, Optional Relay Specifications](#), for alarm relay voltage and contact rating guidelines.

2.8.1 Relay Contacts

The Vertex System has form-A, single-pole, single-throw relays that activate external alarm devices. Contacts are available for each circuit to accommodate installation of external devices.

Relay panels are located at the back of the Vertex System. See [Appendix E, Optional Relay Specifications](#), for information.

2.8.2 Wiring Guidelines

To wire the alarm relays:

- Use agency approved wire (such as NRTL in the U.S.) with 300 volt insulation.




CAUTION

Make sure there is proper separation between the 230 volt power supply and alarm wiring.

- Route relay wiring through raceway and out through the top of the cabinet.

Relay Wire Raceway

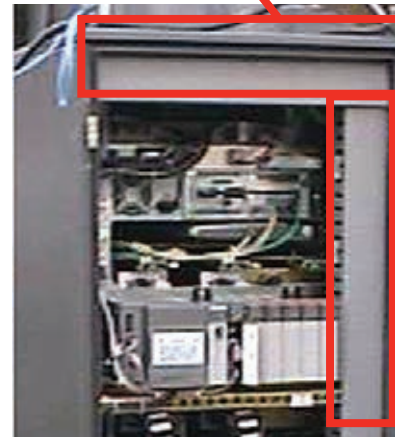

- Use shielded cable or conduit.



CAUTION

Failure to replace and retighten hardware after servicing can adversely affect monitor performance and EMC compliance. Make certain all fasteners are reinstalled and firmly tightened. This will ensure a proper ground.

Vertex™ 72-Point Continuous Monitor

- Use a single, solid or stranded wire (not exceeding 14 gauge or 2.5 mm²) per terminal block connection.
- Do not switch DC current with the relay contact unless you are using counter electromotive force (CEMF) protection such as a suppression diode.
- Do not use the Vertex System power supply for external alarm power.

Note:

Make sure all connections comply with applicable RFI/EMI standards.


Validating the System

The Vertex and Chemcassette products' design, manufacture, and recommended maintenance ensure the correct operation of the system. For validation or commissioning after installation by gas exposure, these Technical Notes are available upon request from Honeywell Analytics:

1998-0837 *Calibration and Verification*

1998-0219 *Detector Testing Protocols*

Alarm Wiring Conduit Plates

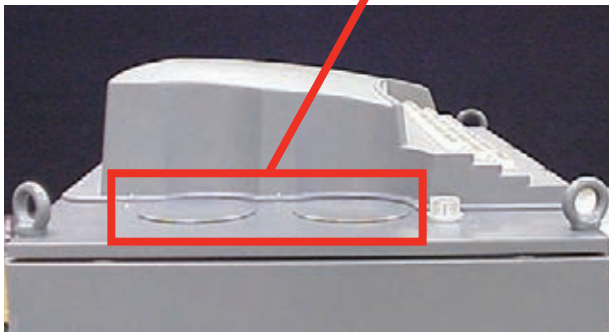

3 Startup

3.1 Startup

This section describes the Vertex System startup sequence.

3.1.1 Initial Startup

Use this section to turn on your Vertex System and to configure the analyzer modules for specific gas locations. There are six parts to this startup procedure:

- [3.5 Power Up](#)
- [3.6 Start Program](#)
- [3.7 Configuration Utility](#)
- [3.8 Load Tape](#)
- [3.9 Leak Checking Sample Lines](#)
- [3.10 Verify Flow Rates and Supply Vacuum](#)

3.1.2 Factory Configuration

Honeywell Analytics loads all software on the DAq at the factory. The Universal Chemcassette® Analyzers are configured for the mineral acid family of gases and the Pyrolyzer Analyzers for NF_3 . You will need to configure each point for the target gases at your facility.

Vertex™ 72-Point Continuous Monitor

3.2 Getting Started

Before startup and configuration, gather the following information:

- The location to which each point is connected
- Target gas at each location
- Alarm levels
- Relay configuration

3.3 Verify Installation

Ahead of the startup sequence, make sure that the following installation steps have been completed:

- Sample lines
- Exhaust line
- AC power connection
- Relay wiring

See [Section 2, Installation](#), for connection details.

3.4 Startup Sequence

The following sections describe the startup sequence:

- [3.5 Power Up](#)
- [3.6 Start Program](#)
- [3.7 Configuration Utility](#)
- [3.8 Load Tape](#)
- [3.9 Leak Checking Sample Lines](#)
- [3.10 Verify Flow Rates and Supply Vacuum](#)

Vertex™ 72-Point Continuous Monitor

3.5 Power Up


Use the rack power switch behind the touch screen door to power up the Vertex System.

1. Open touch screen door.
2. Turn on rack power switch.
3. Turn on power switch to appropriate analyzers.
4. Close and latch touch screen door.

After 15 seconds, the analyzer status LEDs sequence four times through all colors.

Analyzer / Pyrolyzer Power Switches and Indicators


Rack Power Switch

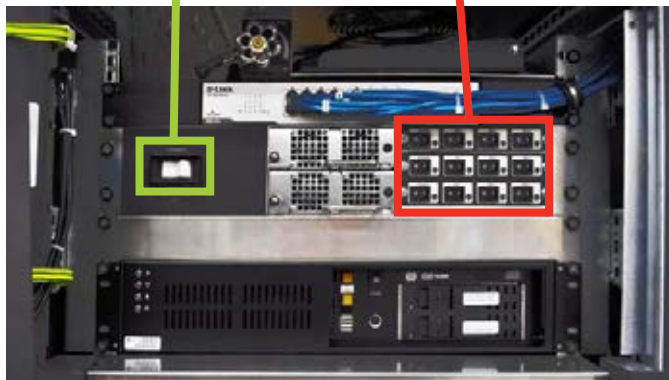

Series 2 Units

Analyzer / Pyrolyzer Power Switches and Indicators

Rack Power Switch

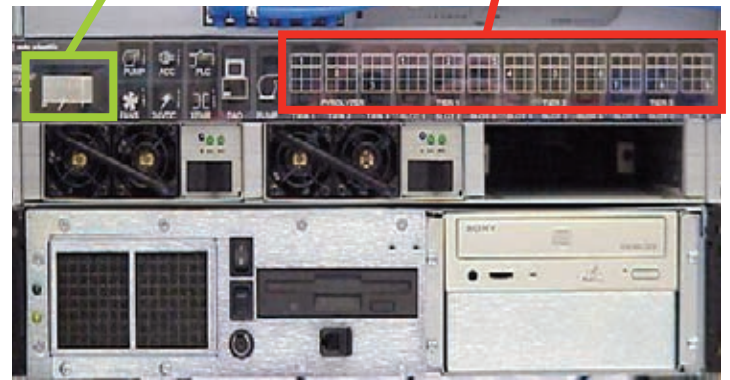

Series 1 Units

Vertex™ 72-Point Continuous Monitor

After the initial color sequence, the Analyzer LEDs show system status. The following chart matches analyzer status with LED signals.

| Mon State | Alarm State | Fault State | time in millesconds | | | | | | | | | |
|-------------------------|-------------|-------------|---------------------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| | | | 500 | | | | 400 | | | | 100 | |
| idle | 0 | none | black | | | | | | | green | | |
| | | maintenance | amber | | | | | | | black | | |
| | | instrument | amber | | | | black | | | | | |
| | 1 | any | red | | | | | | | black | | |
| | 2 | any | red | | | | black | | | | | |
| pyrolyzer warmup | 0 | none | green | | | | black | | | | | |
| | | m or i | green | | | | black | | amber | | | |
| | 1 | any | green | | | | black | | red | | | |
| monitoring | 0 | none | green | | | | | | | black | | |
| | | maintenance | amber | | | | | | | green | | |
| | | instrument | amber | | | | green | | | | | |
| | 1 | any | red | | | | | | | green | | |
| | 2 | | red | | | | green | | | | | |
| primary program invalid | | | amber | black | amber | black | amber | black | amber | black | amber | black |
| unpowered | | | black | | | | | | | | | |
| lockup | | | green | | | | | | | | | |
| | | | amber | | | | | | | | | |
| | | | red | | | | | | | | | |

Table 3-1: Analyzer Status LEDs

3.6 Start Program

Upon power-up, the DAq automatically starts Windows and loads the Vertex program. After the two-to-three minute startup sequence, the Vertex main screen opens.

Note:

Any time the Vertex System is powered up, loss of communications may cause maintenance faults.

See [Section 4.5.4, Event List](#), for instructions to clear faults.

Note:

Use the Windows Date/Time Properties dialog box to change the time zone, time and date on your Vertex System. Stop project if adjusting time and time zone. Once complete restart project.



CAUTION

Do not change language in Windows setup.

Vertex™ 72-Point Continuous Monitor

| MON1 1-1 CC | | MON1 1-2 CC | | | | Pump 1 | Pump 2 | Monday, July 10, 2006 | | | | | | | |
|---------------------|---------------------|-----------------------|-----------------------|--|--|------------|-------------|---|--|---------------|------------|---------------|------------|-----------|--|
| Point 1-1-1 AsH3 | Point 1-1-5 AsH3 | Point 1-2-1 NH3-II | Point 1-2-5 NH3-II | | | GOOD ON | GOOD OFF | 12:03:10 PM | | | | | | | |
| Point 1-1-2 AsH3 | Point 1-1-6 AsH3 | Point 1-2-2 NH3-II | Point 1-2-6 NH3-II | | | | | Config File: Mike1.za_VT | | | | | | | |
| Point 1-1-3 AsH3 | Point 1-1-7 AsH3 | Point 1-2-3 NH3-II | Point 1-2-7 NH3-II | | | | | USER ID: DEFAULT | | | | | | | |
| Point 1-1-4 AsH3 | Point 1-1-8 AsH3 | Point 1-2-4 NH3-II | Point 1-2-8 NH3-II | | | | | Location: Point 1-1-1 | | | | | | | |
| | | | | | | | | Analyzer: CC | | | | | | | |
| | | | | | | | | Tier Slot Pt: 1-1-1 | | | | | | | |
| | | | | | | | | Point: Enabled | | | | | | | |
| | | | | | | | | Alarms: Enabled | | | | | | | |
| | | | | | | | | <table border="1"> <thead> <tr> <th>Gas</th> <th>Conc</th> <th>Alarm</th> </tr> </thead> <tbody> <tr> <td>AsH3</td> <td>0.000 ppb</td> <td></td> </tr> </tbody> </table> | | Gas | Conc | Alarm | AsH3 | 0.000 ppb | |
| Gas | Conc | Alarm | | | | | | | | | | | | | |
| AsH3 | 0.000 ppb | | | | | | | | | | | | | | |
| | | | | | | | | Point Color Legend: Runtime Alarm Disabled Normal Runtime Pt Disabled Alarm Not Configured | | | | | | | |
| | | | | | | | | <table border="1"> <tr> <td>Event History</td> <td>Data Trend</td> <td>Point Details</td> <td>Event List</td> </tr> </table> | | Event History | Data Trend | Point Details | Event List | | |
| Event History | Data Trend | Point Details | Event List | | | | | | | | | | | | |
| | | | | | | | | <table border="1"> <tr> <td>MENU</td> <td>REVIEW</td> <td>PROJECT</td> <td>HELP</td> </tr> </table> | | MENU | REVIEW | PROJECT | HELP | | |
| MENU | REVIEW | PROJECT | HELP | | | | | | | | | | | | |
| MON1 3-2 CC-Pyro | | MON1 3-3 CC | | | | | | | | | | | | | |
| Point 3-2-1 NF3 | Point 3-2-5 NF3 | Point 3-3-1 HF | Point 3-3-5 HF | | | | | | | | | | | | |
| Point 3-2-2 NF3 | Point 3-2-6 NF3 | Point 3-3-2 HF | Point 3-3-6 HF | | | | | | | | | | | | |
| Point 3-2-3 NF3 | Point 3-2-7 NF3 | Point 3-3-3 HF | Point 3-3-7 HF | | | | | | | | | | | | |
| Point 3-2-4 NF3 | Point 3-2-8 NF3 | Point 3-3-4 HF | Point 3-3-8 HF | | | | | | | | | | | | |

Vertex Main Screen

3.7 Configuration Utility

Before the Vertex System can begin monitoring, you must create a configuration profile. The configuration profile stores all of the monitor settings in a single file on the hard drive. Configuration profiles include system level information, point settings and analyzer information. Use the Configuration menu to create a new configuration profile or modify an existing profile.

To open the Configuration Menu, touch Main Screen, Menu and then Configuration.


Vertex™ 72-Point Continuous Monitor

Set Initial Configuration

Enter information and set parameters common to all points and modules.

Configure Analyzer / Points

Defines the type of analyzer module installed in each slot. Designates the target gas. Sets alarm levels for each point.

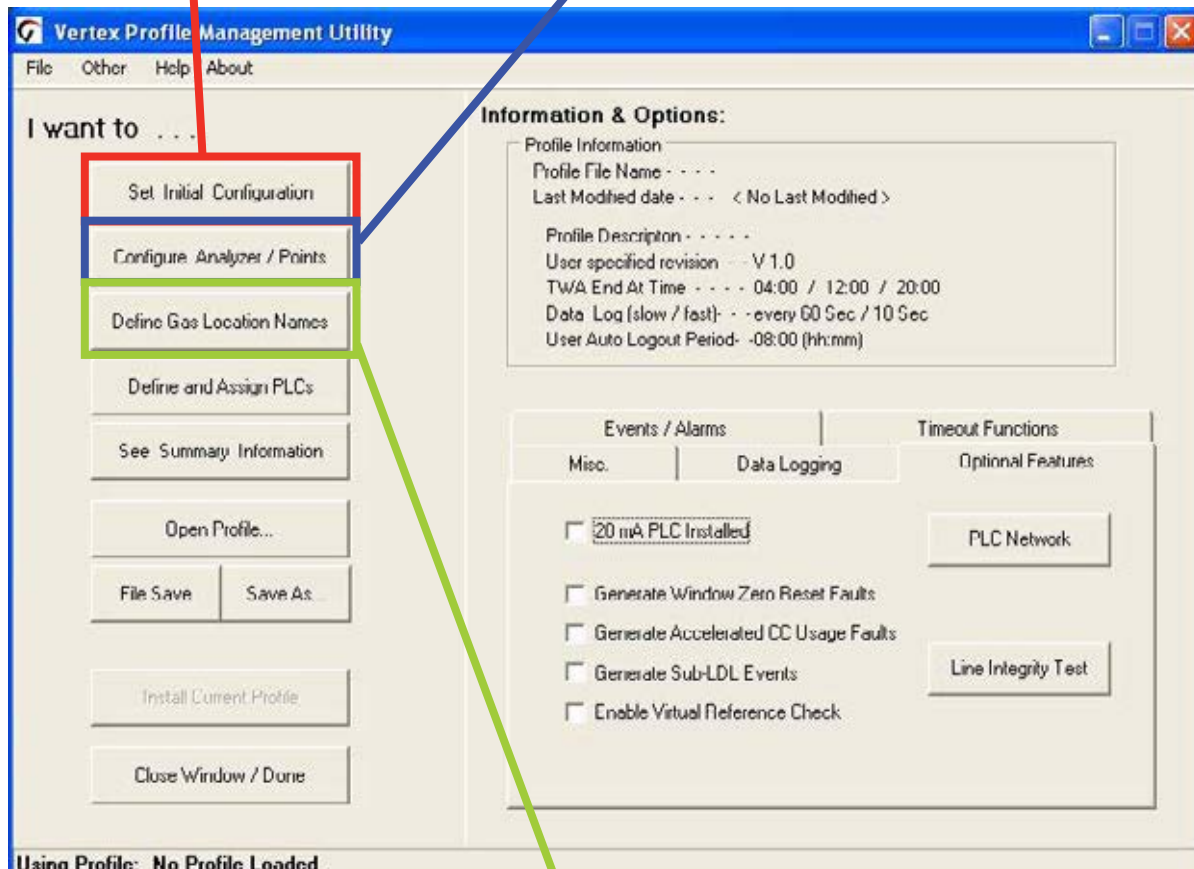

Define Gas Location Names

Enter the short and long name for each monitored location.


Vertex™ 72-Point Continuous Monitor

Define and Assign PLCs

Associate relays with software alarms and faults;
associate optional 4-20 mA output with points.

Information

A display of key parameters
about the Vertex System.

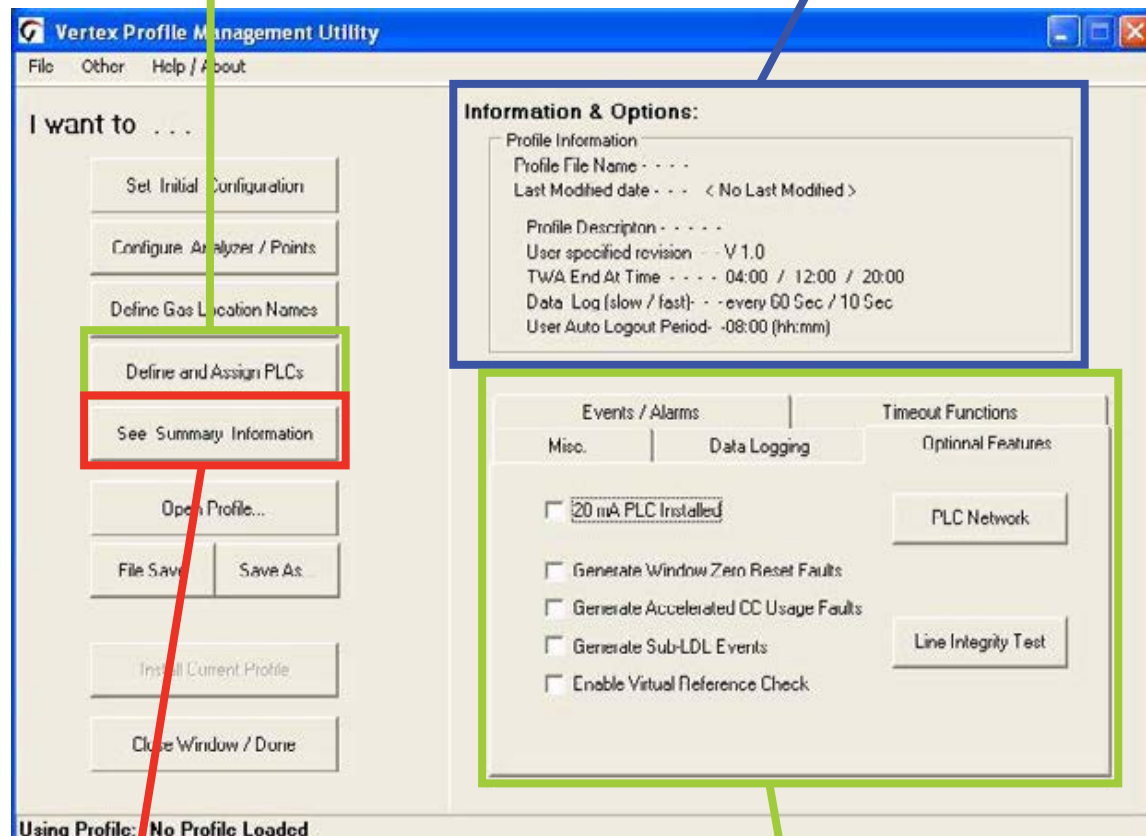

See Summary Information

A tabular listing of the
configuration profile.


Options

Select a tab to enter information and
set parameters common to all points
and modules.

Vertex™ 72-Point Continuous Monitor

Install Profile Status

During the installation process, a dialog box will be shown that indicates the status and final result of the installation.

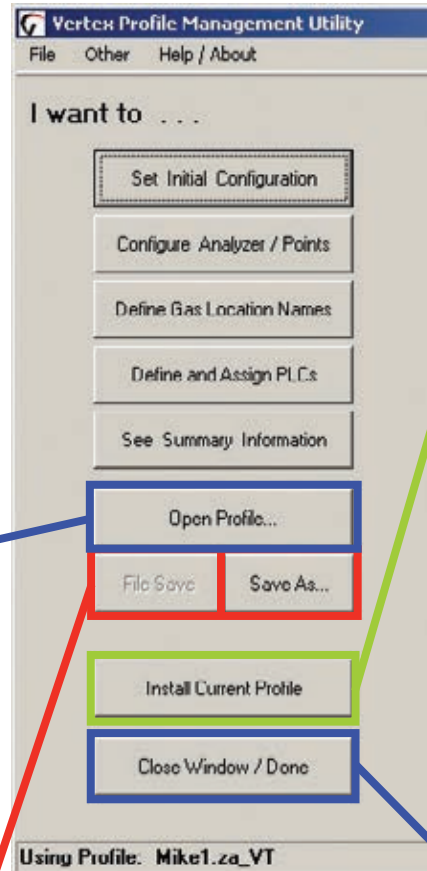

Open Profile...

Opens a previously saved profile.

File Save/Save As...

Saves current profile on disk. Vertex will prompt you to save changes when closing the Configuration window.

Install Current Profile

Not active while creating configuration profiles on a computer other than the one running the Vertex system. Loads the current configuration settings into the appropriate analyzers and PLCs. If the Vertex System is in a monitoring state, the program will open a dialog box to verify that it is okay to take the Vertex System out of monitor during the profile installation.

Close Window/Done

Exits Configuration setup


Vertex™ 72-Point Continuous Monitor

Non-Latching Gas Alarm Relays

A latching gas alarm relay activates when a gas concentration reaches a level 1 or level 2 alarm setting. The relay remains activated until an authorized operator resets the alarm. Non-latching gas alarm events clear themselves as soon as the gas concentration drops below the alarm setting.

Inverted Gas Alarm Relays

Vertex alarm relays, by default, are normally open (de-energized) when no alarm condition exists. If this option is checked, the alarm relays will be normally closed (energized) when there is no alarm. Fault relays are not affected by this option and are always normally closed (energized) unless a fault condition exists.

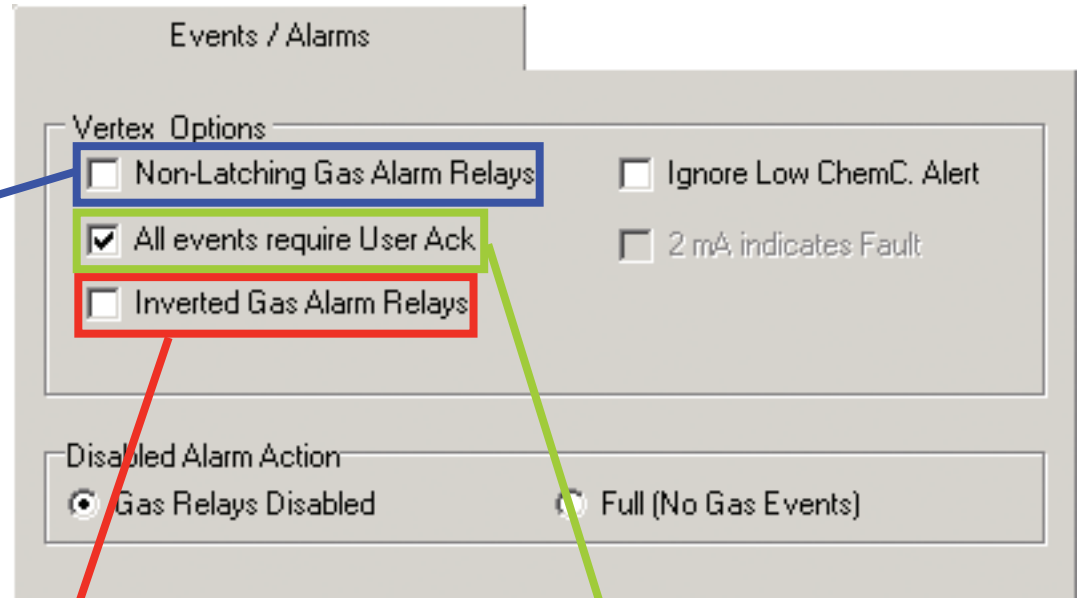

All events require User Ack

When selected, non-latching alarm events will not be removed from the event list until an authorized user acknowledges the event. Fault and latching alarm events are not affected by this option, since an authorized user must reset these events and a reset also serves as an acknowledgement.

Vertex™ 72-Point Continuous Monitor

Vertex software tracks the amount of Chemcassette® tape remaining on the supply reel and triggers a low tape event when less than 24 hours of tape remain. Choosing “Ignore Low ChemC. Alert” disables the low tape event.

Events / Alarms

Vertex Options

- Non-Latching Gas Alarm Relays
- All events require User Ack
- Inverted Gas Alarm Relays
- Ignore Low ChemC. Alert
- 2 mA indicates Fault

Disabled Alarm Action

- Gas Relays Disabled
- Full (No Gas Events)

Disabled Alarm Action - Gas Relays Disabled or Full (No Gas Events)

This setting effects the operation when alarms are disabled using the Runtime Options screen. If “Full” is selected, Vertex will not generate an alarm event for the affected point(s) and none of the associated actions such as relay actuation will occur. Otherwise, the alarm events will be generated normally when using data output options but, the alarm relays ONLY will not be activated in response to the event. When utilizing data output options, it is highly recommended that “Full” be selected to prevent unnecessary alarms.

Vertex™ 72-Point Continuous Monitor

Set Timeout Values

Authorized users may temporarily disable alarms from activating and points from monitoring. A point or alarm that is disabled longer than the timeout limit will cause a maintenance fault which will call attention to locations excluded from monitoring. Enter a period of time up to displayed minutes or 0 to disable the maintenance fault.

Internal Filter Life (in Days)

Set the number of days the filters will last before they need to be replaced. When the target is reached, this setting will trigger a maintenance fault to replace filter.

Timeout Functions

Set Timeout Values

60 Disabled Alarm (0 - 240 min)

60 Disabled Point (0 - 240 min)

60 Az Out of Mon. (0 - 60 min)

Internal Filter Life (in Days)

Disable Filter Life

090 Monitoring Days (1 - 180)

User Specified Auto Logout

08:00 Hours : Minutes (by 30's)

User Specified Auto Logout

Users remain logged in until the auto logout period lapses. The auto logout period ranges from 30 minutes to 24 hours. A warning displays prior to auto logout.

Vertex™ 72-Point Continuous Monitor

The screenshot shows a 'Data Logging' configuration window. At the top is a 'Data Logging' title bar. Below it, there are two main sections. The left section is titled 'Slow / Fast Logging Rate' and contains two dropdown menus. The first is labeled 'Log once every' and has '5 Sec' selected, with 'Slow rate' to its right. The second is labeled 'Fast Rate' and has '20 Sec' selected. To the right of these is a 'DB Mgmt' button. Below the logging rate section is a red-bordered box containing the text 'Enter 1st TWA time of the day' and a text input field with '12:00' entered. A red line originates from the bottom of this red box and points towards the '1st TWA Time' section below.

1st TWA Time

Use to set times for the beginning and end of each 8-hour, Time Weighted Average (TWA) period. Use this option to associate the TWA periods with shifts or any other regular event. The system calculates and displays the TWA after each 8-hour TWA cycle.

The default setting is 04:00 indicating that the Vertex will run three successive TWA periods from 04:00 to 11:59, 12:00 to 19:59, 20:00 to 03:59. Remember, the Vertex System uses a 24-hour clock. For example, to set the first TWA to 3:00 P.M., enter 15:00. If you view the profile information for this example, you will see the TWA End At Time is 07:00/15:00/23:00. The system automatically sets the beginning times of the second and third TWA periods at 8-hour intervals from the time entered for the first TWA period.

Vertex™ 72-Point Continuous Monitor

Logging Rate

The Logging Rate option sets the frequency that Vertex enters gas concentration data into the database. The system logs data at a slow rate unless a gas concentration rises above the threshold set in the point configuration window. Once the concentration reaches the threshold, Vertex logs at a faster rate. Logging period options are 5, 10, 30, 60, or 120 seconds for the slow rate and 5, 10, 15, 20, 30, or 45 seconds for the fast rate. (See [Section 3.7.4, Configure Point](#), for instructions to set logging frequency.)

DB Management

Sets the time period to maintain historical event and concentration data before purging. Set the purge period in Database Management to prevent a large number of records to accumulate.

The screenshot shows a configuration window for the Vertex 72-Point Continuous Monitor. At the top, there is a tab labeled "Data Logging". Below this, there is a section titled "Slow / Fast Logging Rate" which contains two dropdown menus. The first dropdown is labeled "Log once every" and is set to "5 Sec" with the label "Slow rate" next to it. The second dropdown is also labeled "Log once every" and is set to "20 Sec" with the label "Fast Rate" next to it. Below these dropdowns, there is a section titled "Enter 1st TWA time of the day" with a text box containing "12:00". To the right of the "Data Logging" section, there is a section titled "DB Mgmt" which is highlighted with a blue box. A blue line points from the "DB Management" text above to this "DB Mgmt" box. A green line points from the "Logging Rate" text above to the "Slow / Fast Logging Rate" section.

Note:

Setting the Vertex System to continuously log concentration data on a nine-analyzer system requires approximately 35 megabytes of disk storage per day at the fastest logging rate of once every 5 seconds. Purge data often to avoid filling available disk space.

Vertex™ 72-Point Continuous Monitor

Database Management-Retention Periods

Retention periods are selected as either days or weeks. Valid entries for the period are positive numbers from 1-99. Vertex will not recalculate the values when the unit is changed. For example, if the purge period is 14 days and you change “days” to “weeks”, Vertex will set the period to 14 weeks. Vertex performs the record purge as the data acquisition computer clock passes midnight.

Event Record Retention Period

When selected, Vertex automatically purges events from the database after the designated period.

Logged Data Record Retention Period

When selected, Vertex automatically purges concentration records from the database after the designated period.

The screenshot displays a dialog box with two main sections for retention periods. The left section, titled "Event Record Retention Period", has a blue border and contains an unchecked checkbox for "Purge Records from database", a text field showing "26", and radio buttons for "Days" and "Weeks" (with "Weeks" selected). The right section, titled "Logged Data Record Retention Period", has a green border and contains a checked checkbox for "Purge Records from database", a text field showing "45", and radio buttons for "Days" and "Weeks" (with "Days" selected). At the bottom of the dialog are "OK" and "Cancel" buttons.



Vertex™ 72-Point Continuous Monitor

20 mA PLC Installed

An optional 20 mA current-loop alarm system is available from Honeywell Analytics. A separate cabinet houses the 20 mA PLC (programmable logic controller). Choose “20 mA PLC Installed” if this option is part of your system. Connecting relays and current loop outputs is covered by the manual for the PLC modules.

Fieldbus

Use this setting to select the PLC network interface that is installed.

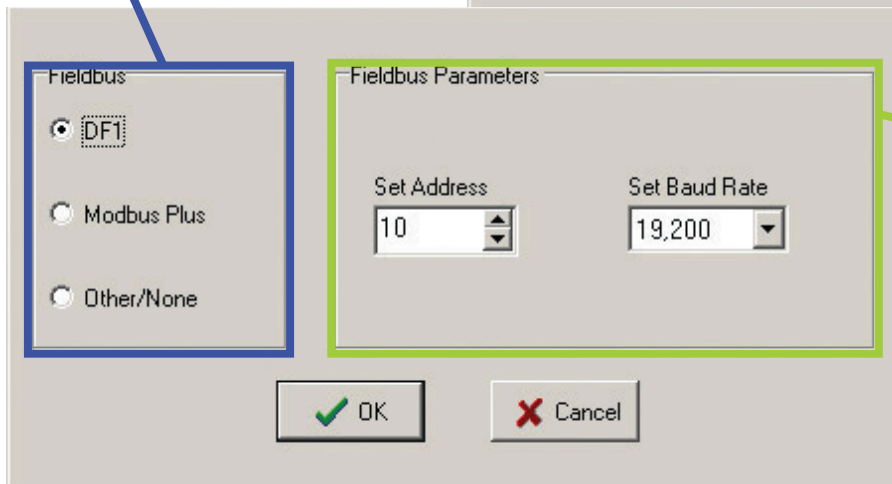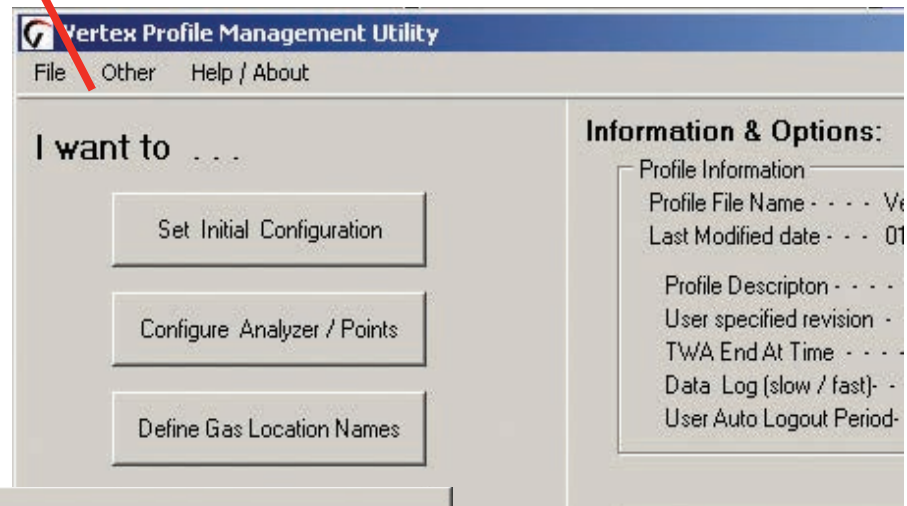

Fieldbus Parameters

These settings allow the user to change network specific parameters such as address and baud rate

Vertex™ 72-Point Continuous Monitor

Use mg/m³ units

Select to display concentrations in milligrams per cubic meter. If this option is not selected, Vertex displays concentrations in parts-per-million (ppm) or parts-per-billion (ppb).

Profile Description

Enter a descriptive name for the configuration profile. You may use up to 32 characters.

Misc.

Use mg/m³ units

Enter User Profile Information

User supplied desc. (32 chars)

V 1.3 User specified Profile File revision

User File Rev

Allows the user to assign a revision number to a configuration profile. The profile revision number is not associated with software version numbers.

Vertex™ 72-Point Continuous Monitor

3.7.1 Define Gas Location

Use Define Gas Location to edit the list of locations. Assign a long and a short name for each location.

Short names

Enter up to 12 characters. Vertex displays the short name where space does not permit the display of the long name.

Map Location To Point

Brings up Location Map window.

Clear All Entries


Clears every entry in the list.

Add New Entry

Creates a new entry in the gas location list using the entered short and long names.

Long names

Enter up to 35 characters.

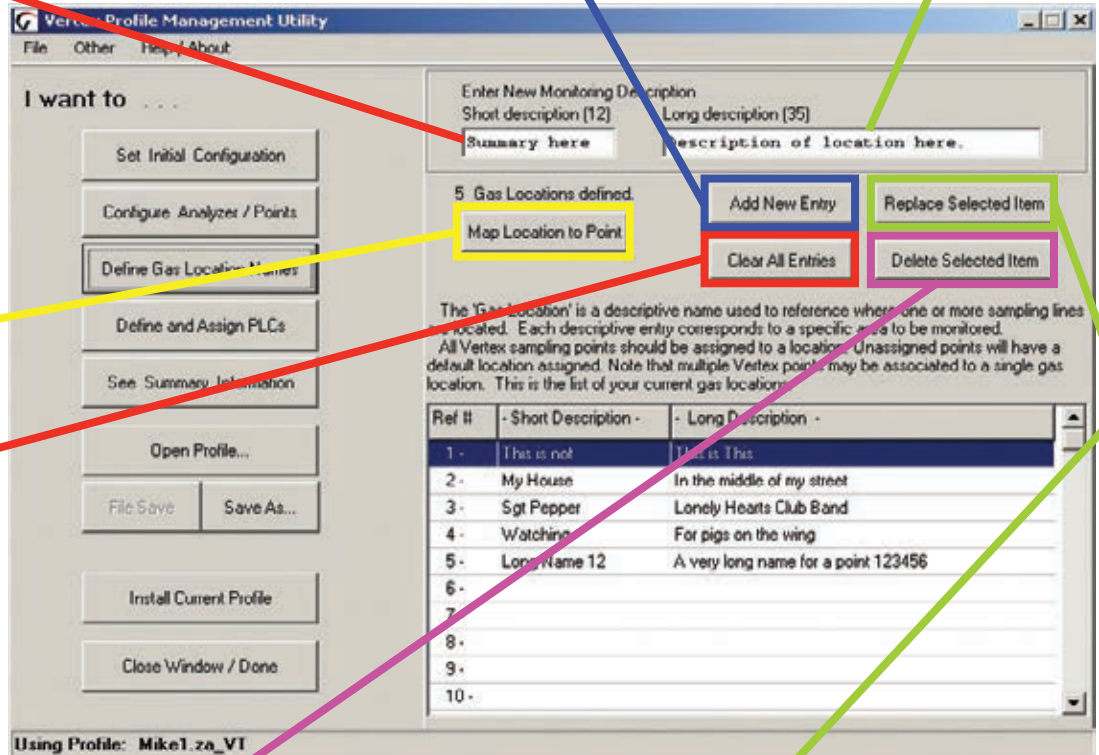


Delete Selected Item

Removes the selected line from the location list.

Replace Selected Item

Replaces the selected line in the gas location list with the information in the short and long name text boxes.

Vertex™ 72-Point Continuous Monitor

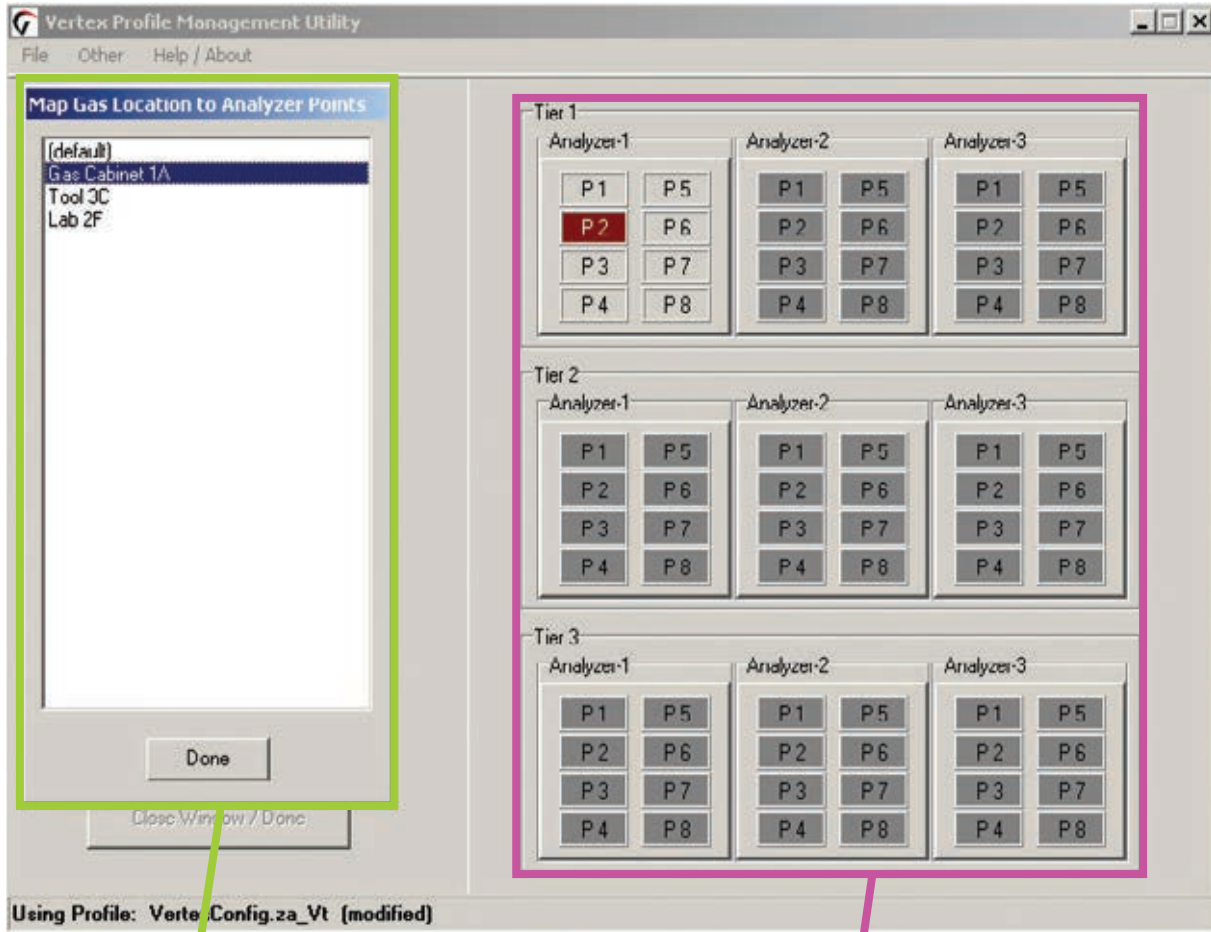

Gas Location List

Select desired gas location from this list. For points with no assigned location, select (default). Points assigned to default location will automatically be given location names based on the point's position in the Vertex.

Point Map


Select point to add or remove it from the selected location. Up to 3 points can be assigned to each location.

Vertex™ 72-Point Continuous Monitor

3.7.2 Configure Analyzers and Points

Press “Configure Analyzer/Points” to change the right side of the Configuration window to a display representing physical layout of the Vertex System. Each slot is represented by a two-part button.

When you have configured an analyzer, the top of the button displays the type of analyzer and the gas family. The bottom of the button is a second button for configuring each point within the analyzer.

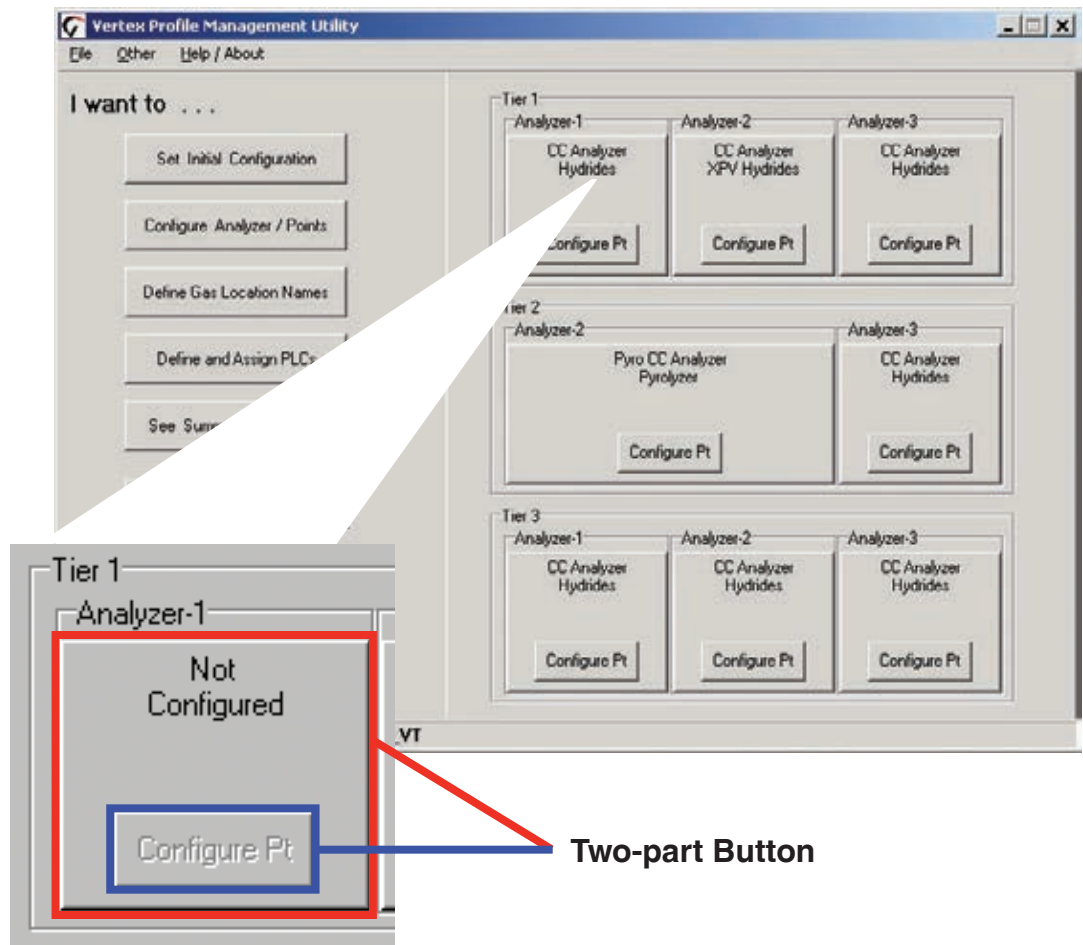

Vertex™ 72-Point Continuous Monitor

3.7.3 Set Analyzer Window

To configure the type of analyzer slot, press the top of the button representing the slot. The Set Analyzer Window opens.

Analyzer Type

Choose the model of analyzer populating the slot. A pyrolyzer takes up slots 1 and 2. If pyrolyzer is selected, slot 1 automatically becomes unavailable.

Any analyzer that is physically installed but configured on this screen to “None” should be de-energized.

Family/Chemcassette

Choose the family of target gases. Target gases for all eight points in the analyzer must be in the same family of gases

Options

When you choose a family of gases, Vertex enters default settings into the profile. Selecting “Override Defaults” allows you to change the target gas type, alarm levels and the location assignment. For more information, see the [Detectable Gases table \(Section C\)](#).

ChemCam AutoPicture

If the optional ChemCams are installed, select under what condition a picture of the Chemcassette® stain will be automatically taken.

Vertex™ 72-Point Continuous Monitor

ChemCam AutoPicture

When either ChemCam for Level 1 or Level 2 gas is selected, a gas alarm signals the Vertex System to store a picture of the stain the next time it advances the Chemcassette® tape. When the tape advances, the tape stops with the stain under the camera, the ChemCam takes a picture and then advance continues. The ChemCam field of view is only wide enough to capture four points on one picture. See [Section 4.5.3, Optional ChemCam](#), for additional information on ChemCam features and functions.

Note:

- This activity will consume additional tape
- Some faint stains may not be visible via the camera

3.7.4 Configure Point

The Configure Point window provides the following options for each point:

- Select the specific target gas
- Designate the location of the target gas
- Set alarm levels
- Enable/disable point
- Configure concentration logging
- Configure point-specific event help
- Set PLC full-scale concentration

When all of the entries are correct for the point, use either the point selection buttons or choose Next Point/Last Point to scroll to the next point in the analyzer. Press Done when all settings are entered.

Lower Detection Limit (LDL) level

The monitor loads the default LDL level when a target gas is chosen. See Appendix C - Detectable Gases for a list of default LDL levels. The user-configured LDL can be disabled by unchecking the checkbox. When the user-configured LDL is disabled, the Vertex system will use the default LDL level. A new level may be entered only within the range of the Vertex detection system.

Make the gas assignments before changing the LDL level. Changing the gas automatically resets LDL level settings to the factory defaults. The Vertex system will not allow invalid or inappropriate entries to be made while setting the LDL level.

These are examples of invalid attempts that will be rejected:

- LDL level setting is greater than half of TLV level
- LDL level setting is smaller than default LDL level
- LDL level setting is greater than alarm 1 setting or alarm 2 setting
- LDL level setting is greater than concentration logging setting level
- LDL level setting is greater than PLC F/S Conc. setting level.

Vertex™ 72-Point Continuous Monitor

Gas Calibration

Select the target gas from the dropdown list. Only the gases valid for the family of gases chosen for the designated tape will appear.

Configure Point 1 (Analyzer 1-1 Point 1)

CC Analyzer 1-1... Hydrides

Warning Enabled

Gas Calibration

AsH3

TLV: 50 ppb

LAL: 5 ppb

LDL: 5 ppb

F/S: 500 ppb

Alarm L1 25 ppb

Alarm L2 50 ppb

Log never 5 ppb

LDL 5 ppb

PLC F/S Conc. 500 ppb

Units

PPx

%TLV

%F/S

mg/m³

Disable Point - No Monitoring Perform Optional Line Integrity Test

Associated (*.HTM) File for Event (82)

Gas Location Name: (default)

New Location Edit Location

<< Last Point Done Next Point >>

Warning

Select Warning to create an alarm when a gas concentration exceeds the Lower Detection Limit (LDL). See [Appendix C - Detectable Gases](#), for a complete list of LDLs. Warnings appear as a "W" on the main screen with no relay actions.

Last Point / Done / Next Point Buttons

Vertex™ 72-Point Continuous Monitor

Alarm Level 1 and Alarm Level 2

Vertex loads default alarm levels when you choose a target gas. See [Appendix C - Detectable Gases](#), for a list of default alarm levels. You may enter new levels only within the range of the Vertex detection system.

Make the gas assignments before changing alarm levels. Changing the gas automatically resets alarm level settings to the factory defaults.

The Vertex System will not allow you to make invalid or inappropriate entries while setting alarm levels. Following are three examples of invalid attempts the Vertex System will reject:

- The alarm setting for Alarm Level 1 is greater than the setting for Alarm Level 2
- An alarm setting is less than the lowest alarm level for that target gas
- An alarm setting is greater than the full scale for that target gas

Vertex™ 72-Point Continuous Monitor

Alarm Level 1
Alarm Level 2

Configure Point 1 (Analyzer 1-1 Point 1)

CC Analyzer 1-1... Hydrides Warning Enabled

Gas Calibration: **AsH3**

TLV: 50 ppb

LAL: 5 ppb

LDL: 5 ppb

F/S: 500 ppb

Alarm L1: 25 ppb

Alarm L2: 50 ppb

Log never: 5 ppb

LDL: 5 ppb

PLC F/S Conc.: 500 ppb

Units: PPx %TLV %F/S mg/m³

Disable Point - No Monitoring Perform Optional Line Integrity Test

Associated (*.HTM) File for Event (82): [] ...

Gas Location Name: [default]

New Location Edit Location

<< Last Point Done Next Point >>

| | |
|------|------|
| Pt 1 | Pt 5 |
| Pt 2 | Pt 6 |
| Pt 3 | Pt 7 |
| Pt 4 | Pt 8 |

User-programmable LDL
(see page 3-25)


Vertex™ 72-Point Continuous Monitor

Log never/Log always/Log if

This option sets the frequency that Vertex enters data into the data log.

Note:

Setting the Vertex System to continuously log concentration data on a nine-analyzer system requires approximately 35 megabytes of disk storage per day. Purge data often to avoid filling available disk space.

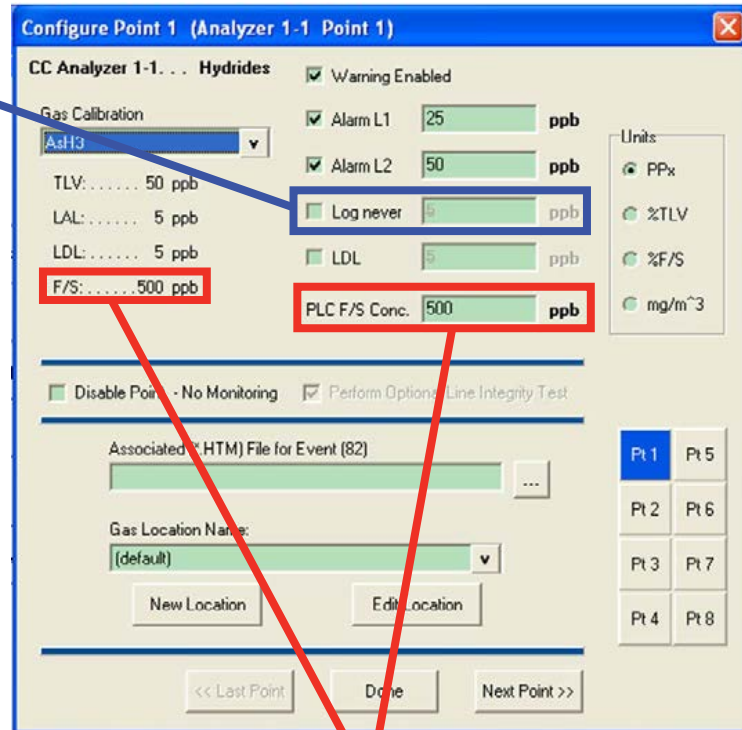

| | Log Always | Log if >= | Log Never |
|---|-------------------|-------------------|------------|
| If concentration is below configured threshold | logs at slow rate | not logged | not logged |
| If concentration is equal to or greater than configured threshold | logs at fast rate | logs at fast rate | not logged |

PLC F/S Conc. (Data Output)

Calibrates the Vertex current loop output or data concentration bits to correlate to the customer-specified output range (i.e.; milliamp output scaling or data output scaling to external PLC). The default value sets the full-scale point to the full-scale value of the gas calibration.

Vertex™ 72-Point Continuous Monitor

Units

Selects the unit of measure to display target gas concentrations. This selection applies to this screen only and does not effect displays during normal operation or events.

Unit choices are:

PPx

Parts-per-million or parts-per-billion.

See [Appendix C - Detectable Gases](#), for definition.

%TLV

Displays target gas as a percentage of the threshold limit value.

See [Appendix C - Detectable Gases](#), for a list of the TLV for each target gas.

%F/S

Displays target gas concentration as a percentage of the full-scale concentration. See [Detectable Gases](#), for a list of the full-scale concentration for each target gas.

mg/m³

Displays gas concentration in milligrams per cubic meter.

Configure Point 1 (Analyzer 1-1 Point 1)

CC Analyzer 1-1... Hydrides Warning Enabled

Gas Calibration: AsH3

TLV: 50 ppb

LAL: 5 ppb

LDL: 5 ppb

F/S: 500 ppb

Alarm L1 25 ppb

Alarm L2 50 ppb

Log never ppb

LDL 5 ppb

PLC F/S Conc. 500 ppb

Units:

- PPx
- %TLV
- %F/S
- mg/m³

Disable Point - No Monitoring Perform Optional Line Integrity Test

Associated (*.HTM) File for Event (82)

Gas Location Name: (default)

New Location Edit Location

<< Last Point Done Next Point >>

| | |
|------|------|
| Pt 1 | Pt 5 |
| Pt 2 | Pt 6 |
| Pt 3 | Pt 7 |
| Pt 4 | Pt 8 |

Vertex™ 72-Point Continuous Monitor

Disable Point No Monitoring

Select “Disable Point” for points not needed.

Associated (*.HTM) File

You may link a user-generated HTML file to this point. Either type in the file name or touch the browse (...) button to bring up a file selection window.

Gas Locations

Use this field to label the location the point is monitoring. You may assign a name by one of three methods:

- Choose a name from the location list. See “Define Gas Location” for entering names in the list.
- Edit the selected location.
- Create a new location.

Perform Optional Line Integrity Test

Check this box to perform a sample line integrity test. See [Appendix G - Line Integrity Test Option](#)

Configure Point 1 (Analyzer 1-1 Point 1)

CO Analyzer 1-1... Hydrides Warning Enabled

Gas Calibration: AsH1

TLV: 50 ppb Alarm L1: 25 ppb

LAL: 5 ppb Alarm L2: 50 ppb

LDL: 5 ppb Log never: 5 ppb

F/S: 500 ppb LDL: 5 ppb

PLC F/S Conc.: 500 ppb

Units: PPx %TLV %F/S mg/m³

Disable Point - No Monitoring Perform Optional Line Integrity Test

Associated (*.HTM) File for Event (82):

Gas Location Name: (default)

New Location Edit Location

<< Last Point Done Next Point >>

| | |
|------|------|
| Pt 1 | Pt 5 |
| Pt 2 | Pt 6 |
| Pt 3 | Pt 7 |
| Pt 4 | Pt 8 |

Vertex™ 72-Point Continuous Monitor


Generate Window Zero PLC Network Reset Faults

Window Zero Reset events are generated when unusual optics readings occur. Usually these are one-time events and present no long term issues. By default, these events generate an informational event. However, these events can sometime indicate conditions that could lead to a false concentration readings. For that reason, this option is provided. If selected, a maintenance fault will be generated when a Window Zero Reset event occurs.

Generate Accelerated CC Usage Faults

If a low background level of gas is present that is below the lower detectable limit, a stain can develop on the tape while the Vertex reports zero concentration. This can cause the Chemcassette to be used up faster than expected. If the option is enabled, a maintenance fault will be generated if this condition exists.

For setting communication parameters for the optional PLC Network interface. [F.8 DF1 Interface \(P/N1295-0343\)](#)
[F.9 Modbus Plus Interface \(P/N1295-0330\)](#)

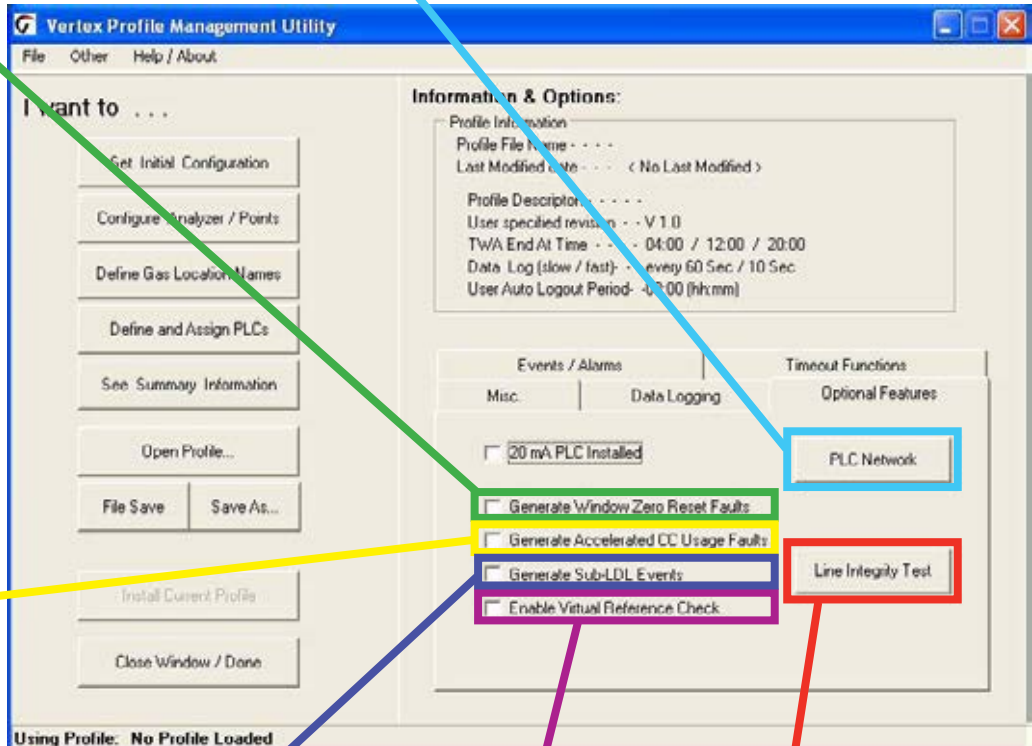

Generate Sub-LDL Events
Generates a warning alarm with 0 ppb/ppm concentration that may indicate the presence of gas below LDL.

Virtual Reference Function
See the following page.

Line Integrity Test
Displays the optional Line Integrity Test configuration utility. See [Appendix G - Line Integrity Option](#).

Vertex™ 72-Point Continuous Monitor

Virtual Reference Function

The Virtual Reference option reduces the possibility that a non-gas event will result in a concentration or alarm. When enabled, it maintains a record of specific instrument operation and, in the event of a reading $\frac{1}{4}$ TLV or above, executes a confirmation before the concentration or alarm is issued. Once confirmed, measurements for the same event will not be affected. See software 1.25.5 release technote for further information.

The Virtual Reference function is user configurable by rack (it is disabled by default). It reduces the possibility that a non-gas event will result in a concentration or alarm. See the following table for the number of windows used and the time to confirm an event.

Note:

The Virtual Reference function is not used on CLO analyzers, even if enabled.

| Chemcassette | Number of Windows Pulled | Time to confirm (sec) |
|--------------------------|--------------------------|-----------------------|
| Hydrides | 3 | 15-25 |
| XP Hydrides | 3 | 15-25 |
| Mineral Acids | 6 | 30-40 |
| Cl2/Oxidizers (NO2) | 6 | 30-40 |
| Mineral Acids (Pyro) | 6 | 30-40 |
| Phosgene | 6 | 30-40 |
| XP Phosgene | 6 | 30-40 |
| Aliphatic Amines | 3 | 15-25 |
| Cl2/Oxidizers-III | 6 | 30-40 |
| Hydrogen Cyanide | 3 | 15-25 |
| Hydrogen Sulfide | 3 | 15-25 |
| XPVChlorine | 6 | 30-40 |
| Fluorine/Oxidizers | 3 | 15-25 |
| XP Ammonia | 3 | 15-25 |
| XP Mineral Acids | 6 | 30-40 |
| XPVMineral Acids (Pyro) | 6 | 30-40 |
| LL Sulfur Dioxide | 3 | 15-25 |
| XP4 Hydrides | 3 | 15-25 |
| XP4 Mineral Acids | 6 | 30-40 |
| XP4 Mineral Acids (Pyro) | 6 | 30-40 |
| XP4 Chlorine | 6 | 30-40 |
| XP4 Ammonia | 3 | 15-25 |
| XP4 Phosgene | 6 | 30-40 |


Vertex™ 72-Point Continuous Monitor

3.7.5 Define and Assign Relays

The Vertex System includes multiple programmable relays. You may associate relays with one or more alarms or faults to trigger external alarm devices or emergency equipment. Relays are located on relay cards; either 8 or 16 relays populate each card.

Vertex uses a two-part display to configure relays. The Configure PLC window displays the available relay cards and contacts. In a second window, Vertex also displays a representation of the analyzers installed in the system.

See [Appendix E - Optional Relay Specifications](#), for a complete listing of alarm relay default settings.

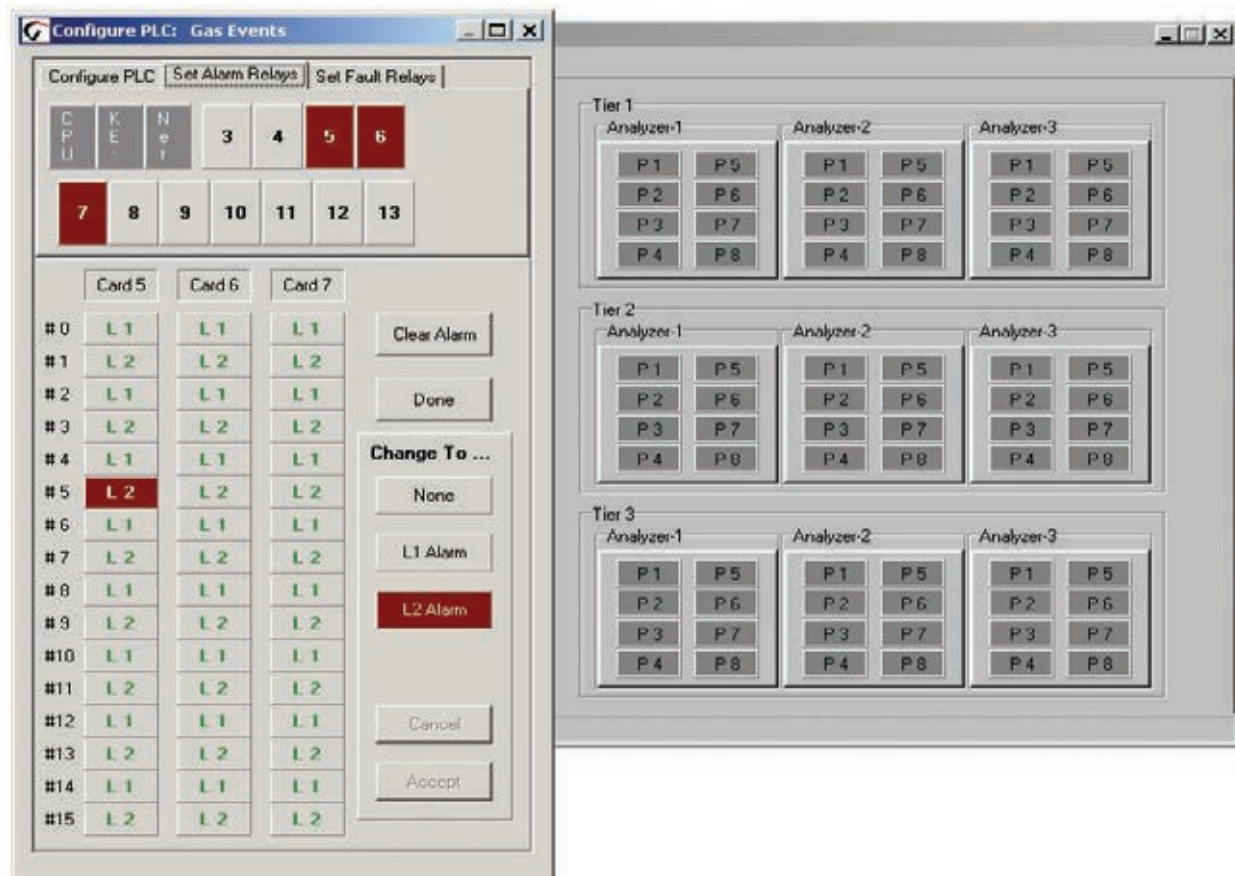

Vertex™ 72-Point Continuous Monitor

3.7.6 Configure PLC

Use Configure PLC to enter the following:

- The number of relay cards installed
- The number of contacts per card
- The number of relays designated as fault relays.

PLC Relay Cards

Up to 11 relay cards populate the Vertex System. The cards are numbered 3-13.

Relays per Card

Relays are located on relay cards; either 8 or 16 relays populate each card.

- Cards with 16 relays share a common connection among groups of eight contacts.


Cards with 8 relays have 8 isolated contacts.

Clear All

Erases the alarm and fault relay definitions

Set Default

Sets all relays to the initial default mappings

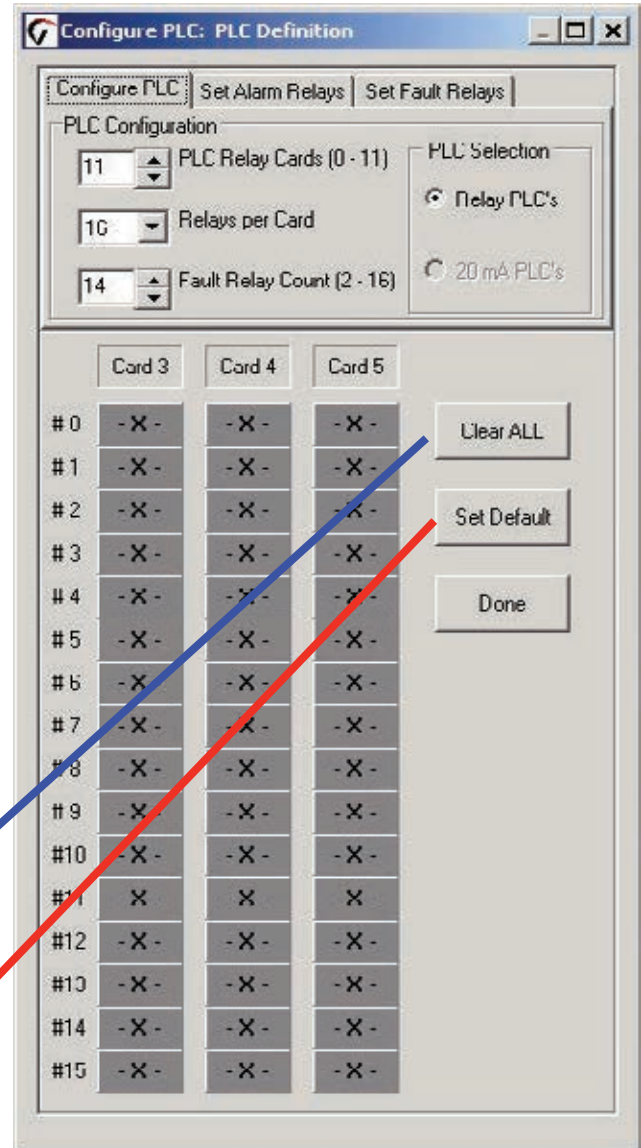

Vertex™ 72-Point Continuous Monitor


Fault Relay Count

You may allocate from 2 to 16 relays for fault indicators.

Note:

Set the number of fault relays before setting alarm relay definitions. If you change the number of fault relays, the current relay definitions become invalid and must be redefined.

When you change the number of fault relays, Vertex opens the Fault Relay Definition Change dialog box. Choosing Yes shifts the alarm definitions, choosing No pads the alarm definitions. Choose Cancel to return to the PLC configuration without changing the relay assignments.

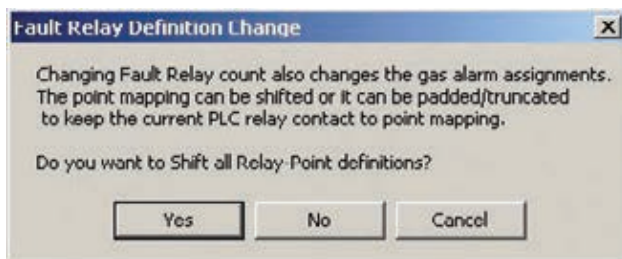

Shift

Alarm relay definitions move down to fill the space created by fewer fault relays or move up to accommodate the additional fault relays.

Changing the number of fault relays from 14 to 16 will cause the alarm relay assignments to move two relays up. Card 5, relay 2 definition moves to card 5, relay 4; card 5, relay 3 moves to card 5 relay 5; card 5 relay 14 moves to card 6, relay 1, etc.

Changing the number of fault relays from 16 to 14 moves relay assignment down by 2 positions. Card 5, relay 4 definition moves to card 5, relay 2; card 5, relay 5 moves to card 5 relay 3; card 6, relay 1 moves to card 5, relay 15, etc.

Pad

Padding leaves most alarm relay definitions unchanged. Some existing alarm definitions may be overwritten or undefined relays may become available.

Changing the number of fault relays from 14 to 16 will cause the alarm definitions on card 3, relay 14 and card 3, relay 15 to be overwritten by the fault relay assignments.

Changing the number of fault relays from 14 to 12 will result in two additional (and undefined) alarm relays being available at card 3 relays 12 and 13. Existing relay definitions are not moved.

Vertex™ 72-Point Continuous Monitor

3.7.7 Set Alarm Relays

A relay configured for a Level 1 trigger will activate for both Level 1 and Level 2 alarms. A Level 2 trigger will only activate for Level 2 alarms.

None of the relays are defined as general or point specific alarms until they are programmed or associated with one or more points in an analyzer.

Note:

Set the number of fault relays before setting alarm relay definitions. If you change the number of fault relays, the current alarm relay definitions may change and must be redefined. See [Section 3.7.6, Configure PLC](#).

Defining a point for association with a relay is a four-step process:

1. Choose the relays to which you want to associate with a point.
2. Choose L1 Alarm or L2 in the Change To... area.
3. Click the square representing the point or points to associate with the relay. The point changes color to indicate the change.
4. Choose Accept make the change the change to the configuration profile. Choosing cancel leaves the alarm definition unchanged.

Repeat the steps for all contacts.


To verify a contacts association to analyzer points, choose the contact. The associated point display changes color.

Vertex™ 72-Point Continuous Monitor

Clear all alarm definitions from relays

Squares that represent the point or points to associate with the relay

Selected relay in the relay block

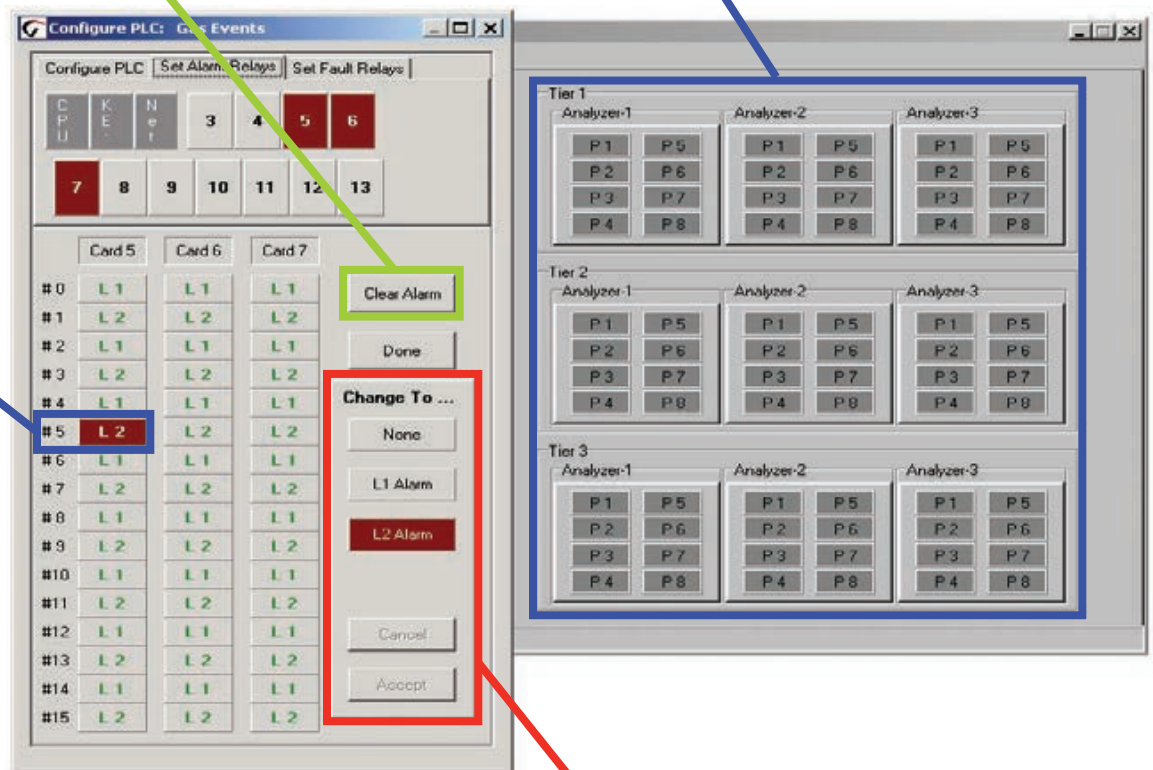

Set type of alarm

Vertex™ 72-Point Continuous Monitor

3.7.8 Set Fault Relays

Fault relay contacts activate for instrument or maintenance faults. Faults are associated with an entire analyzer and not individual points.

- Instrument faults indicate a loss of monitoring on one or more points.
- Maintenance faults indicate the Vertex System requires attention but is continuing to monitor.

Note:

The number of relays used for fault indication is configurable. See [Section 3.7.6, Configure PLC](#)

Defining an analyzer for association with a relay is a four-step process:

1. Choose the relays to which you want to associate with an analyzer.
2. Choose Instrument, Maintenance, Both or None in the Change To... area.
3. Click the square representing the analyzer or analyzers to associate with the relay. The square changes color to indicate the association.
4. Choose Accept to modify to the configuration profile. Choosing Cancel leaves the alarm definition unchanged.

Repeat for all relays.

To verify a relay's assignment to analyzers, choose the contact. The associated analyzer changes color.

Vertex™ 72-Point Continuous Monitor

Clears all fault definitions from all relays

Square that represents the analyzer or analyzers to associate with the relay

Selected relay in the relay block

The screenshot displays the 'Configure PLC: Fault Events' software interface. The main window has three tabs: 'Configure PLC', 'Set Alarm Relays', and 'Set Fault Relays'. The 'Set Fault Relays' tab is active, showing a grid of relay configurations for three cards (Card 3, Card 4, Card 5). The grid lists relays #0 through #15. Relay #1 is selected, and a 'Change To...' dialog box is open, allowing the user to set the fault type to 'Both'. A 'Clear Fault' button is highlighted in green. To the right, a separate window shows a fault event grid with 'Analyzer-2' highlighted in red.

| Relay # | Card 3 | Card 4 | Card 5 |
|---------|--------|--------|--------|
| #0 | Both | - G - | - G - |
| #1 | Both | - G - | - G - |
| #2 | Both | - G - | - G - |
| #3 | Both | - G - | - G - |
| #4 | Both | - G - | - G - |
| #5 | Both | - G - | - G - |
| #6 | Both | - G - | - G - |
| #7 | Both | - G - | - G - |
| #8 | Both | - G - | - G - |
| #9 | none | - G - | - G - |
| #10 | none | - G - | - G - |
| #11 | none | - G - | - G - |
| #12 | none | - G - | - G - |
| #13 | none | - G - | - G - |
| #14 | - G - | - G - | - G - |
| #15 | - G - | - G - | - G - |


The 'Change To...' dialog box contains the following options:

- None
- Maint
- Instr
- Both**
- Cancel
- Accept

3.7.9 Profile Management-File Menu

Use the file menu to open, create, save or close a configuration file. Configuration files may be stored in any directory on the Vertex System hard disk.


When you make any changes to the configuration profile, Vertex will always prompt you to save the change before closing the Configuration window.

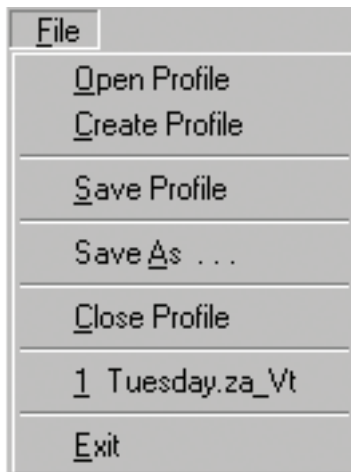

Vertex™ 72-Point Continuous Monitor

3.7.10 Other Menu

The Other Menu offers several shortcuts to speed configuring the Vertex System.

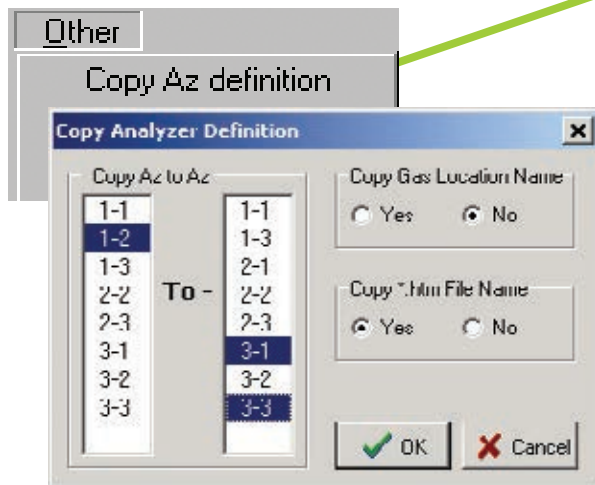

Copy Az definition

Copies the configuration of one analyzer to any other analyzer in the system. You have two options when copying an analyzer configuration:

Copy Gas Location Name

Copies the location from the first analyzer to the second analyzer.

Copy *.htm File Name

Assigns the instruction file for the first analyzer to the second analyzer.


Alarm Defaults

Sets the level 1 and level 2 alarms of all analyzers not yet configured to the following values:

One-half TLV and TLV

TLV and two times TLV

One-half TLV and two times TLV

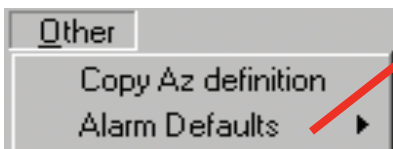


Vertex™ 72-Point Continuous Monitor

3.7.11 Profile Management Utility

This text report is about 600 lines long and completely describes the configuration of the monitor.

Use this concise reporting capability and the “Last Modify Date” to confirm that the configuration is correct and has not been altered.

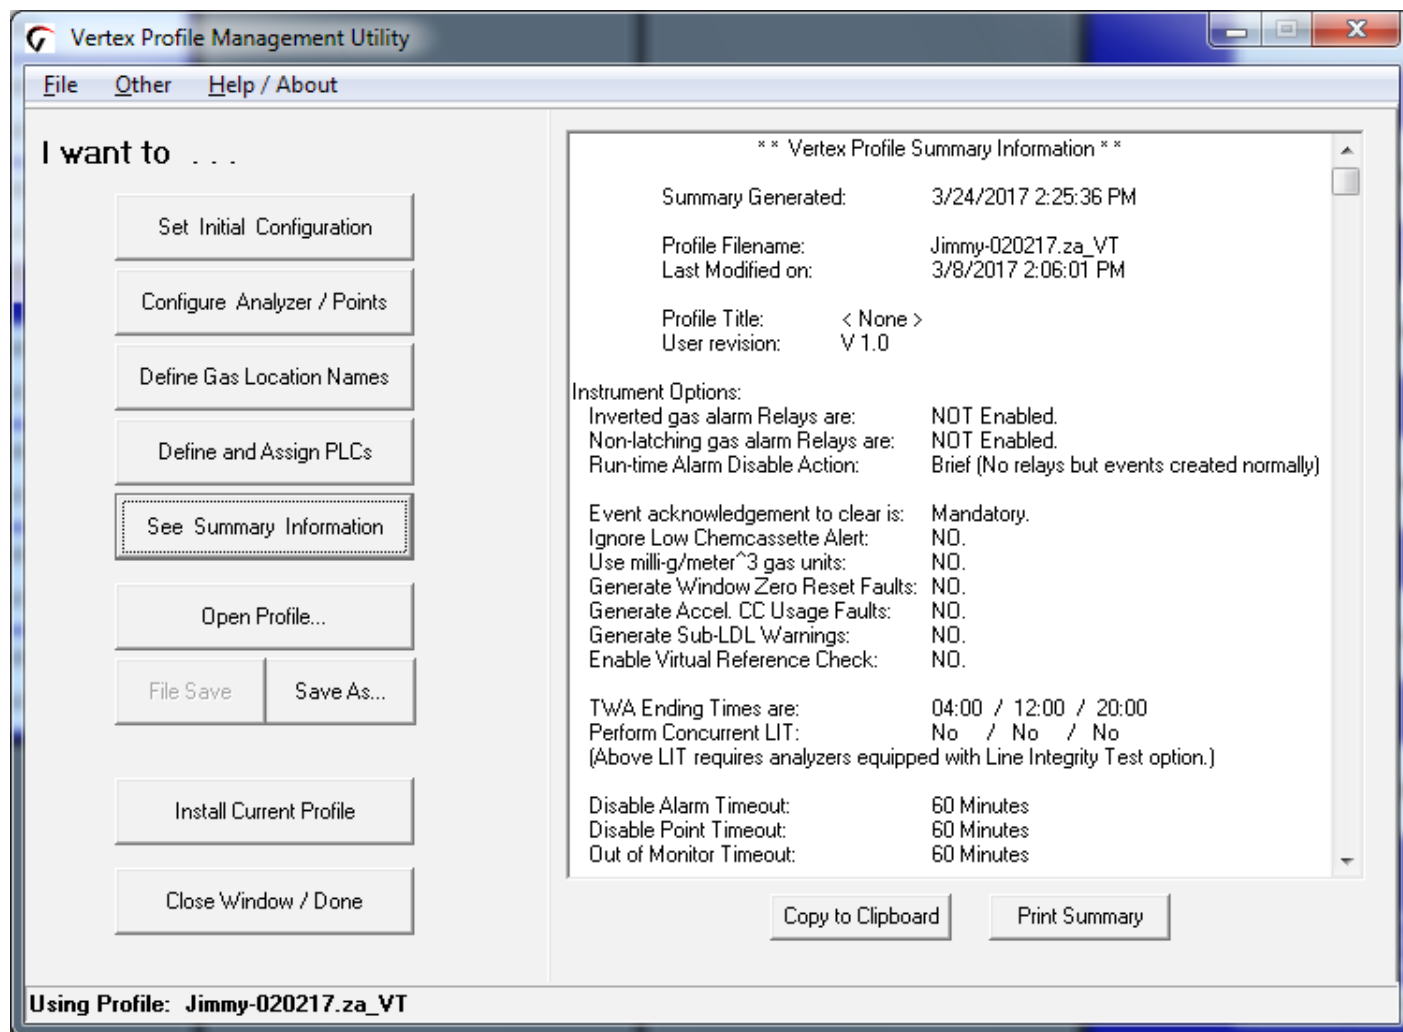

3.8 Load Tape

After configuring the analyzers, load each analyzer with the proper Chemcassette® tape required for the target gas. See [Section 5.3.5, Change Chemcassette® Tape](#), for loading procedure. See Detectable Gases, for a list of target gases and Chemcassette® tape part numbers.

After installing Chemcassettes® for initial configuration, keep the analyzer in IDLE mode. Do not move to monitor mode until you have:

Performed a leak check on sample lines (See [Section 3.9, Leak Checking Sample Lines](#).)

Set supply vacuum See [Section 3.10.1, Set Supply Vacuum](#)

Verified flow rates See [Section 3.10.2, Verify Flow Rates](#)

Vertex™ 72-Point Continuous Monitor

3.9 Verify Flow Rates and Supply Vacuum

After you have configured all analyzers, loaded Chemcassettes® and performed leak check, you will verify flow rates in the Flow Diagnostics Window. From Main Screen, touch Menu, Service, Authorized Service. The Authorized Service window opens.

3.9.1 Set Supply Vacuum (Series 2)

Select each Analyzer in the selection pad and press pump on.

Adjust the supply vacuum knob behind the monitor to obtain 10-15 inches Hg (13 inches Hg recommended).


Note:

At higher altitudes with many analyzers installed, the system (50 Hz. mains) may not be able to achieve 13" Hg. In this case, the maximum achievable sample point flow rate shown may be reduced by up to 20%.

3.9.2 Verify Flow Rates

The Authorized Service window displays the flow range in bar graph form for each point of the selected analyzer.

Choose the analyzer from the selection pad in the upper right-hand corner. Press the pump on button. The eight points display their flow.

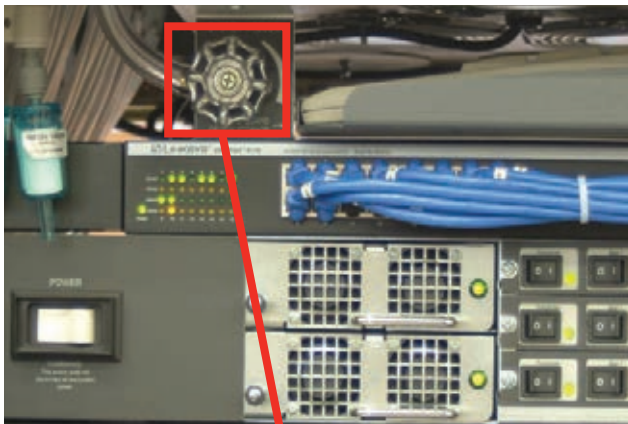

Supply Vacuum Adjust

Vertex™ 72-Point Continuous Monitor

Flow (cc/min)

The real-time sample flow to the point.


Point Vacuum (in Hg)

Pt. Vacuum indicates the restriction from sample line length and the pressure developed by shared lines

Supply Vacuum

Typical supply vacuum is 10-15 in. Hg

Selection Pad

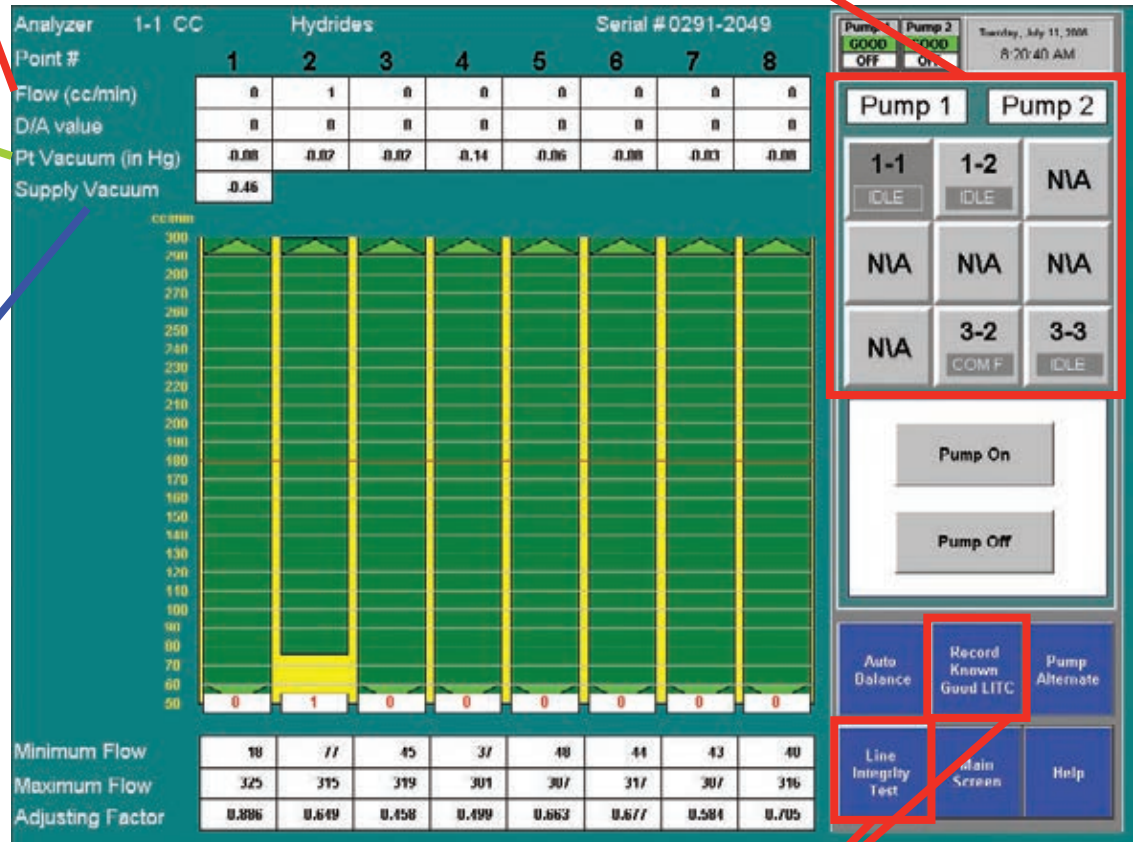

Optional Line Integrity Test Option

See [Appendix - G Line Integrity Test Option](#)


Vertex™ 72-Point Continuous Monitor

Target Flow

A horizontal red line indicates the target flow rate required by the Vertex System for correct analysis. The target flow rate is 180 cc/min. +/-5% (171-189 cc/min.)

Flow Rate

A floating white box indicates the actual flow rate. The position of the box graphs the flow; the numerical value of the flow is displayed in the box.

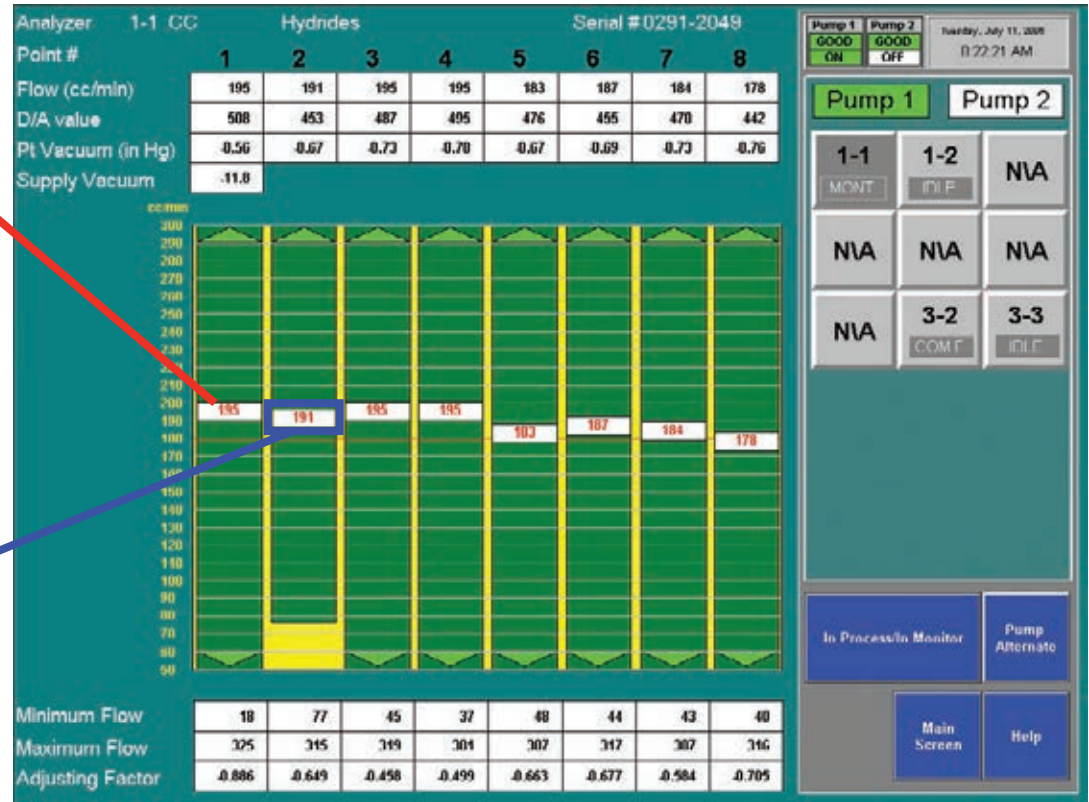

Vertex™ 72-Point Continuous Monitor

Proportional Value Range


A vertical green bar displays the dynamic range over which the proportional valve can adjust the flow rate. Indicated numerically by Minimum Flow and Maximum Flow.

Minimum Flow

The minimum flow possible with the attached sample line and orifice.

Maximum Flow

The maximum flow possible with the attached sample line and orifice.

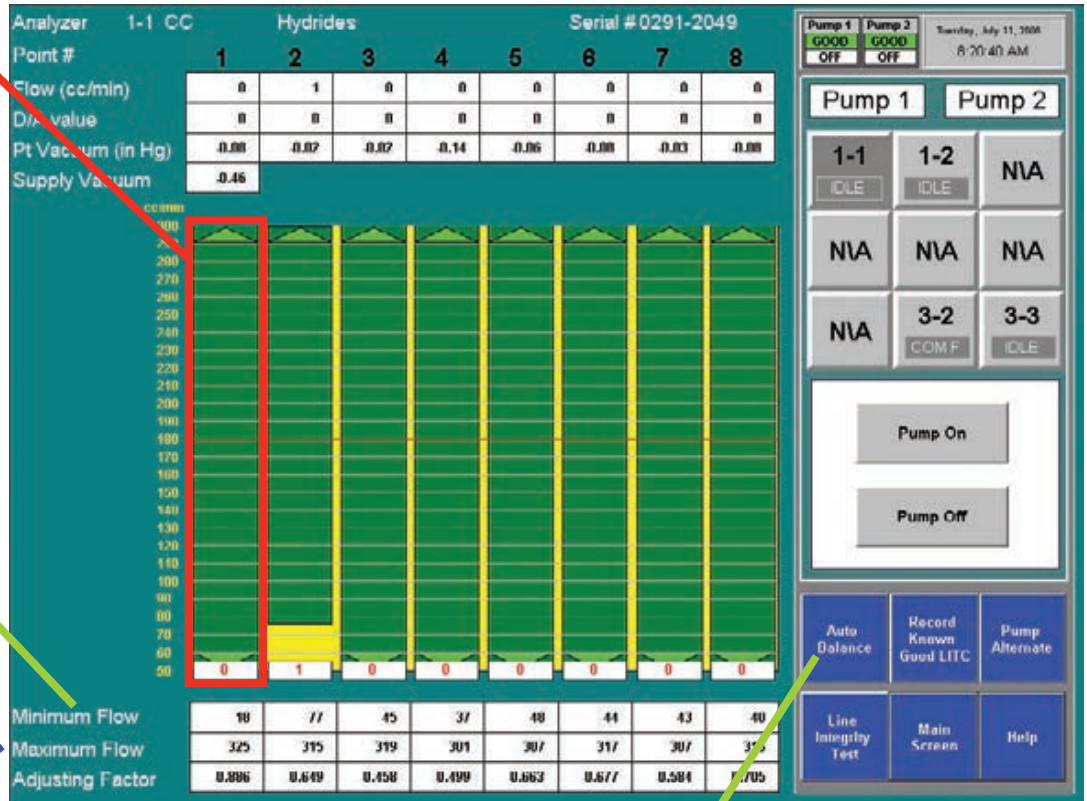

Auto Balance

See Section 4.6.2, Flow Calibration, for instructions on adjusting flow rates.

Vertex™ 72-Point Continuous Monitor

3.10 Leak Checking Sample Lines

Perform a leak check of the sample lines following installation and also whenever a line is changed or moved. The leak check procedure involves plugging the end of the sample line and verifying that there is no flow through the line. To perform a leak check:

1. Put the affected Analyzer in Idle mode.
2. Choose Main Screen, Menu, Service, Authorized Service.
3. Select Analyzer.
4. Press pump on.
5. Securely plug the end of the sample line being tested.
6. Verify that the flow rate for the test line drops to zero. See [Flow \(cc/min\)](#) on page 3-45.
7. Verify that the sample Point Vacuum equals the Supply Vacuum within a tolerance of +/- 0.5 inches Hg (see [Point Vacuum \(in Hg\)](#) on page 3-45).
8. Verify that the sample flow is less than 20cc.
9. After testing all points on the selected analyzer, press pump off.

Note:

You must touch the Pumps On button even if the pumps are operating. Touching Pumps On turns on the solenoid valve to provide vacuum to the analyzer.

A sample point failing to meet both the flow and

vacuum conditions of steps 6 and 7 indicates either a leak in the sample line or a faulty sample inlet connection.

To troubleshoot the condition, disconnect the sample line at the inlet port at the top of the Vertex cabinet. Securely plug the inlet port and repeat the above leak check procedure.

If the sample point passes the test with the top port plugged, the leak is somewhere in the sample line and the line must be replaced. If the sample point fails the leak check procedure with the top inlet port plugged, contact Honeywell Analytics for assistance.

3.11 Reconfigure

The modular design of the Vertex allows limited reconfiguration. All wiring and tubing is in place behind unpopulated slots. To add modules:

1. Remove filler panel.
2. Install new analyzer. (See [Section 5.4, Replacing an Analyzer.](#))
3. Configure new analyzer. (See [Section 3.7, Configuration Utility.](#))
4. Load tape. (See [Section 3.8, Load Tape.](#))

Vertex™ 72-Point Continuous Monitor

5. Leak check sample lines. (See [Section 3.9, Leak Checking Sample Lines.](#))
6. Verify flow rates. (See [Section 3.10, Verify Flow Rates and Supply Vacuum.](#))

Note:

Any analyzers which are physically installed but not included in the configuration should be de-energized.

6. Disconnect sample lines and cap lines as required by local policies also cap Vertex inlet points.
7. Disconnect exhaust line and cap line as required by local policies.
8. Disconnect alarm relays.



WARNING

Hazardous voltages may exist at the Alarm Contacts in this unit with the power switch turned off. Insure power is disconnected at the source prior to servicing alarm contacts.

3.12 Moving to a New Site

Before moving the Vertex to a new site, use the following procedures to prevent loss of data or damage to the instrument.

1. Remove all Chemcassette® tapes and store as required by local policies.
2. Exit the Vertex program. Touch Project and then Stop Project.
3. Back up data and configuration files. See [Section 5.10, File Maintenance.](#)
4. Release latch on touch screen door to open and set all power switches to “Off”.
5. Disconnect electrical supply at the source and then disconnect from the power terminal in the back of the cabinet.

Crate and pad the Vertex to prevent damage during transport. If unsure of packing requirements, contact the Honeywell Analytics Service department.



WARNING

Leaks in the exhaust tubing connection can cause exposure to toxic gases from remote sample areas. For leak-tight connections, follow the instructions in the Installing Pump Exhaust Line section and the Remove Pump section. With the system running, verify the leak integrity with a small amount of leak test fluid.


3.13 System Shut Down



CAUTION

Failure to properly shut down the Vertex could result in system file corruption.


1. Exit the Vertex program. Touch Project and then Stop Project.

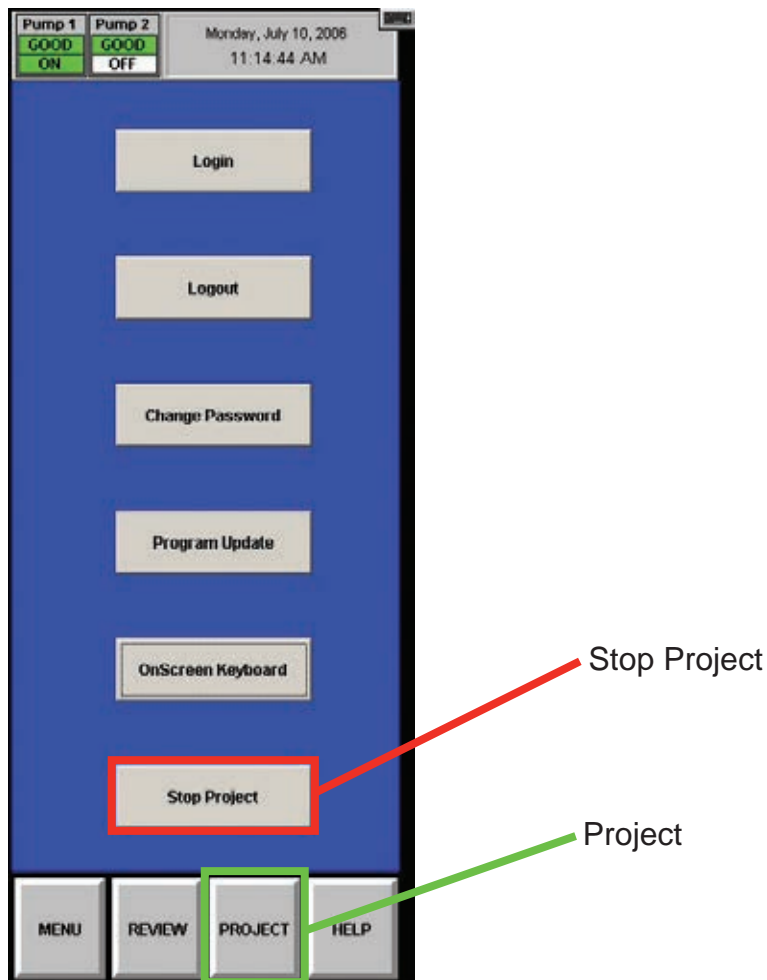

Vertex™ 72-Point Continuous Monitor


2. When the Vertex HMI has closed, stop RSView32

Click on the “X” to close RSView32

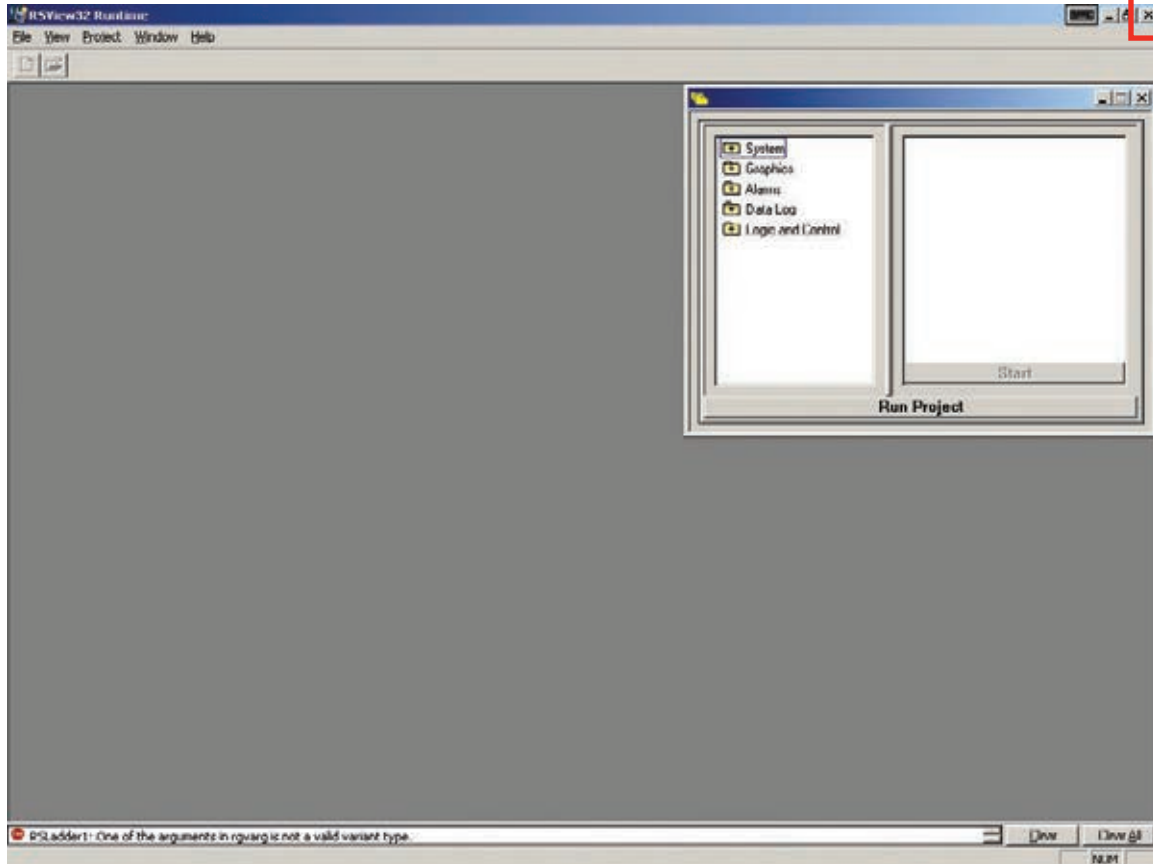

Vertex™ 72-Point Continuous Monitor

3. Close RSLinx

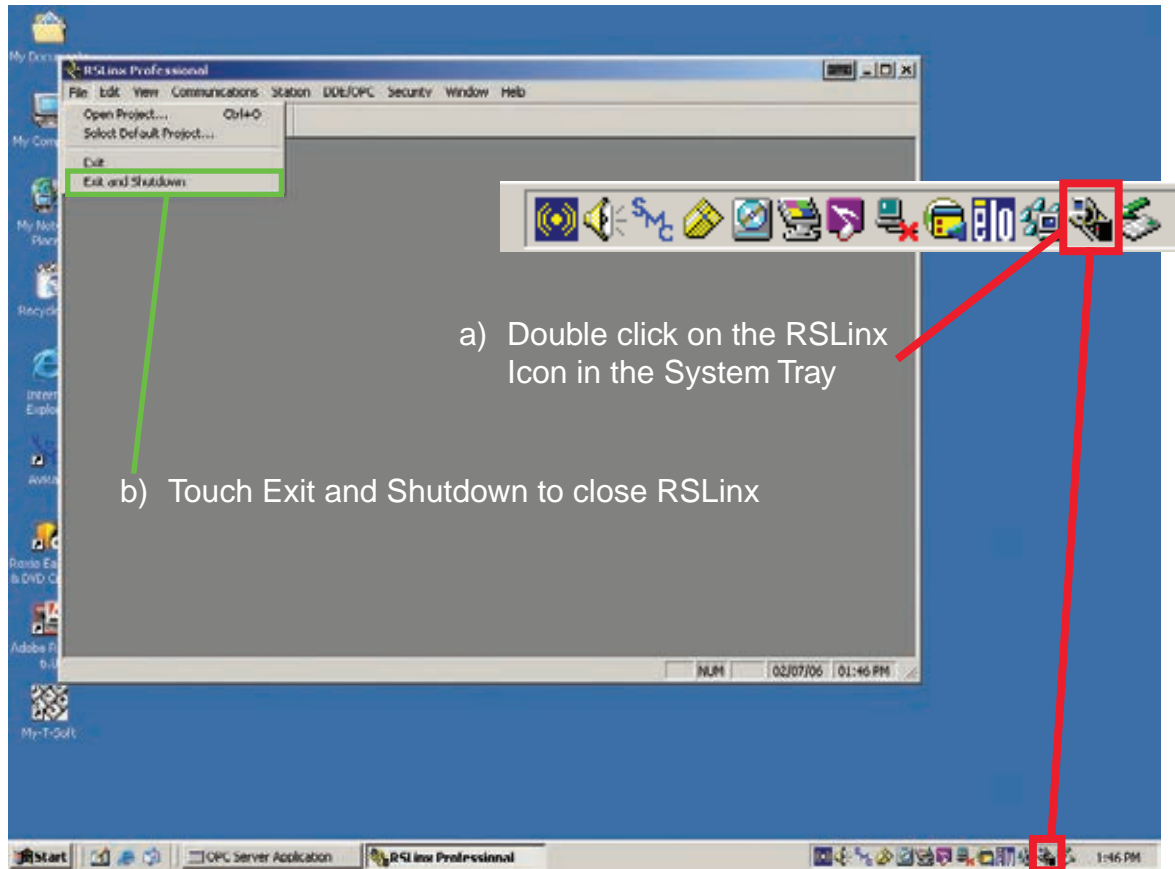


Vertex™ 72-Point Continuous Monitor

4. Close the OPC Server

Note:

RSLinx must be shut down before closing the OPC server. Failure to do this will result in the OPC server being automatically restarted.

Click on the “X” to close the OPC Server

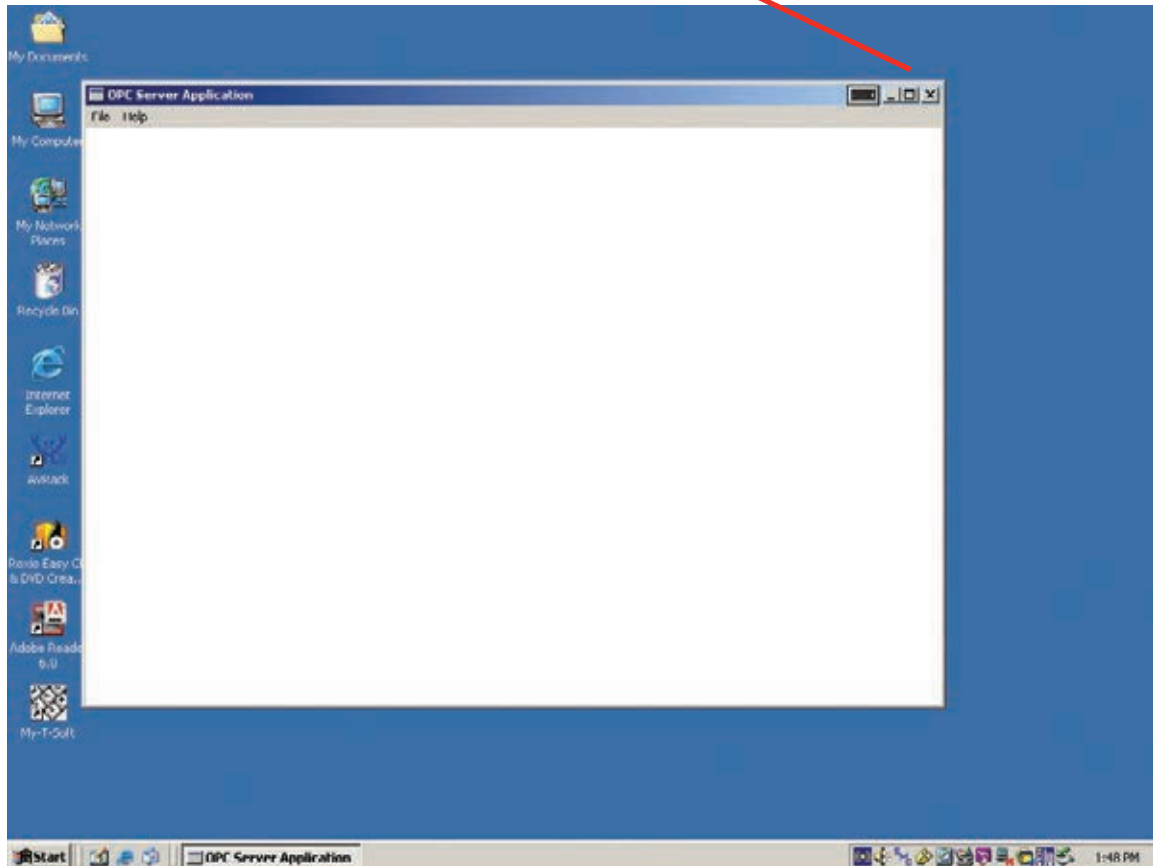

5. In the Windows taskbar touch Start and then Shut Down.

6. Open touch screen and set all switches and the rack power switch to “Off”.

4 Operation

Vertex™ 72-Point Continuous Monitor

4.1 Introduction

This chapter describes Vertex operation including monitoring, system control and data viewing.

This chapter includes the following sections:

- [4.2 Monitoring Mode Overview](#)
- [4.3 Main Screen](#)
- [4.4 Project Functions](#)
- [4.5 Review Functions](#)
- [4.6 Menu Buttons](#)
- [4.7 OnScreen Keyboard](#)

See [Chapter 3, Startup](#), if the analyzers in the Vertex System have not yet been configured.

4.2 Monitoring Mode Overview

Monitor mode is the Vertex System's standard operating state. Upon power up, the instrument performs initialization routines and returns to the same state as when powered down. During monitoring, the Vertex System will calculate concentrations every second for each of the enabled points. Concentrations are used for:

- Triggering alarm relays
- Viewing in the main screen
- Entries in the event list
- Viewing in point detail screen

Concentration information is available through the:

- Point detail screen
- OPC
- Optional fieldbuses
- Optional 4-20 mA output
- Data logger

Vertex™ 72-Point Continuous Monitor

4.3 Main Screen

The Vertex System opens the main screen after power up. Vertex divides the main screen into three areas:

- System display
- Point detail
- Function buttons

The screenshot displays the main interface of the Vertex 72-Point Continuous Monitor. It is organized into three primary sections:

- System Display (Left):** A grid of 72 monitoring points. The top-left section shows points 1-1-1 through 1-1-8, 1-2-1 through 1-2-8, and 1-3-1 through 1-3-8. The bottom-right section shows points 3-2-1 through 3-2-8 and 3-3-1 through 3-3-8. Points are color-coded: blue for 'Normal', grey for 'Runtime PID Disabled', red for 'Alarm', and black for 'Not Configured'. A yellow 'M' icon is visible on point 1-2-3.
- Point Detail (Right):** A panel providing detailed information for the selected point (Point 1-1-1). It includes:
 - System status: Pump 1 (GOOD/Oil), Pump 2 (GOOD/OFF).
 - Date and Time: Monday, July 10, 2006, 12:03:10 PM.
 - Configuration: Config File (MHE1.20_V1), USER ID (DETAIL 1), Location (Point 1-1-1), Analyte (CC), Ties/Stat.PC (1.1.1).
 - Point Status: Enabled (green), Alarms: Enabled (green).
 - Gas and Concentration: Gas (AsH3), Conc (0.000 pph).
 - Point Color Legend: Runtime Alarm Disabled (blue), Normal (white), Runtime PID Disabled (grey), Alarm (red), Not Configured (black).
 - Navigation: Event History, Data Trend, Point Details, Event List.
 - Function Buttons: MENU, REVIEW, PROJECT, HELP.
- Function Buttons (Bottom):** A row of four buttons: MENU, REVIEW, PROJECT, and HELP, which are highlighted with a red box in the image.

System Display

Function Buttons

Vertex™ 72-Point Continuous Monitor


4.3.1 System Display Area

The System Display Area displays information about all of the points in the Vertex System. Each of the 72 blocks in the System Display Area represents one point. A group of eight blocks represents an analyzer block. The analyzer block has the status bar indicator at the top of the block. A pyrolyzer displays as a blue block in slot 1 and points detail in slot 2.

The System Display Area positions the modules in the same order in which they are physically located in instrument. The currently selected point displays a green border. If more than one point has the same gas location as the selected point, all points in same location display with green border.

Universal
Chemcassette
Analyzer

Pyrolyzer
Analyzer

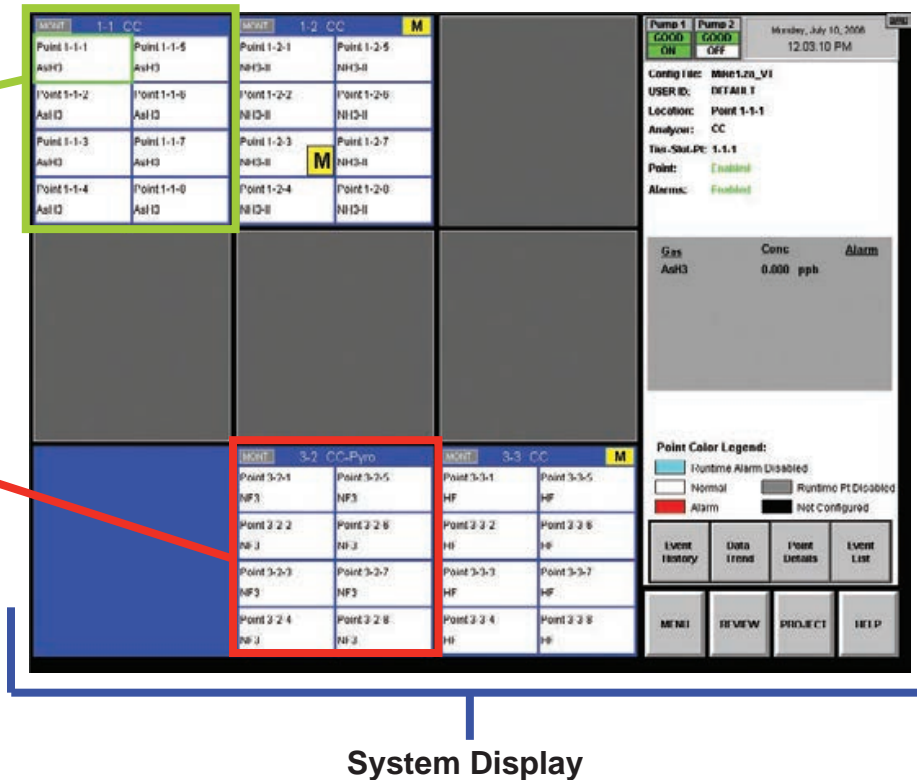

Vertex™ 72-Point Continuous Monitor

Status Indicators

The indicator displays brief information about analyzer status such as faults, warnings or maintenance functions in process.

| | MONT | 3-2 | CC-Pyro | |
|---------|--------------------|--------------------|---------|---------|
| Point 1 | Point 3-2-1 NF3 | Point 3-2-5 NF3 | | Point 5 |
| Point 2 | Point 3-2-2 NF3 | Point 3-2-6 NF3 | | Point 6 |
| Point 3 | Point 3-2-3 NF3 | Point 3-2-7 NF3 | | Point 7 |
| Point 4 | Point 3-2-4 NF3 | Point 3-2-8 NF3 | | Point 8 |

Status indicators include:

- IDLE - the analyzer is not monitoring or performing maintenance
- MONT - the analyzer is monitoring
- LD CC - Load Chemcassette® routine is in progress
- PROG - a new application program is being loaded into the analyzer
- CONF - a new configuration is being loaded into the analyzer
- COMF - a communications failure between the DAq and the analyzer

PYRO-W - a pyrolyzer analyzer is warming up. When pyrolyzer has reached stable temperature, it will automatically go into monitor

FLOW - a flow Auto Balance procedure is in process on the analyzer

The Vertex System displays only the short names of the location and target gases within each point block. During normal monitoring, the background color of each block is white. Vertex will change the background color of a point as conditions change.

| | |
|-------|--|
| Blue | Alarms for the point are disabled in the runtime options menu. |
| White | Normal operation. |
| Red | Gas concentration exceeded an alarm level. |
| Grey | Point is disabled in the runtime menu or is disabled due to a fault. |
| Black | Point is not configured for monitoring. |

Table 4-1

Vertex™ 72-Point Continuous Monitor

Alarm Indicators

When the target gas concentration for a point reaches a preset alarm level, Vertex will display a W, 1 or 2 in the point block to indicate the severity of the alarm.

| Alarm Indicator | Concentration Threshold |
|-----------------|------------------------------|
| W | Lower Detectable Limit (LDL) |
| (if enabled) | |
| 1 | Alarm Level 1 |
| 2 | Alarm Level 2 |

See [Section 3.7.4 Configure Point](#) for information on setting Alarm Level 1 and Alarm Level 2.

See [Section 3.7.10 Other Menu](#) for information on alarm default values.

Pump Status Indicator


The Vertex Display includes pump status indicators in the top right corner. The bottom row indicates which of the pumps is currently operating. The indicator will display “ON” with a green background if the pump is operating and “OFF” on a white background if the pump is not running.

The top row indicates what is known about pump health. The indicator will display “GOOD” with a green background if the pump has successfully provided proper levels of system vacuum. If the Indicator displays “BAD” on a red background,

this indicates that pump related faults 112 or 219 have been generated. The indicator may display “UNKNOWN” on a white background after software is installed or after analyzers are added or moved into a different location.

Pumps in the “UNKNOWN” or “BAD” state change to the “GOOD” state only when successfully used during gas monitoring. After a failed pump has been repaired or replaced, it can be exercised by pressing “PUMP ALTERNATE” button while monitoring (See [Section 4.6.2 Flow Calibration](#)). If successful, the pump state will change to “GOOD”.

Honeywell Analytics recommends that pumps be alternated periodically to insure availability according to your facility’s schedule.

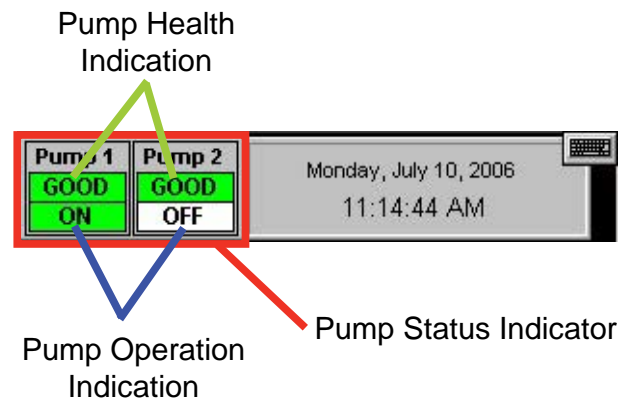

Vertex™ 72-Point Continuous Monitor

Fault Indicators

In addition to changing color, an event window opens indicating a new event.

A yellow square inside of the point block indicates a point-specific fault

A yellow square inside the status bar in the analyzer block indicates an analyzer-specific fault.

See [Section 6.3 Maintenance Faults](#)

See [Section 6.5 Information Events](#)

The screenshot displays the Honeywell Vertex 72-Point Continuous Monitor interface. It features a grid of point status blocks and an event log. The top right shows the date and time: Monday, July 10, 2006, 11:21:27 AM. The event log lists several events with their corresponding point numbers and times. A yellow square with 'F' is visible in the point status block for Point 1-2-3, and a yellow square with 'M' is visible in the point status block for Point 3-2-2. Red circles with the number '2' are also present in the event log for points 3-3-2 and 3-3-8.

| Point | Status | Fault | Events |
|--------------|--------|-------|--------|
| Point 1-1-1 | ASH3 | | |
| Point 1-1-2 | ASH3 | | |
| Point 1-1-3 | ASH3 | | |
| Point 1-1-4 | ASH3 | | |
| Point 1-1-5 | ASH3 | | |
| Point 1-1-6 | ASH3 | | |
| Point 1-1-7 | ASH3 | | |
| Point 1-1-8 | ASH3 | | |
| Point 1-2-1 | NH3-II | | |
| Point 1-2-2 | NH3-II | | |
| Point 1-2-3 | NH3-II | F | |
| Point 1-2-4 | NH3-II | | |
| Point 1-2-5 | NH3-II | | |
| Point 1-2-6 | NH3-II | | |
| Point 1-2-7 | NH3-II | | |
| Point 1-2-8 | NH3-II | | |
| Point 3-2-1 | NF3 | | |
| Point 3-2-2 | NF3 | M | |
| Point 3-2-3 | NF3 | | |
| Point 3-2-4 | NF3 | | |
| Point 3-2-5 | NF3 | | |
| Point 3-2-6 | NF3 | | |
| Point 3-2-7 | NF3 | | |
| Point 3-2-8 | NF3 | | |
| Point 3-3-1 | HF | | |
| Point 3-3-2 | HF | | 2 |
| Point 3-3-3 | HF | | |
| Point 3-3-4 | HF | | |
| Point 3-3-5 | HF | | |
| Point 3-3-6 | HF | | |
| Point 3-3-7 | HF | | |
| Point 3-3-8 | HF | | 2 |
| Point 3-3-9 | HF | | |
| Point 3-3-10 | HF | | |
| Point 3-3-11 | HF | | |
| Point 3-3-12 | HF | | |
| Point 3-3-13 | HF | | |
| Point 3-3-14 | HF | | |
| Point 3-3-15 | HF | | |
| Point 3-3-16 | HF | | |
| Point 3-3-17 | HF | | |
| Point 3-3-18 | HF | | |
| Point 3-3-19 | HF | | |
| Point 3-3-20 | HF | | |
| Point 3-3-21 | HF | | |
| Point 3-3-22 | HF | | |
| Point 3-3-23 | HF | | |
| Point 3-3-24 | HF | | |
| Point 3-3-25 | HF | | |
| Point 3-3-26 | HF | | |
| Point 3-3-27 | HF | | |
| Point 3-3-28 | HF | | |
| Point 3-3-29 | HF | | |
| Point 3-3-30 | HF | | |
| Point 3-3-31 | HF | | |
| Point 3-3-32 | HF | | |
| Point 3-3-33 | HF | | |
| Point 3-3-34 | HF | | |
| Point 3-3-35 | HF | | |
| Point 3-3-36 | HF | | |
| Point 3-3-37 | HF | | |
| Point 3-3-38 | HF | | |
| Point 3-3-39 | HF | | |
| Point 3-3-40 | HF | | |
| Point 3-3-41 | HF | | |
| Point 3-3-42 | HF | | |
| Point 3-3-43 | HF | | |
| Point 3-3-44 | HF | | |
| Point 3-3-45 | HF | | |
| Point 3-3-46 | HF | | |
| Point 3-3-47 | HF | | |
| Point 3-3-48 | HF | | |
| Point 3-3-49 | HF | | |
| Point 3-3-50 | HF | | |
| Point 3-3-51 | HF | | |
| Point 3-3-52 | HF | | |
| Point 3-3-53 | HF | | |
| Point 3-3-54 | HF | | |
| Point 3-3-55 | HF | | |
| Point 3-3-56 | HF | | |
| Point 3-3-57 | HF | | |
| Point 3-3-58 | HF | | |
| Point 3-3-59 | HF | | |
| Point 3-3-60 | HF | | |
| Point 3-3-61 | HF | | |
| Point 3-3-62 | HF | | |

Event Log:

| Point | Value | Unit | Time | Fault |
|-------------|--------|---------------|-----------------------|-------|
| Point 3-3-2 | 30 000 | ppm | 7/10/2006 11:21:05 AM | |
| Point 3-3-2 | 114 | POINT VAC ERR | 7/10/2006 11:20:54 AM | M |
| Point 3-3-8 | 10 000 | ppm | 7/10/2006 11:19:00 AM | |
| Point 1-2-3 | 210 | OPTICS NOISE | 7/10/2006 11:12:36 AM | F |

Buttons: Ack Current, Ack All, Reset Current, Reset All, Event History, Data Trend, Point Details, Event Help, MENU, REVIEW, PROJECT, HELP

M - Indicates a maintenance fault

F - Indicates an instrument fault

Vertex™ 72-Point Continuous Monitor

4.3.2 Point Detail Display Area

The Point Detail Area displays comprehensive information about each location. Touching a block in the System Display Area displays the current information about a location.

Config File

The configuration profile file name

User ID

The name of the current, logged in user

Location

The short name of the sampled location

Point

Points not needed for monitoring may be disabled. A disabled point does not trigger alarms.

Pump 1: GOOD ON, Pump 2: GOOD OFF, Monday, July 10, 2006, 12:03:10 PM

Config File: Mike1.ra_VT
USER ID: DEFAULT
Location: Point 1.1.1
Analyzer: CC
Tier-Slot-Pt: 1.1.1
Point: Enabled
Alarms: Enabled

| Gas | Conc | Alarm |
|------|-----------|-------|
| AsH3 | 0.000 ppb | |

Point Color Legend:
Runtime Alarm Disabled (light blue)
Normal (white)
Alarm (red)
Runtime PI Disabled (grey)
Not Configured (black)

Event History | Data Trend | Point Details | Event List

MENU | REVIEW | PROJECT | HELP

Tier-Slot-Point

Points are identified by the tier, slot and their point number in which the analyzer is installed

See [Section 4.5.4 Event List](#)

See [Section 4.5.2 Data Trend](#)

See [Section 4.5.1 Event History](#)

Vertex™ 72-Point Continuous Monitor

The screenshot shows the main interface of the Vertex 72-Point Continuous Monitor. At the top, there are two pump status indicators: Pump 1 (GOOD ON) and Pump 2 (GOOD OFF). The date and time are displayed as Monday, July 10, 2006, 12:03:10 PM. Below this is a configuration section with fields for Config File (Mike1.ra_VT), USER ID (DEFAULT), Location (Point 1-1-1), Analyzer (CC), Tier-Slot-Pt (1-1-1), Point (Enabled), and Alarms (Enabled). A table displays gas data for AsH3 with a concentration of 0.000 ppb and an alarm status. A Point Color Legend is shown, defining background colors for various states: Runtime Alarm Disabled (light blue), Normal (white), Alarm (red), Runtime PI Disabled (grey), and Not Configured (black). At the bottom, there are navigation buttons for Event History, Data Trend, Point Details, Event List, MENU, REVIEW, PROJECT, and HELP.

Analyzer
The analyzer type






Alarms
A point may be enabled but the alarm may be disabled

Point Color Legend
This legend defines the background colors in the system display area

Gas Data
Name of the gas or gases, up to three gases per location
Current concentration for each gas
Alarms, if any, for that point and gas. This field shows "on" or blank.

| Gas | Conc | Alarm |
|------|-----------|-------|
| AsH3 | 0.000 ppb | |

  Point Color Legend:

| | | | |
|---|------------------------|---|---------------------|
|  | Runtime Alarm Disabled |  | Runtime PI Disabled |
|  | Normal |  | Alarm |
|  | Not Configured | | |

Vertex™ 72-Point Continuous Monitor

Note:

A Vertex System equipped with two or more analyzer modules can monitor up to three different gases per location. However, you may not program an analyzer for more than one gas family at a time. When you configure the Vertex System for multiple gases per location, touching a point on the system display area will also change the border on other points monitoring the same location. The information for a location displayed in the point detail area will be identical regardless of which point is selected in the system display area.

4.3.3 Function Buttons

Use the function buttons located under the point detail area to access the following areas.

Menu - Perform runtime changes, flow calibration, maintenance, diagnostics and service functions, edit security settings and configure the system.

Review - View stored historical gas concentration data or events and access ChemCam.

Project - Log in, log out, change passwords, update programs and stop the project (exit Vertex).


Help - Opens a window to explain the functions of the main screen.



Vertex™ 72-Point Continuous Monitor

4.4 Project Functions

Use Project functions to log in, log out, change passwords, update programs, restore the keyboard and stop the project (exit Vertex).

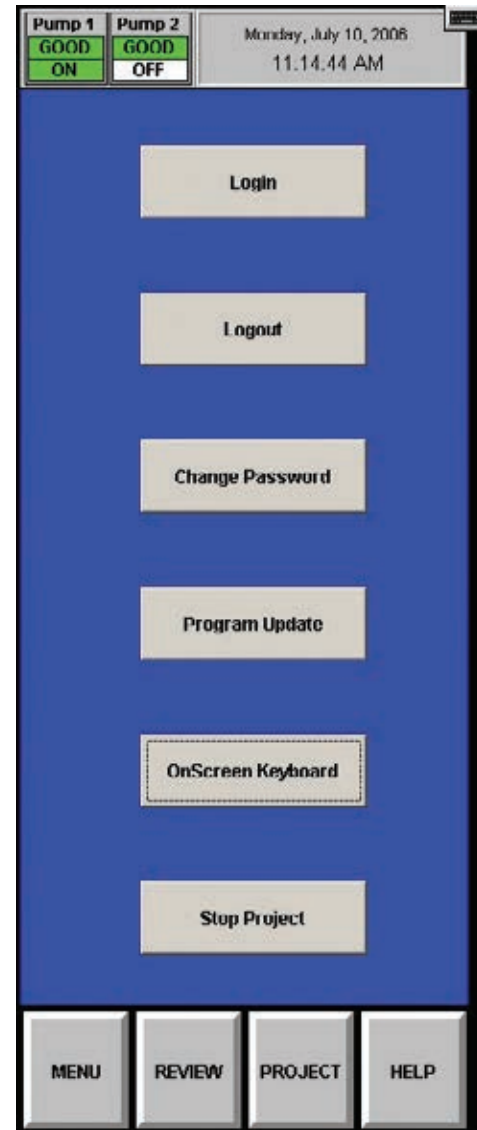

Vertex™ 72-Point Continuous Monitor

4.4.1 Log In and Log Out

To protect the integrity of the system, the Vertex System classifies menus as either open or protected functions. If you require access to a protected menu, you must log in under a user account with permission to use that menu. The Vertex System administrator assigns access to protected functions by setting up user accounts.

See [Section 4.6.6 Security Access](#), for more information.

Logging In



To log in, choose Main Screen, Project and then Log In. The Login window opens. Enter your user account name and password followed by Enter.

After you log in, the system checks your access privileges. As you use Vertex menus, only the buttons to which you have access will be active. The buttons associated with functions to which you are denied access are dimmed.

A user can choose Logout to select the default user account.

Logging Out

To log out, choose Main screen, Project and then Logout.

The Vertex System will automatically log out any user after a period of inactivity. The default timeout period is 8 hours. Authorized users may change the timeout setting in the Configuration Menu.


Thirty seconds prior to the end of the timeout period, Vertex will warn before logging out a user.

4.4.2 Changing Password

You may change your password at anytime. To change your password:

1. Login with old password.
2. Touch Project and then Change Password.
3. Enter old password.
4. Enter new password in both text boxes.
5. Touch Enter.

If both new passwords are identical, Vertex will accept your new password.

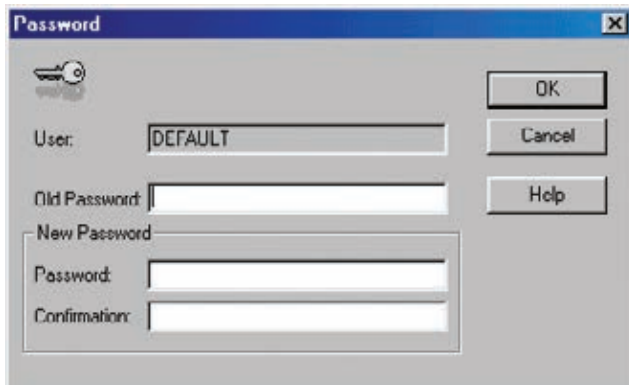

The screenshot shows a dialog box titled "Password" with a close button (X) in the top right corner. On the left side, there is a key icon. The dialog contains the following fields and buttons:

- User:** A text box containing the text "DEFAULT".
- Old Password:** A text box for entering the current password.
- New Password:** A group box containing two text boxes:
 - Password:** A text box for entering the new password.
 - Confirmation:** A text box for re-entering the new password.
- Buttons:** Three buttons are located on the right side: "OK", "Cancel", and "Help".


Vertex™ 72-Point Continuous Monitor

4.4.3 Updating Program

Contact Honeywell Analytics for details.

4.4.4 Restore OnScreen Keyboard

Use the OnScreen Keyboard button to restore the keyboard if it becomes hidden.

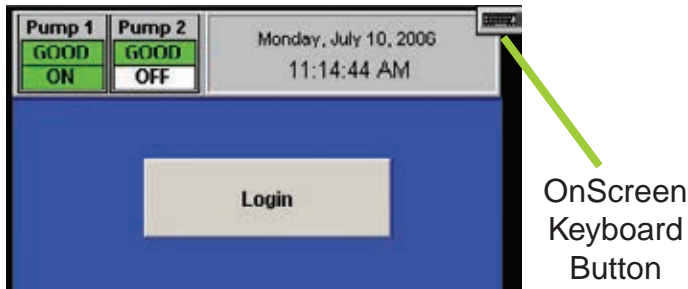


4.4.5 Stopping Project

Use Stop Project to exit the Vertex program. Touch Project and then Stop Project.

Even though the Vertex program is not running, individual analyzers continue to monitor and store data in their internal memory.

Vertex™ 72-Point Continuous Monitor

4.5 Review Functions

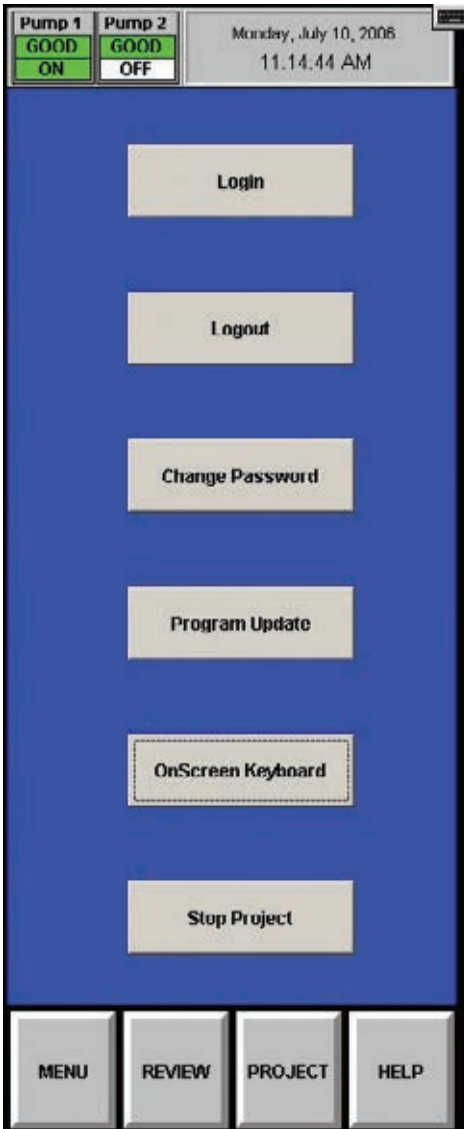

Use Review functions to view information stored in the Vertex System database. Available for viewing through the Review menu are:

- View currently active events using Event List.
- View historical events using Event History.
- View historical or real time concentration data through the Data Trend window.
- Access ChemCam functionality.

4.5.1 Event History

An event is any action that the Vertex System is required to enter into the database. As events occur, the Vertex System stores the events in a database on the DAq PC. The default database format is Microsoft Access.

Use the Event History Window to sort and filter data in the event log.

Vertex™ 72-Point Continuous Monitor

| Date/Time | Event | Module | Point | Gas | Conc/Data | Unit | Message |
|-----------------------|-------------------|--------|-------|--------|-----------|-------|---------------------------------|
| 7/10/2006 10:07:20 AM | USER RESET | ALL | 0 | | 0 | | Command - User Reset All Events |
| 7/10/2006 10:07:19 AM | RESET INST FAULT | Az1-2 | 3 | | 0 | | 210 Optics Noise |
| 7/10/2006 10:07:19 AM | RESET INST FAULT | Az1-2 | 1 | | 0 | | 210 Optics Noise |
| 7/10/2006 10:07:17 AM | ALM WARNING | Az3-3 | 8 | NH3 | 140000001 | ppm | Concentration > Warning |
| 7/10/2006 10:07:16 AM | RESET ALM WARNING | Az3-3 | 8 | | 140000001 | | Concentration > Warning |
| 7/10/2006 10:05:57 AM | INFO | Az1-2 | 2 | NH3-II | | 3 | ALDE Detected |
| 7/10/2006 10:05:55 AM | TWA | Az1-2 | 1 | NH3-II | | 0 ppm | Time Weighted Average |
| 7/10/2006 10:05:55 AM | IWA | Az1-2 | 3 | NH3-II | | 0 ppm | Time Weighted Average |
| 7/10/2006 10:05:53 AM | INST FAULT | Az1-2 | 3 | NH3-II | | 15 | 210 Optics Noise |
| 7/10/2006 10:05:53 AM | INST FAULT | Az1-2 | 1 | NH3-II | | 15 | 210 Optics Noise |
| 7/10/2006 10:05:39 AM | INFO | Az1-2 | 4 | NH3-II | | 72 | ALDE Detected |
| 7/10/2006 10:05:30 AM | ALM WARNING | Az3-3 | 8 | NH3 | 140000001 | ppm | Concentration > Warning |

Filter Options: Sort Options: << >> PageUp PageDown Total: 500

On Date: ... Module: ... Logging Station: ...
 Date Range: From: ... To: ... Point: ... User ID: ...
 Show All Dates Max Records: Event: ...

Events include but are not limited to:

- Alarms and faults
- User log in and log outs
- Configuration changes
- System maintenance
- Security changes
- Time and date of power up
- User comments

The peak concentration during an alarm is reported in the Conc/Data field of the reset event. This supplements the concentration reported in the Alarm event, which is the first concentration reported by the Vertex after an alarm threshold is first exceeded.

Each event record contains the following minimum information:

- Date and time of the event
- Module name
- An event message which may include alarm status, user login state or a comment.
- Logging station computer name

To view the event log, choose Main Screen, Review and then Event History.

Unless sorted, Vertex displays events in descending order with the most recent event at the top of the display.

Vertex™ 72-Point Continuous Monitor

Sort Options

Sorting arranges data according to the values in one of the sort lists. The default sorting of events is chronologically with the most recent events first.

If the data base is large, the sort may take a while.

Filter Options

Apply filters to find a subset of events in the log. A filtered list displays only the rows that meet the criteria you specify.

Note:

Changes to sort and filter options will not take effect until you press Apply/Refresh.

The screenshot shows the 'Event History Viewer' interface. At the top is a table with columns: DateTime, Event, Module, Point, Gas, Conc/Data, Unit, and Message. The table contains several rows of event data, some highlighted in green, red, or yellow. Below the table is a control panel with 'Filter Options' and 'Sort Options' sections. The 'Filter Options' section includes fields for Date Range (From: 6/25/2006, To: 7/10/2006), Module (All), Point (All), Max Records (500), Logging Station (VERTX290-0500P), User ID (All), and Event (All). The 'Sort Options' section has buttons for '<<', '>>', 'PageUp', and 'PageDown'. On the right side of the control panel are buttons for 'Apply/Refresh', 'Display All', 'Misc Fields', 'Print', and 'Save'. A 'Total 500' indicator is also present.

| DateTime | Event | Module | Point | Gas | Conc/Data | Unit | Message |
|-----------------------|-------------------|--------|-------|--------|------------|------|---------------------------------|
| 7/10/2006 10:07:20 AM | USER RESET | ALL | 0 | | 0 | | Command - User Reset All Events |
| 7/10/2006 10:07:19 AM | RESET INST FAULT | Az1-2 | 3 | | 0 | | 210 Optics Noise |
| 7/10/2006 10:07:19 AM | RESET INST FAULT | Az1-2 | 1 | | 0 | | 210 Optics Noise |
| 7/10/2006 10:07:17 AM | ALM WARNING | Az3-3 | 8 | HF | 1.40000001 | ppm | Concentration > Warning |
| 7/10/2006 10:07:16 AM | RESET ALM WARNING | Az3-3 | 8 | | 1.40000001 | | Concentration > Warning |
| 7/10/2006 10:05:57 AM | INFO | Az1-2 | 2 | NH3-II | 3 | | ALDE Detected |
| 7/10/2006 10:05:55 AM | TWA | Az1-2 | 1 | NH3-II | 0 | ppm | Time Weighted Average |
| 7/10/2006 10:05:55 AM | IWA | Az1-2 | 3 | NH3-II | 0 | ppm | Time Weighted Average |
| 7/10/2006 10:05:53 AM | INST FAULT | Az1-2 | 3 | NH3-II | 15 | | 210 Optics Noise |
| 7/10/2006 10:05:53 AM | INST FAULT | Az1-2 | 1 | NH3-II | 15 | | 210 Optics Noise |
| 7/10/2006 10:05:39 AM | INFO | Az1-2 | 4 | NH3-II | 72 | | ALDE Detected |
| 7/10/2006 10:05:30 AM | ALM WARNING | Az3-3 | 8 | HF | 1.40000001 | ppm | Concentration > Warning |

<< >>

Horizontal scroll to show additional fields.

Apply/Refresh

Touch to apply the selected sort or filter or filter options.

Page Up/Page Down

Vertical scroll to show additional records.

Vertex™ 72-Point Continuous Monitor

Date fields

Defaults to current date. The default range is current date and the previous two weeks.

The screenshot shows the 'Event History Viewer' window. At the top is a table with columns: DateTime, Event, Module, Point, Gas, Conc/Data, Unit, and Message. Below the table are 'Filter Options' and 'Sort Options' sections. The 'Filter Options' section includes: 'On Date' (radio button), 'Date Range' (From: 6/25/2006, To: 7/10/2006), 'Show All Dates' (radio button), 'Module' (All), 'Point' (All), 'Max Records' (500), 'Logging Station' (VERTX290-0500P), 'User ID' (All), and 'Event' (All). There are also 'PageUp', 'PageDown', 'Apply/Refresh', 'Display All', 'Mge Fields', 'Print', and 'Save' buttons. A red box highlights the date range fields, and a green box highlights the Max Records field. Red arrows point from the text blocks to these specific fields.

| DateTime | Event | Module | Point | Gas | Conc/Data | Unit | Message |
|-----------------------|-------------------|--------|-------|--------|------------|------|---------------------------------|
| 7/10/2006 10:07:20 AM | USER RESET | ALL | 0 | | 0 | | Command - User Reset All Events |
| 7/10/2006 10:07:19 AM | RESET INST FAULT | Az1-2 | 1 | | 0 | | 210 Optics Noise |
| 7/10/2006 10:07:19 AM | RESET INST FAULT | Az1-2 | 1 | | 0 | | 210 Optics Noise |
| 7/10/2006 10:07:17 AM | ADM WARNING | Az3-3 | 8 | HF | 1.40000001 | ppm | Concentration > Warning |
| 7/10/2006 10:07:16 AM | RESET ALM WARNING | Az3-3 | 8 | | 1.40000001 | | Concentration > Warning |
| 7/10/2006 10:05:57 AM | INFO | Az1-2 | 2 | NH3-II | 3 | | ALDE Detected |
| 7/10/2006 10:05:55 AM | TWA | Az1-2 | 1 | NH3-II | 0 | ppm | Time Weighted Average |
| 7/10/2006 10:05:55 AM | IWA | Az1-2 | 1 | NH3-II | 0 | ppm | Time Weighted Average |
| 7/10/2006 10:05:53 AM | INST FAULT | Az1-2 | 3 | NH3-II | 15 | | 210 Optics Noise |
| 7/10/2006 10:05:53 AM | INST FAULT | Az1-2 | 1 | NH3-II | 15 | | 210 Optics Noise |
| 7/10/2006 10:05:39 AM | INFO | Az1-2 | 4 | NH3-II | 72 | | ALDE Detected |
| 7/10/2006 10:05:30 AM | ADM WARNING | Az3-3 | 8 | HF | 1.40000001 | ppm | Concentration > Warning |

Maximum Records

Use to limit the number of records to display. Vertex will display up to 10,000 records. The default setting is 500. Use the up and down arrow buttons to increment the value by 100.

Advance Filter Options





Use the Advance Filter Option buttons located to refine the sort.



Vertex™ 72-Point Continuous Monitor

Advanced Filter Options-Events

Use to filter on specific alarms, faults or other events

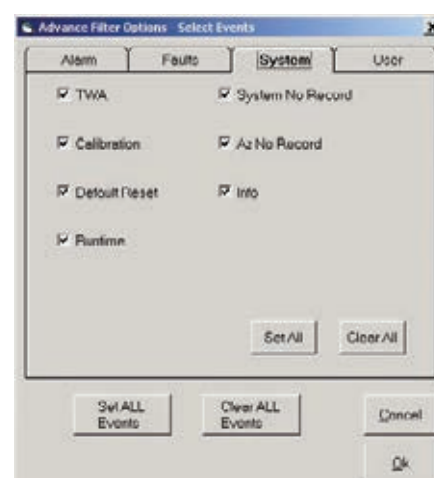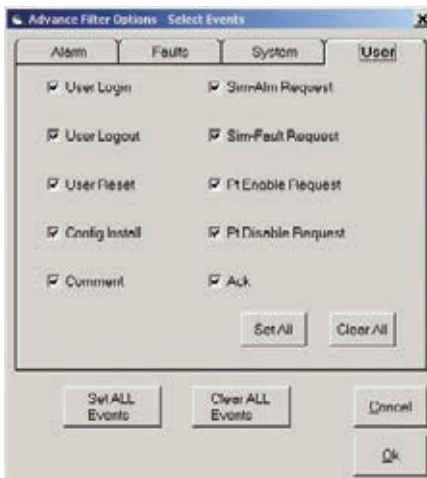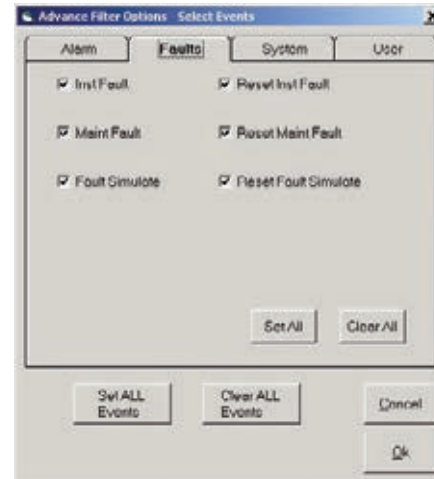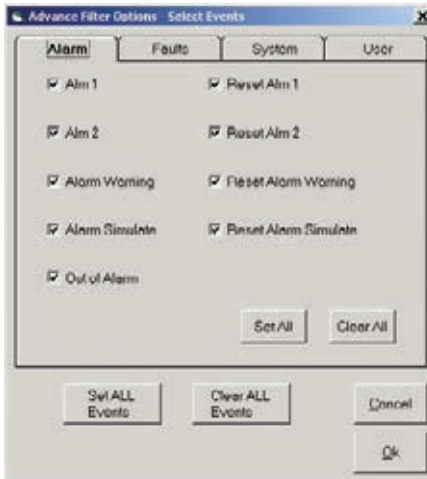

Vertex™ 72-Point Continuous Monitor

Select Filter Options-Modules

Use to filter events based on specific points, analyzers or other hardware modules

Advance Filter Options - Select Modules

Select desired Modules

Az 1-1 Az 1-2 Az 1-3

Az 2-1 Az 2-2 Az 2-3

Az 3-1 Az 3-2 Az 3-3

OPC Pump PLC

HMI

Set All Clear All

Set All Clear All

Select Pts

Point 1 Point 5

Point 2 Point 6

Point 3 Point 7

Point 4 Point 8

All 8 Pts

Set All Clear All

Cancel OK

Vertex™ 72-Point Continuous Monitor


Select User ID or Logging station

Use to select a specific Vertex station or operator.



Vertex™ 72-Point Continuous Monitor

4.5.2 Data Trend

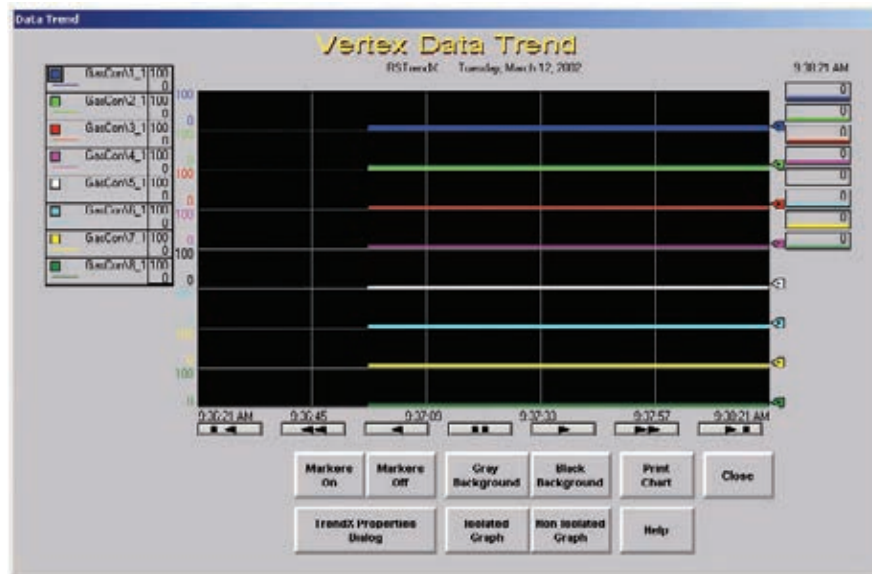

Vertex plots gas concentration in the Data Trend window. You may choose multiple points to plot as colored line graphs. Data can be either historical data from the data log or a continuous, real-time display.

Data Trend plots on two types of graphs:

Non-isolated graph - Each line plots on the same y-axis.

Isolated graph - Vertex splits the screen into two or more parts. Each line plots on an independent y-axis.

Use the TrendX Properties button to assign colors and to select, filter and sort data. Touch Help for additional information on using the TrendX properties.

Vertex™ 72-Point Continuous Monitor

4.5.3 Optional ChemCam

The Vertex ChemCam option provides a means to observe the stains on the last window of a Chemcassette® tape. It consists of a small video camera located between the Chemcassette® take up reel and the optic head. The Vertex System records images of the stains in either AutoPicture mode or by a ChemCam Live capture. See [Section 3.7.3 Set Analyzer Window](#), for more information.

Note:


Some faint stains may not be visible via the camera.

To use the ChemCam window, touch Main Screen, Review and then ChemCam.

ChemCam Live

Use the ChemCam Live tab to manually save an image to the ChemCam database.

1. Touch the image you have selected for capture. The border around the image will turn green.
2. Enter comments about the image in the Comment text box.
3. Touch Capture. The border on the image will turn red.
4. When the border returns to green, the capture is complete. Choose an additional image to capture or touch Close.

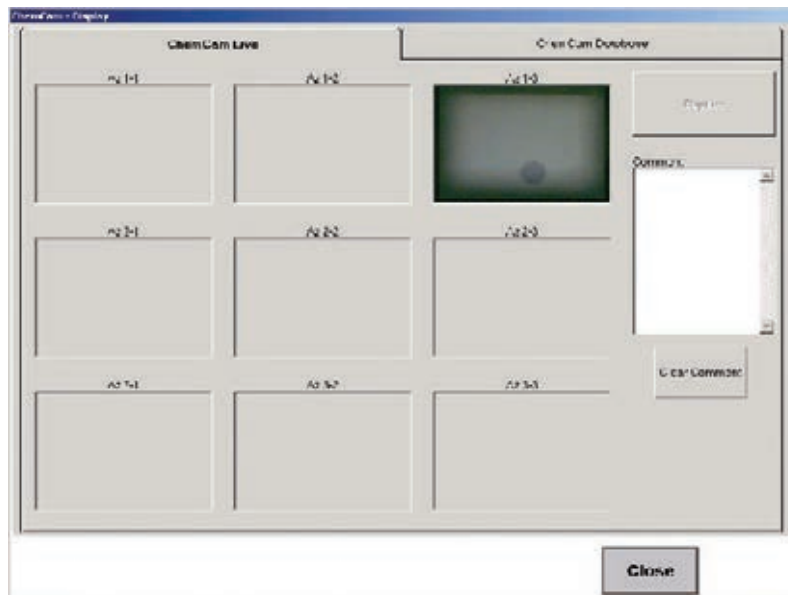

Vertex™ 72-Point Continuous Monitor

ChemCam Database


Use the ChemCam Database tab to review, print or delete records in the ChemCam database. The Refresh button updates the window with records stored since the window was opened.

Every record in the database includes the following:

- Time and date of capture
- Type of capture (manual or automatic)
- Analyzer associated with the database entry
- Chemcassette® serial number
- Computer name

Additional information for records stored by ChemCam AutoPicture includes

- Point number which triggered the alarm
- Gas concentration at the time of alarm
- Unit of measure for the concentration
- The alarm level the concentration reached
- The location ID

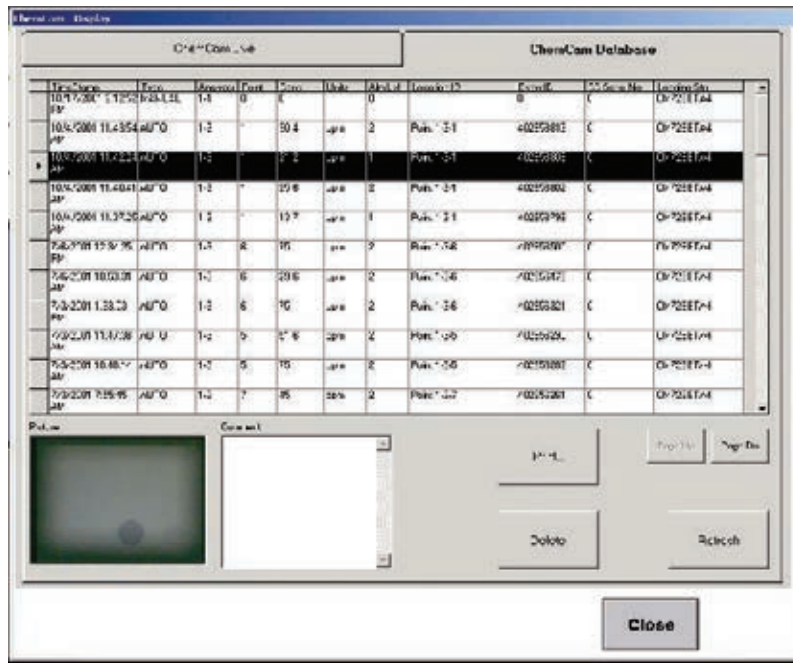

Vertex™ 72-Point Continuous Monitor

4.5.4 Event List

With the Event List, view and acknowledge active alarms and faults. Vertex displays the newest event at the top of the list. Scroll through the events with


the Back and More buttons. To select an event as the current event, touch the event. The current event will have a green border.

Ack Current

Acknowledges an operator has seen the current event

Ack All

Acknowledges an operator has seen all of the events

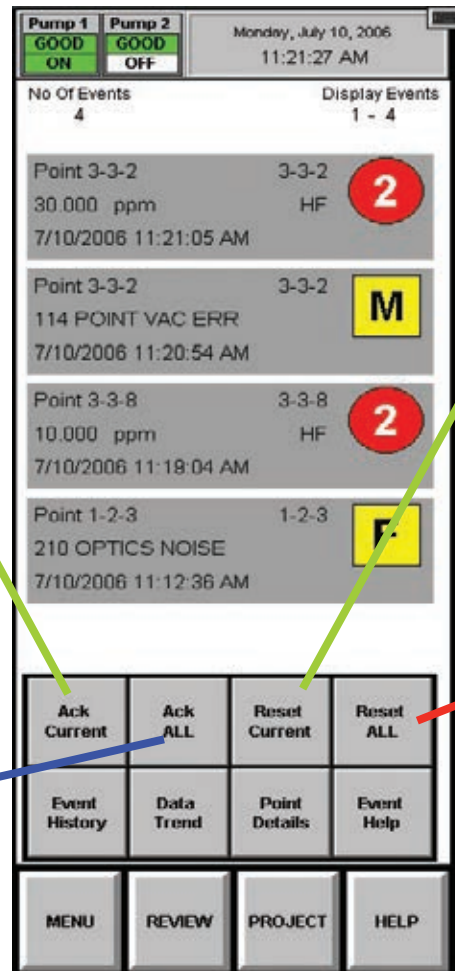


Reset Current

Clears the active event from the list. If the problem has not been resolved, events will continue to occur.

Reset All

Clears all events from the list. Reset All is not instantaneous. Vertex may not remove events from the list for several seconds.

Vertex™ 72-Point Continuous Monitor

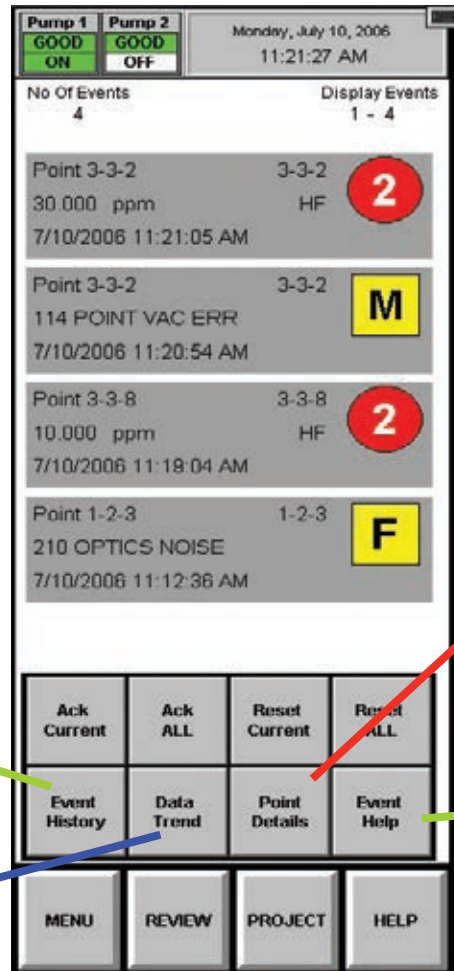

Event History
Opens the Event History window

Data Trend
Opens the Data Trend window

Point Details
Displays point detail for current selected point

Event Help
Displays the HTML help file designated for the point. Point help files are linked in the configuration utility.

Vertex™ 72-Point Continuous Monitor

4.6 Menu Buttons

Use the buttons in Menu to perform:

- 4.6.1 Run Time Options
- [4.6.2 Flow Calibration](#)
- [4.6.3 Maintenance](#)
- [4.6.4 Diagnostics](#)
- [4.6.5 Service](#)
- [4.6.6 Security Access](#)
- [4.6.7 Configuration](#)

(See also [Section 5 Maintenance](#))

(See also [Section 3.7 Configuration Utility](#))

4.6.1 Run Time Options

Use the Run Time Options Window to perform one of the following four functions:

- Start or stop an analyzer from monitoring
- Enable or temporarily disable a point
- Enable or temporarily disable an alarm
- Enter a comment event into the event list

A point or alarm disabled in the Run Time Options window will remain disabled until it is again enabled in this window. However, an event window will open to remind operators the alarm or point is no longer providing coverage. The event will occur after the timeout period set in the configuration window.

Vertex always displays the following items in the Run Time Options window.

Vertex™ 72-Point Continuous Monitor

To Start or Stop an Analyzer from Monitoring

Stopping an analyzer from monitoring prevents the system from triggering false alarms during testing and maintenance.

1. Choose Monitoring from the function buttons at the bottom of the screen.

2. Select the analyzer(s) from the keypad. The selected analyzer(s) will turn dark gray on the keypad.
3. Choose Stop or Start Monitor to change the state of the analyzer.

The status indicator changes to reflect the current status on the main screen, and on the analyzer button on the keypad.

Stop/Start Monitor



Analyzer Keypad

Monitoring Screen


Point Status

Vertex™ 72-Point Continuous Monitor

To Disable or Enable a Point

Disabling a point prevents the system from triggering false alarms during testing and maintenance. Vertex will not perform point specific fault checks on disabled points.

1. Choose Point Enable/Disable from the function buttons.
2. Select the analyzer and point from the keypad.

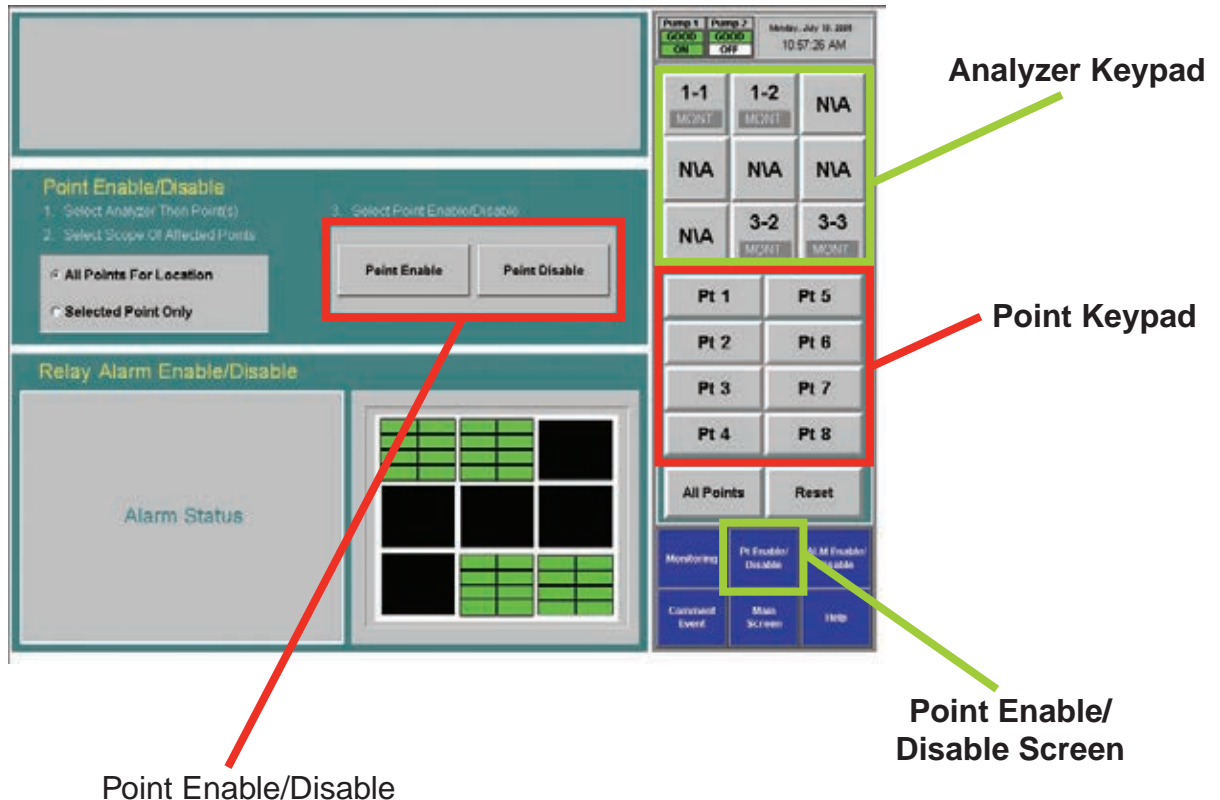

Vertex™ 72-Point Continuous Monitor


3. Choose Selected Point Only to enable / disable a single point.

or

Choose All Points for Location to enable / disable all of the points monitoring a location.

4. Touch Point Enable or Point Disable to change the state of the point.

A disabled point turns light grey. An enabled point is green in the point status window.

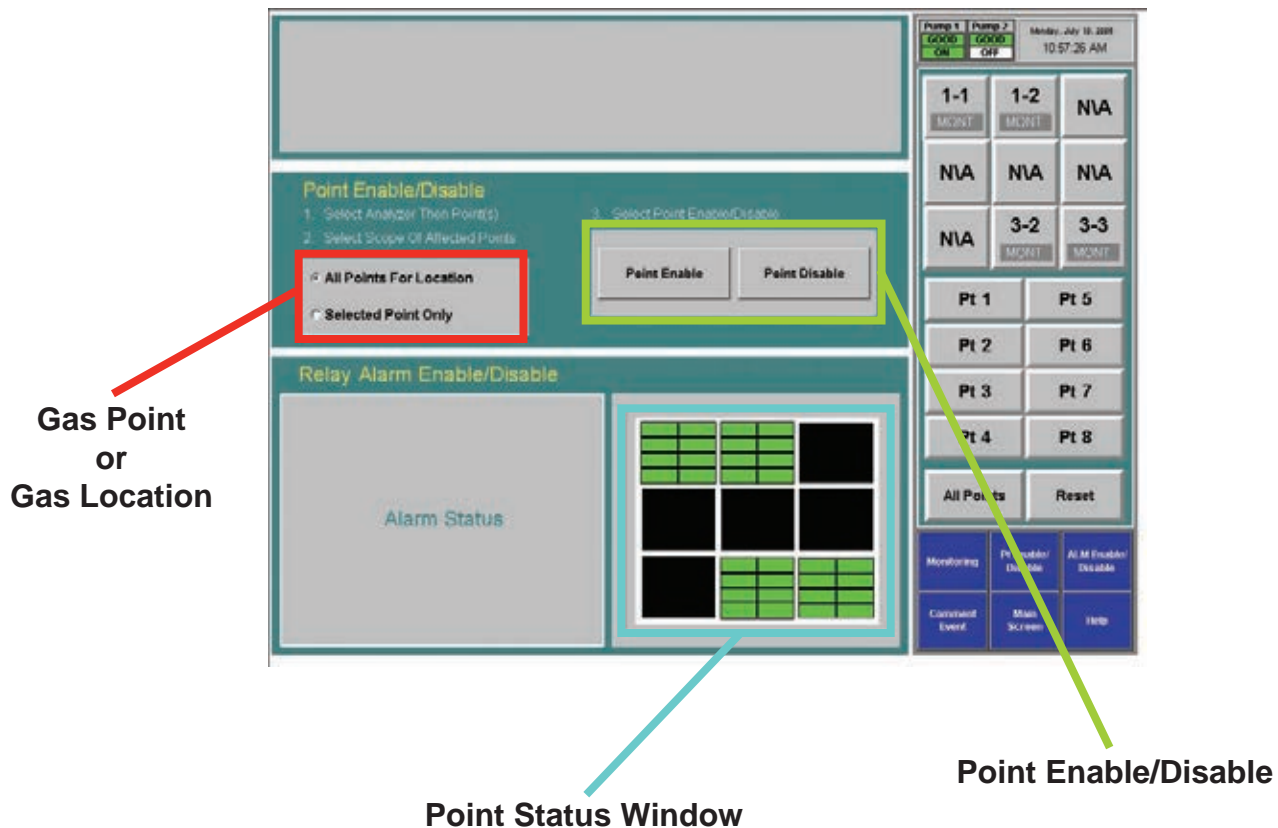

Vertex™ 72-Point Continuous Monitor

To Disable or Enable Alarms


Disabling alarms prevents the system from triggering false alarms during testing and maintenance.

1. Select the analyzer and point from the keypad. The selected points turn dark gray on the keypad.
2. Choose Selected Point Only to enable / disable an alarm on a single point

or

Choose All Points for Location to enable / disable all of the alarms associated with a location.

3. Touch Alarm Enable or Alarm Disable to change the state of the point. A disabled alarm turns light blue. An enabled alarm turns green in the point status window.

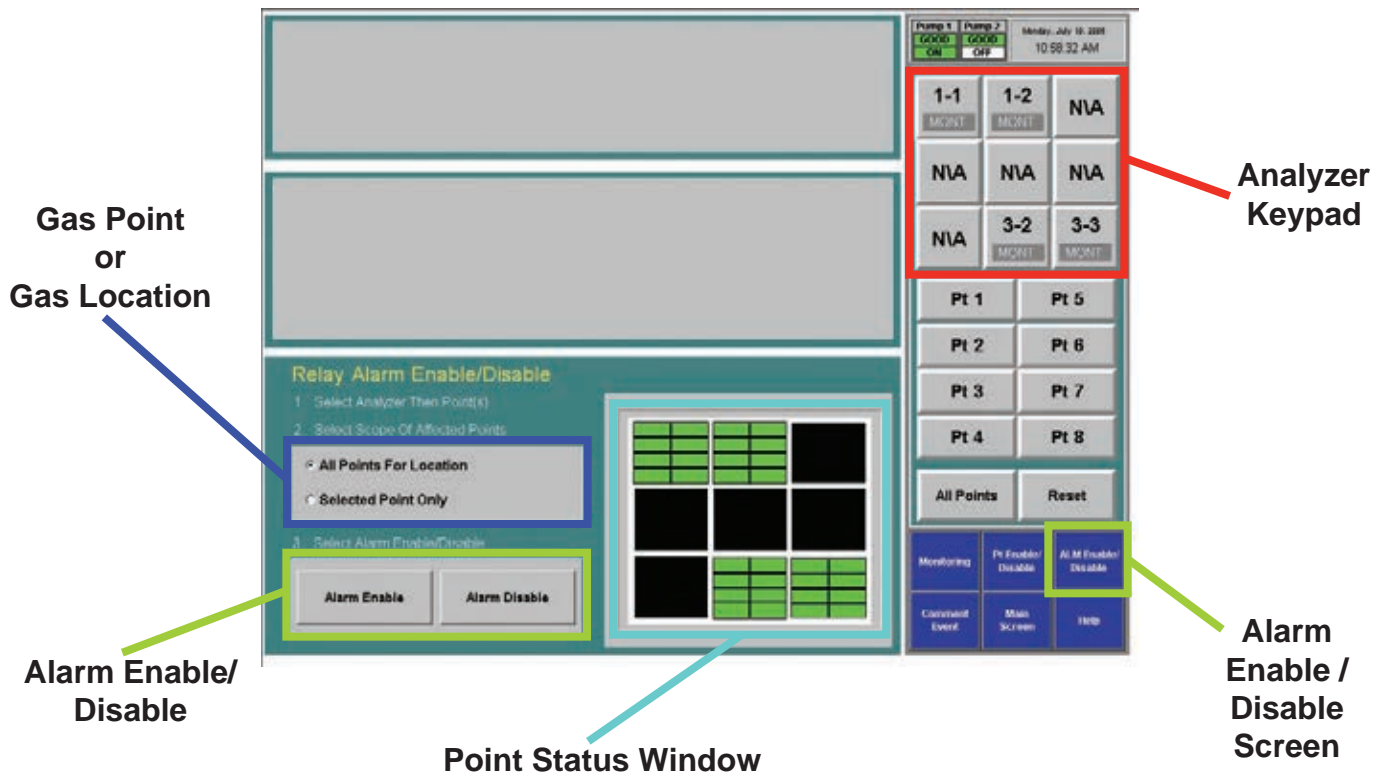

Vertex™ 72-Point Continuous Monitor


Comment Event

Use Comment Event to enter information about a point or analyzer that Vertex would not automatically enter into the database. The comment is stored in Event History.

1. To enter a comment:
2. Touch Comment Event.

3. Enter the text for the event.
4. Choose analyzer and point to associate with the comment (optional).
5. Touch Create Event.

The comment event is associated with the analyzer and point selected on the keypads. To enter a comment independent of a point, choose Reset Az & Pt.

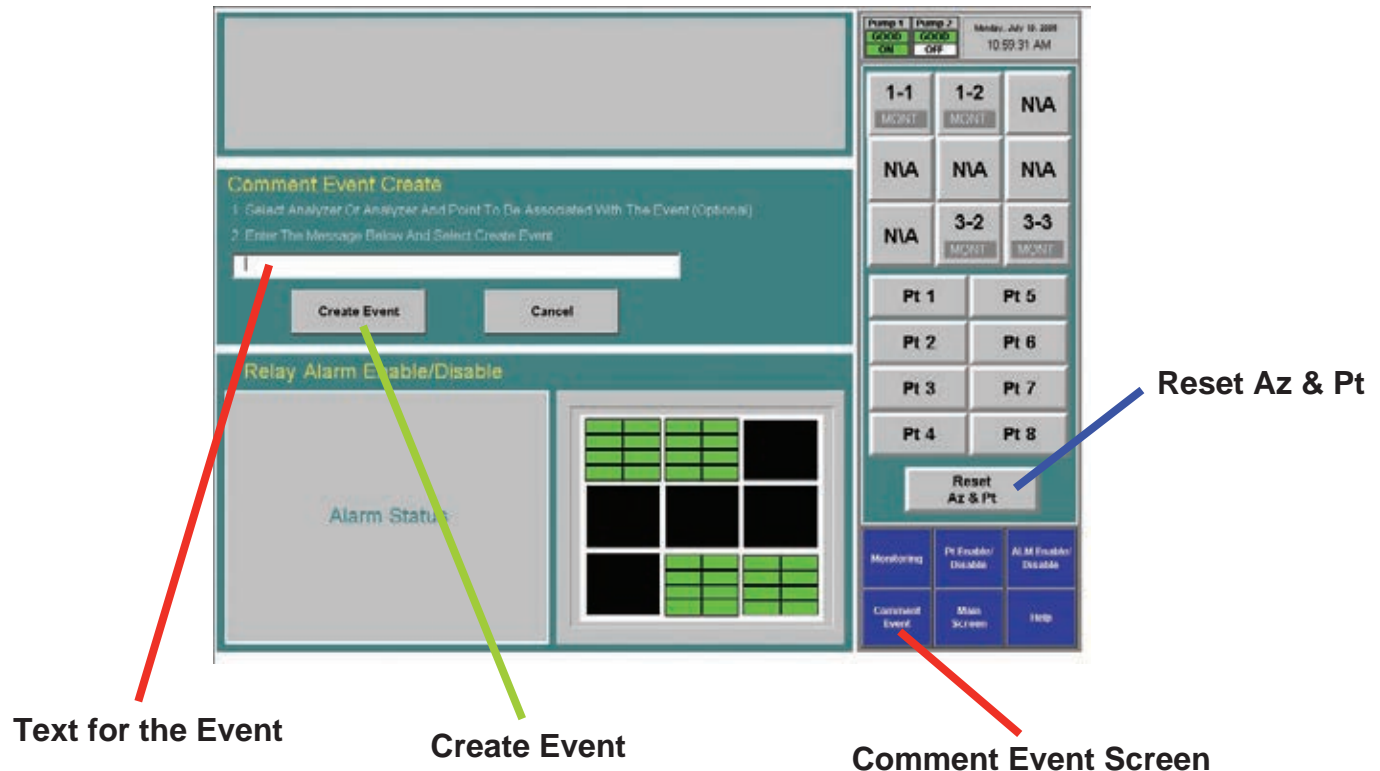

Vertex™ 72-Point Continuous Monitor

4.6.2 Flow Calibration

The Vertex System requires exact flow rates and vacuum levels for accurate gas detection. Factors which affect proper flow setup are sample line length, the type of analyzer installed, the condition of the filters, and the supply vacuum level.

Note:


The supply vacuum level was set at installation and needs to be verified or adjusted if analyzers are added or removed. See [Section 3.10.1 Set Supply Vacuum](#)

To open the Flow Calibration Window, choose Main Screen, Menu, Runtime Options, Calibration.

The Flow Calibration Window

The Flow Calibration window consists of three parts:

- Flow display
- Analyzer selection pad
- Function buttons

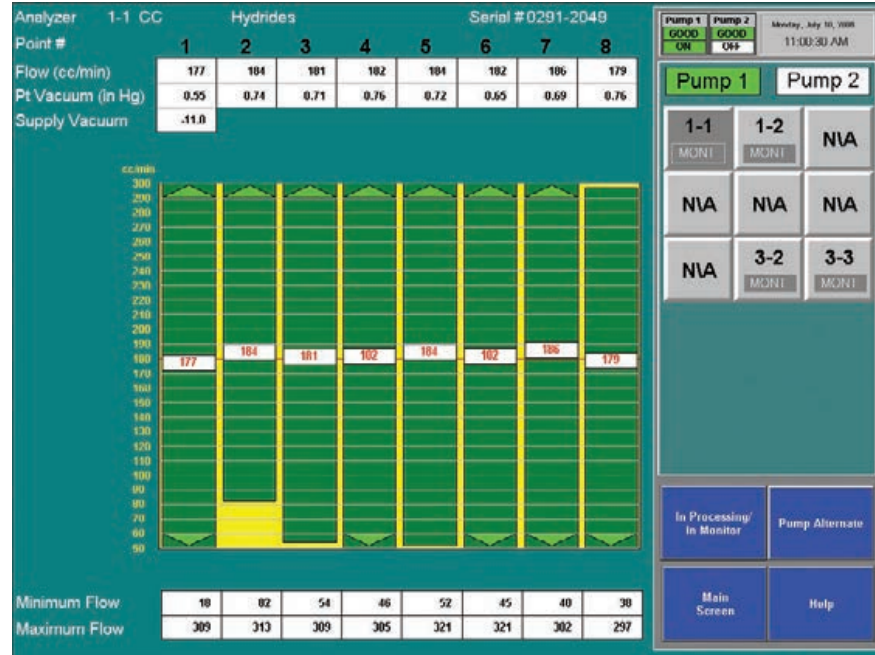

Vertex™ 72-Point Continuous Monitor

Flow Display

The flow display shows information critical to verifying the flow rate for each point.

Choose the analyzer from the selection pad in the upper right-hand corner. The eight points display their flow.

Flow (cc/min)


The real-time sample flow to the point

Point Vacuum (in Hg)

Pt. Vacuum indicates the restriction from sample line length and the pressure developed by shared lines

Supply Vacuum

Typical supply vacuum is 10-13 inches Hg

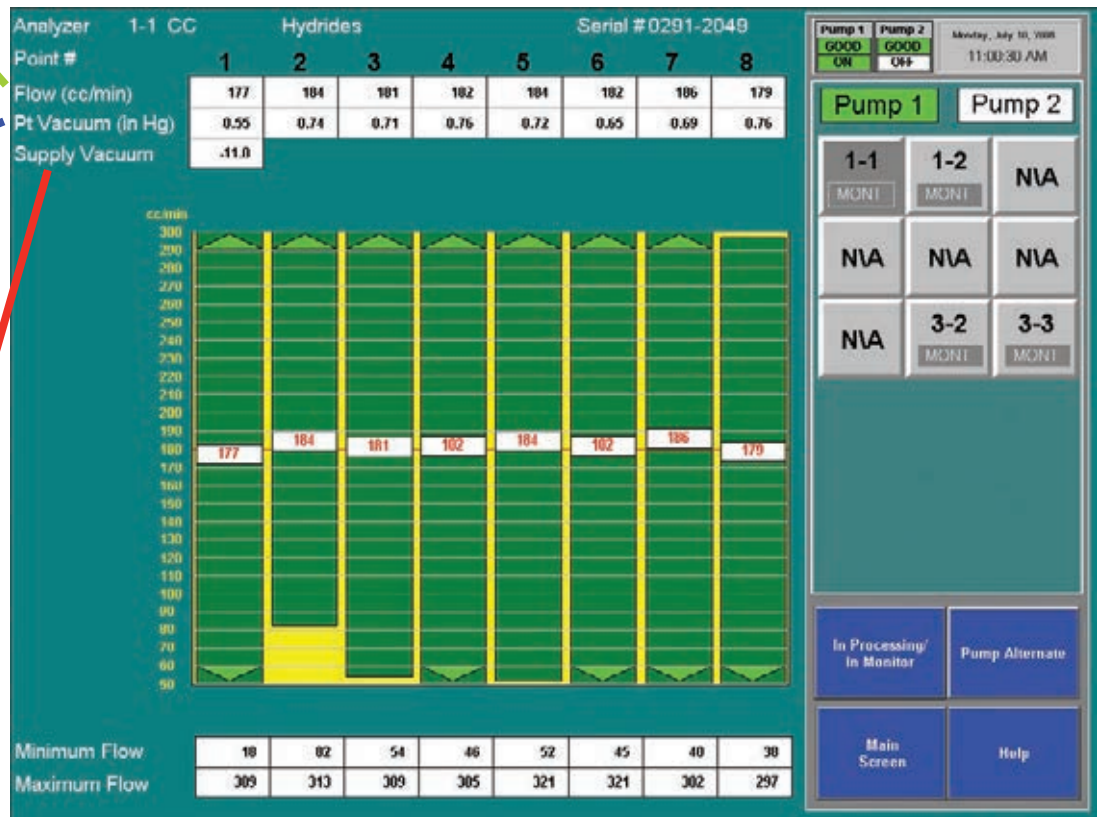

Vertex™ 72-Point Continuous Monitor

Proportional Value Range


A vertical green bar displays the dynamic range over which the proportional valve can adjust the flow rate. Indicated numerically by Minimum Flow and Maximum Flow.

Minimum Flow

The minimum flow possible with the attached sample line and orifice

Maximum Flow

The maximum flow possible with the attached sample line and orifice

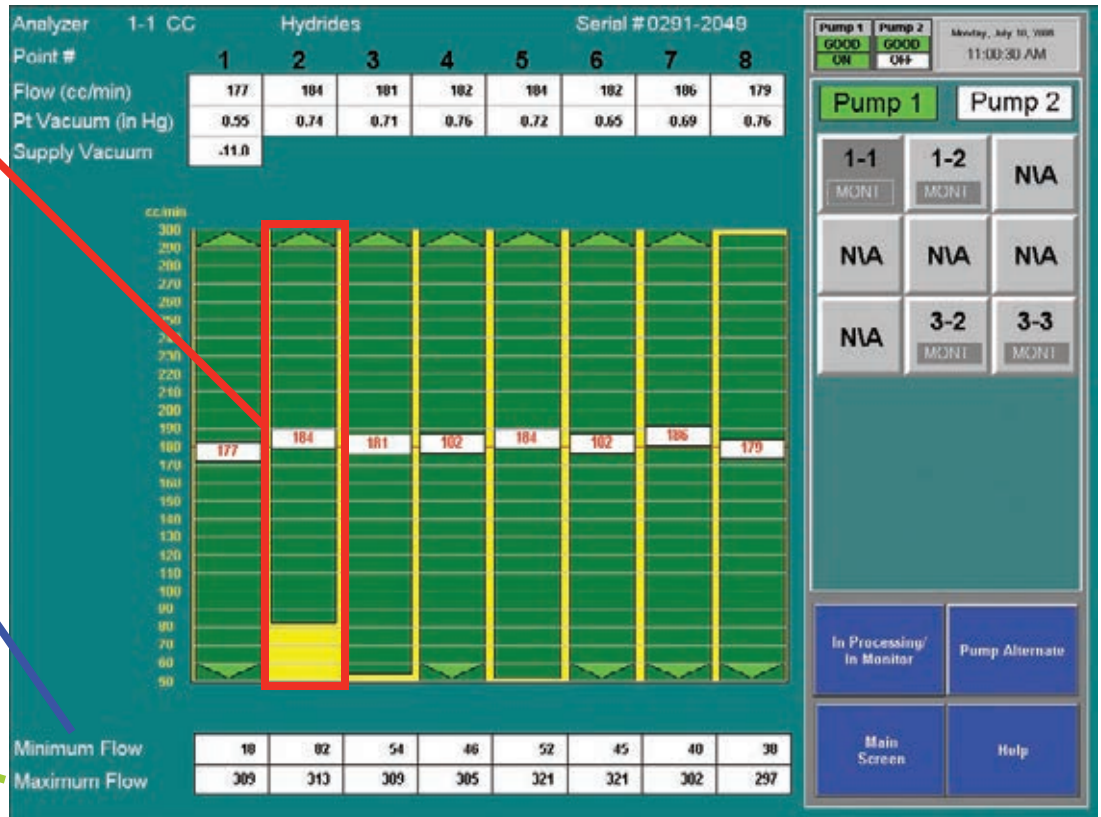


Vertex™ 72-Point Continuous Monitor

Target Flow

A horizontal red line indicates the target flow rate required by the Vertex System for correct analysis. The target flow rate is 180 cc/min +/-5% (171-189 cc/min)


Flow Rate

A floating white box indicates the actual flow rate. The position of the box graphs the flow; the numerical value of the flow is displayed in the box.

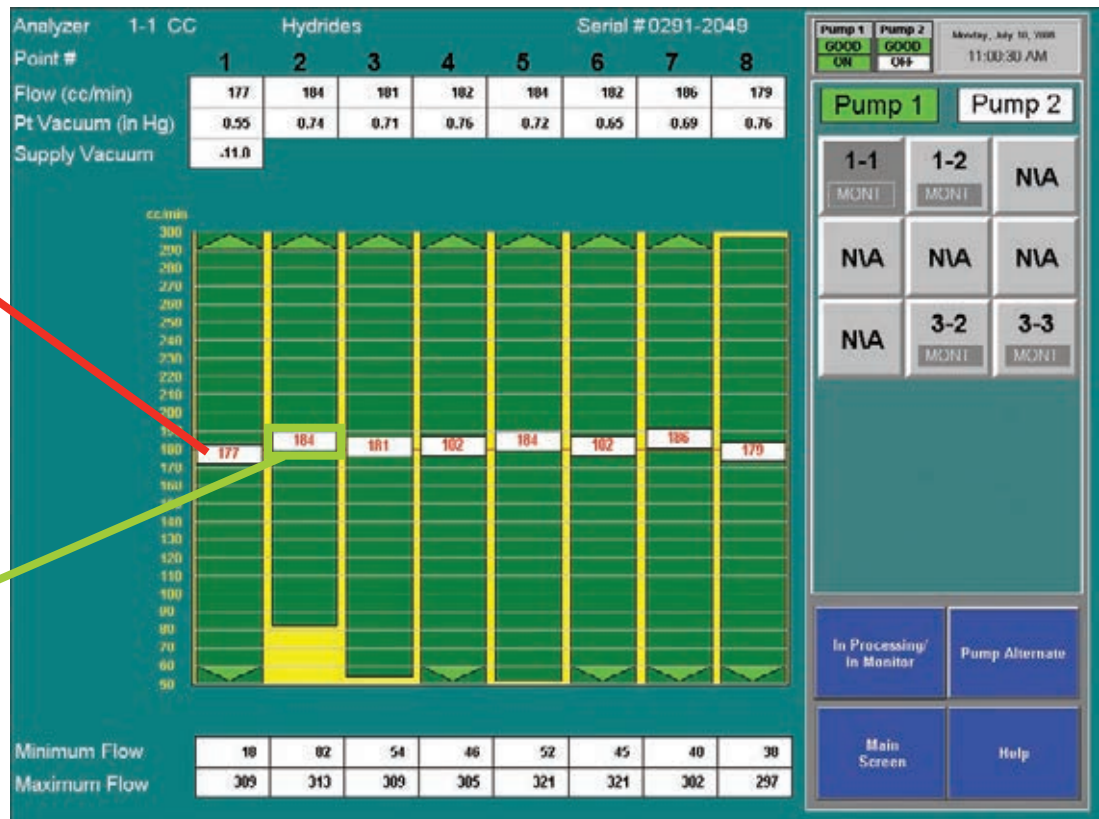

Vertex™ 72-Point Continuous Monitor

Function Buttons

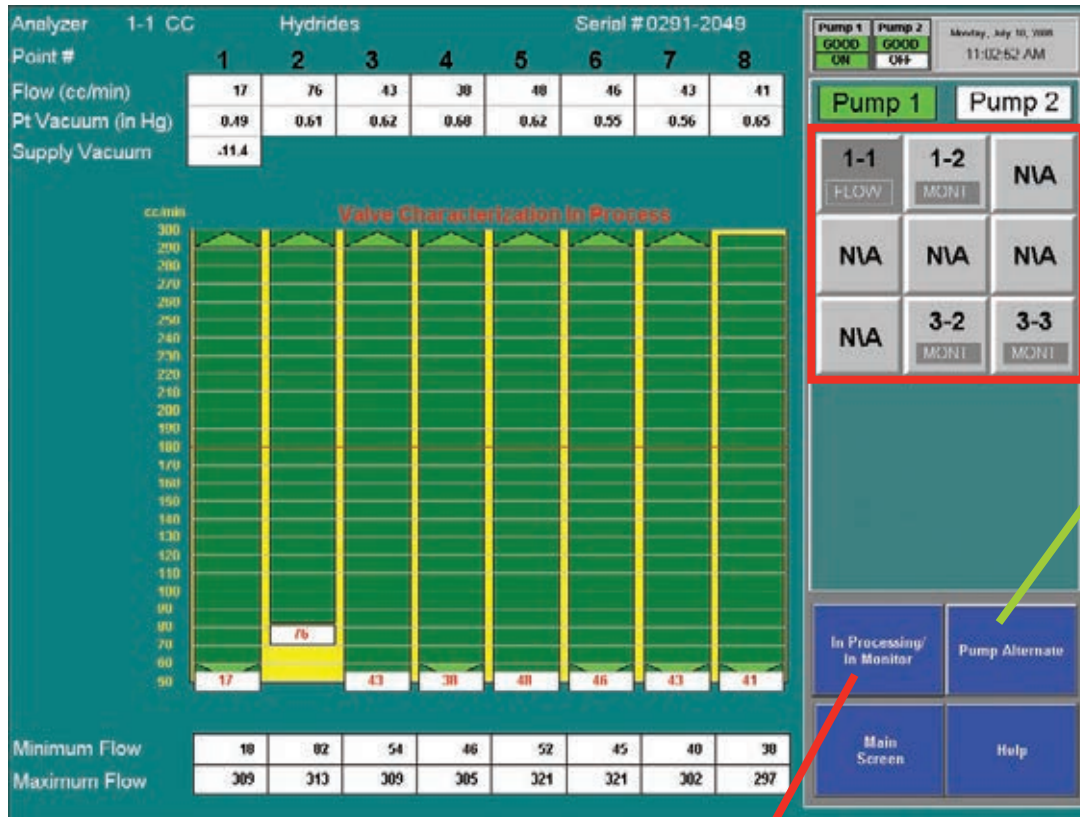

Selection Pad

Pump Alternate
Toggles between
pumps 1 and 2

Auto Balance
Characterizes the control
range of the proportional
value

Vertex™ 72-Point Continuous Monitor

Auto Balance the Flow Rate

Note:

All analyzers should be in Monitor except for the one being Auto Balanced.

Perform an Auto Balance for the following reasons:

- When a line length is changed
- If end-of-line filters are replaced
- The gas family changes
- When a new Chemcassette® is installed
- When analyzers are added to a Vertex rack

To perform an Auto Balance:

1. Make sure Chemcassette® is installed.
2. Set analyzer to idle (not monitoring). See [Section 4.6.1 Run Time Options](#) for the procedure.
3. If not already open, touch Main Screen, Menu, Calibration. The Flow Diagnostic window opens.
4. Choose analyzer from the selection pad in the upper right-hand corner.

5. Touch the Auto Balance function button. Vertex will characterize the flow between minimum and maximum. This data will be used to set the flow to 180 cc/min. when you return the analyzer to monitor mode. Autobalancing takes approximately 130 seconds to complete.
6. If required, repeat for other analyzers.

Note:


If Vertex cannot adjust the flow to the proper range (150 to 210 cc per minute at worst case condition) consult Honeywell Analytics service.

Note:

Altitude, tape porosity, and the number of analyzers installed will affect system vacuum and may affect the flow rate. The auto balance may need to be run when installing a new Chemcassette tape under limit conditions.

Vertex™ 72-Point Continuous Monitor

Flow Calibration During Auto Balance

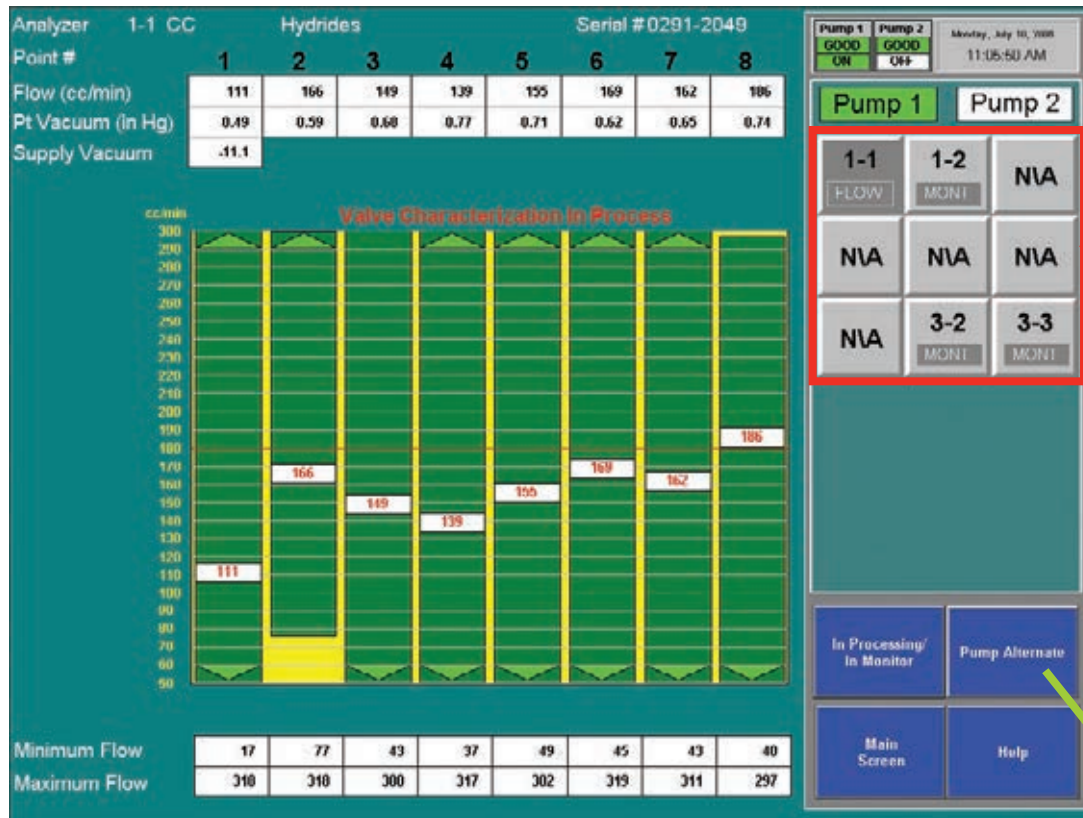

Selection Pad

Pump Alternate
Toggles between
pumps 1 and 2

4.6.3 Maintenance

Use the Maintenance window to:

- Load and change Chemcassette® tape (See [Section 5.3.5 Change Chemcassette® Tape](#))
- Change filters (See [Section 5.3.3 Remove Filters](#))
- Analyzer operation utilities (see the following pages)


Vertex™ 72-Point Continuous Monitor

Analyzer Operation Window

The Analyzer Operation provides four utility functions which may be useful when performing service on an analyzer.

Tape Advance and Release Analyzer can be performed while analyzer is in monitor.

Open Gate and Close Gate can only be performed in idle mode

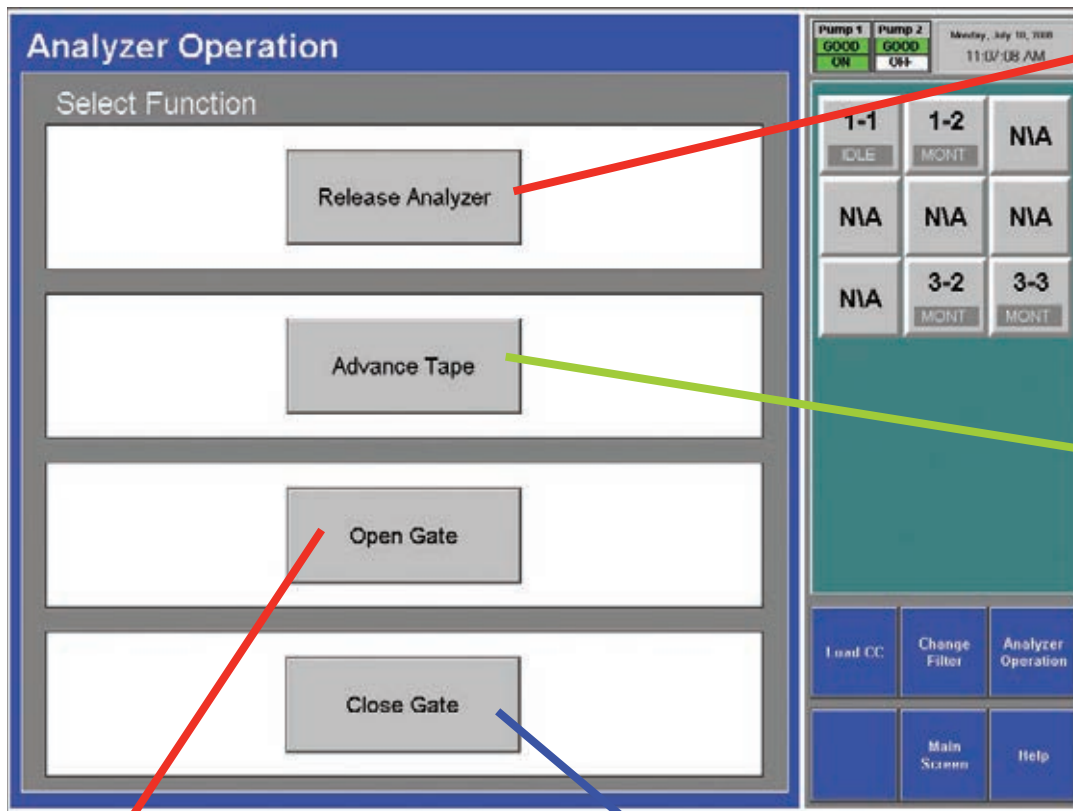

Release Analyzer
Unlocks analyzer so that you may slide it out of the cabinet

Advance Tape
Pulls a fresh section of tape into the detection head. Press once to see stains developed on points 1-4. Press twice for points 5-8.

Open Gate
Opens the optics head to release tape

Close Gate
Closes optics head

To Open Gate

Set analyzer to idle in the Runtime Options window.

1. Touch Main Screen, Menu, Maintenance then Analyzer Operations.
2. Touch the module number on the module keypad.
3. Select Gate Open.
4. When finished, press Gate Close and return analyzer to monitor mode in Runtime Options window.


Vertex™ 72-Point Continuous Monitor

4.6.4 Diagnostics


Use the Diagnostics Window to review operational settings and information about either an individual analyzer or the Vertex System. To open the Diagnostics Window, touch Menu and then Diagnostics.

System Information - Displays the profile ID number, Profile name and other critical system information.

The Profile ID is a unique number generated whenever the Vertex Profile Management utility saves a configuration file. Vertex stores the ID number in the DAq, the PLC and each analyzer. If the profile ID numbers do not match, a fault is generated and monitoring will not start.

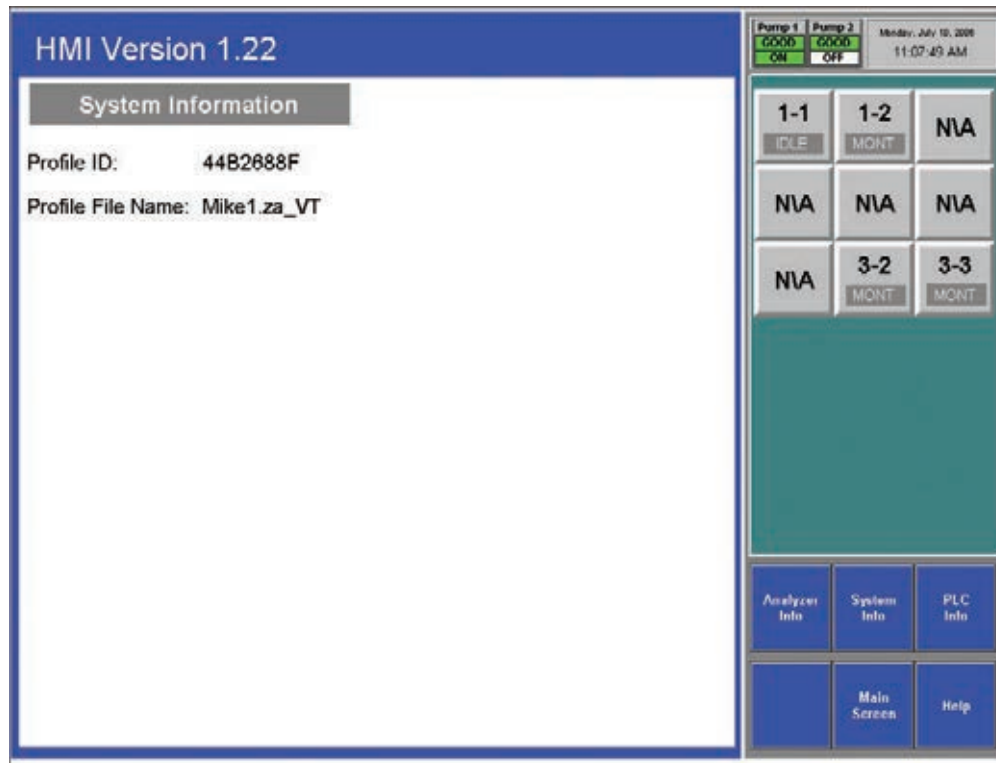

Vertex™ 72-Point Continuous Monitor

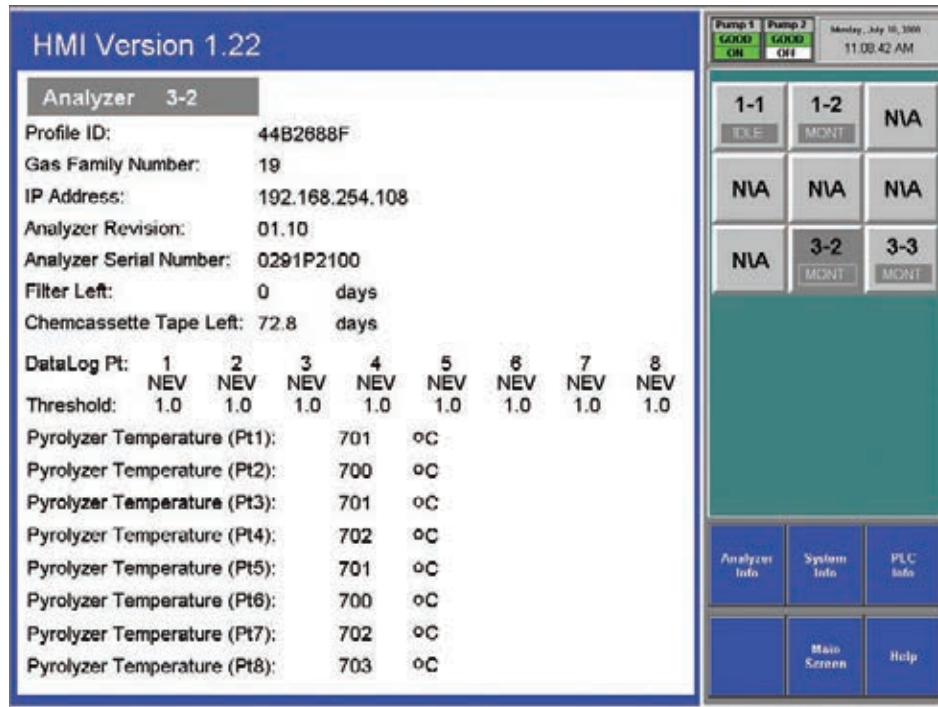


Choose the analyzer from the selection pad in the upper right-hand corner. Analyzer Information lists the following:

- Profile ID - The Profile ID is a unique number generated whenever the Vertex Profile Management utility saves a configuration file. Vertex stores the ID number in the DAq, the PLC and each analyzer. If the profile ID numbers do not match, a fault is generated and monitoring will not start.
- Gas family information
- Network IP address
- Analyzer software version number
- Analyzer Serial Number
- Time remaining on filter
- Time remaining on Chemcassette® tape
- Data logging settings for the analyzer
- Detailed information about each point in the analyzer. Pyrolyzer analyzers will also display the pyrolyzer temperature.

Vertex™ 72-Point Continuous Monitor

PLC Information

Displays the profile ID number in the PLC.

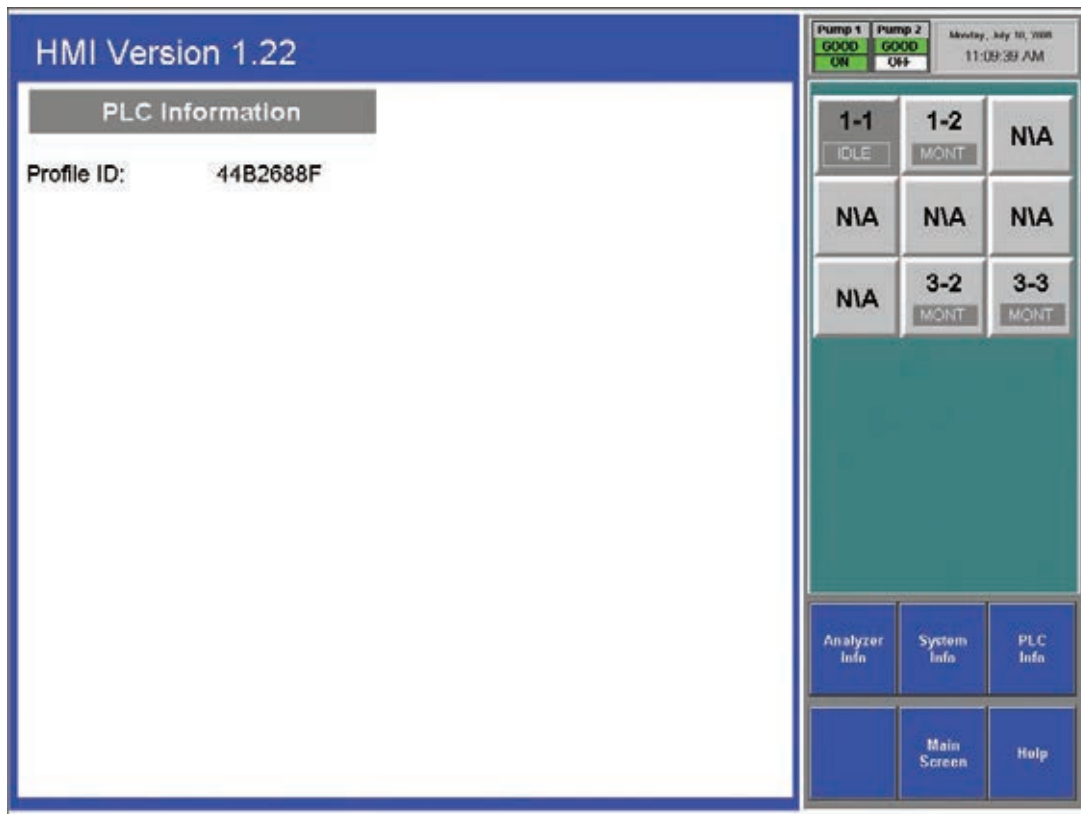


Vertex™ 72-Point Continuous Monitor

4.6.5 Service

The Service Window provides a means to trigger the fault and alarm relays.

Create Fault Now

The Create Fault Now button will only become visible after an analyzer and fault level are selected. Touch the button to generate simulated fault.

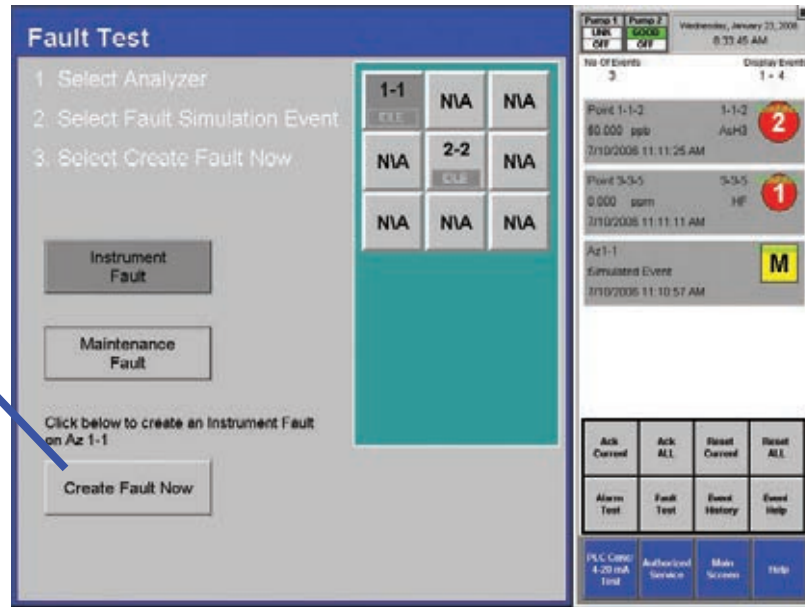

Fault Test - Use the Fault Test to verify operation of fault relays.

Note:

The fault test simulates an actual fault condition and the Vertex System activates fault relays. Notify appropriate personnel that you plan to conduct a fault test.


To conduct a fault test:

1. Choose Main Screen, Menu, Service and then Fault Test.

2. Choose the analyzer for the fault test.
3. Choose either Instrument Fault or Maintenance Fault.
4. Choose Create Fault Now to activate the relay or relays connected to the selected analyzer and a fault will appear in the event list.
5. To continue testing, repeat steps 2 through 4.

See [Section 4.5.4 Event List](#) to clear events.

Vertex™ 72-Point Continuous Monitor

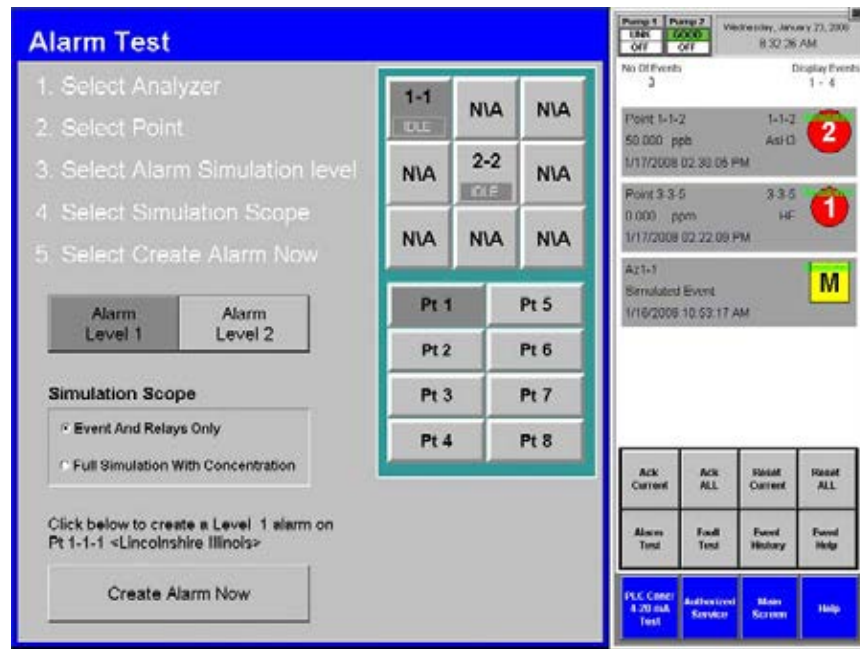

Alarm Test - Use the alarm test to simulate a gas concentration for any analyzer.

Note:

The alarm test simulates an actual alarm condition and the Vertex System activates all alarm relays. Notify appropriate personnel that you plan to conduct an alarm test.

To conduct an alarm test:

1. Choose Main Screen, Menu, Service and then Alarm Test.
2. Choose the analyzer and point for the alarm test.

3. Choose an alarm level and a simulation scope. Either scope will cause an alarm to be reported on the control network, on the relays (if equipped) and on the relevant OPC tag. Furthermore, either scope will cause creation of a simulated alarm event in the event list.
4. However if Full Simulation With Concentration is selected then a gas concentration will also be reported on the control network, on the associated OPC tag, on the point detail screen, and in the event. This concentration will correspond to the alarm 1 or 2 threshold concentration, depending on which is simulated. The alarm threshold concentration

Vertex™ 72-Point Continuous Monitor


is set via the configuration utility as described in Section 3.7.4 Configure Point. The Create Alarm Now button becomes visible only after the prerequisite selections of analyzer, point and alarm level have been made. Pressing the Create Alarm Now button creates the simulated alarm. The above screen contains examples of how alarm simulation works. A concentration of 50 ppb is being reported over the control network and OPC on point 2-2-3. The value 50 ppb is the alarm 2 threshold for this point from the configuration profile. However no concentration is being reported for 2-2-5 because the scope was set to Event And Relays Only when this event was generated. Pressing the Create Alarm Now button above will create a level 2 alarm with concentrations on point 2-2-4.

5. To continue testing, repeat steps 2 and 3.

If you choose to simulate a Level 2 alarm, you will trigger both Level 1 and 2 relays.

See [Section 4.5.4 Event List](#) to clear events.

Vertex™ 72-Point Continuous Monitor

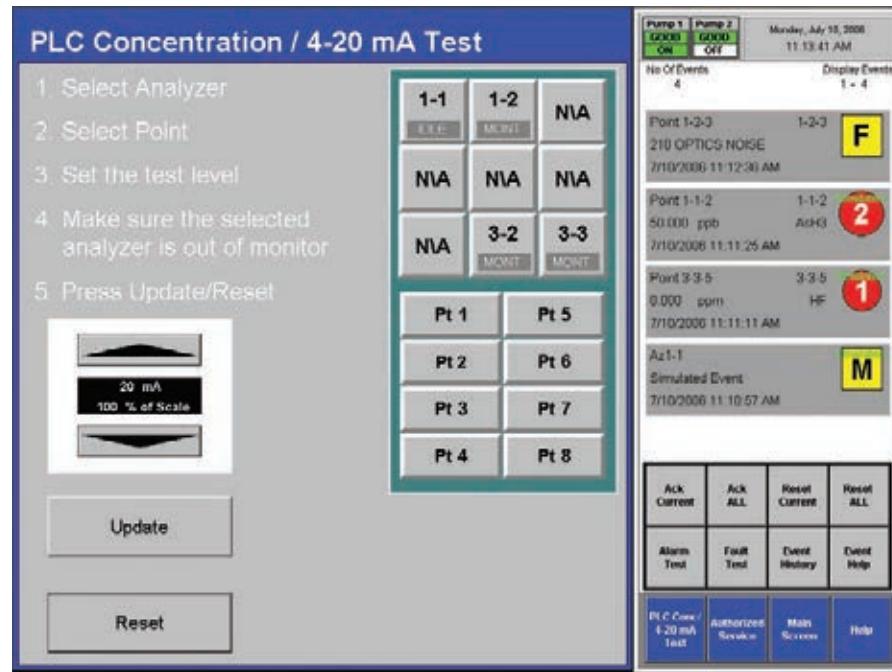

4-20 mA Test - Use the 4-20 mA test to test or calibrate external devices connected to the optional 4-20 mA PLC.

Note:

The 4-20 test generates an actual current output on the optional 4-20 mA PLC. Notify appropriate personnel that you plan to conduct a test.

To conduct a 4-20 mA test:

1. Choose Main Screen, Menu, Service and then 4-20 mA Test.

2. Choose the analyzer and point for the alarm test.
3. Use the up and down arrows to set the current level. Touch 20 mA Test to start the test. Touch Reset to stop the test.
4. To continue testing, repeat steps 2 and 3.


See [Section 4.5.4 Event List](#) to clear events.

Vertex™ 72-Point Continuous Monitor

4.6.6 Security Access

Access to Vertex functions is by a permission list which is stored in a user account. Only users authorized access to Security Setup may create or change user accounts. The system administrator assigns permission to Security Window and other protected functions by using the Security Setup menu.

The Vertex System comes pre-programmed with two user accounts: default user and a system administrator account. The system administrator account will have both User ID and Password set to "ADMIN".

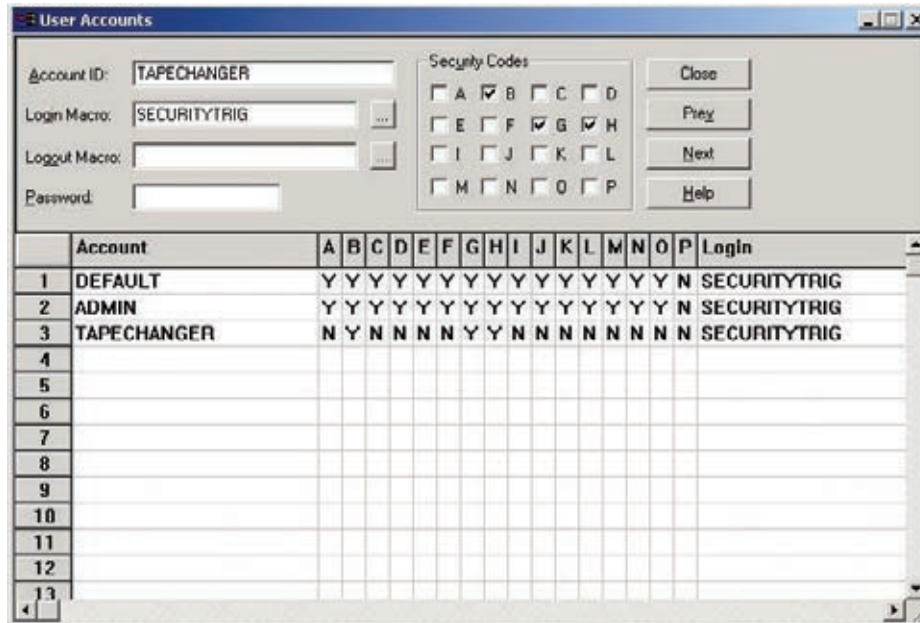

To create or edit a user account:

1. Touch Main Screen, Project and then Login. Enter your user name and password.
2. Touch Main Screen, Menu and then Security.

Note:

- You must have been previously assigned access to the security setup menu.
3. Enter a new name or select an existing name.
 4. Select the permission codes (see list below)

Vertex™ 72-Point Continuous Monitor

to assign to the user account. Both the user account and code lists display. Bit P has no effect.

5. Enter SECURITYTRIG in the Login Macro text box.
6. Choose Prev or Next to move to other names on the Account list.
7. Choose Close when finished.

Note:

If SECURITYTRIG is not entered in the Login Macro text box, the Vertex software will not update access privileges when the Security Window closes.

The administrator can set up multiple accounts which allows less-trained personnel to install Chemcassette cartridges without knowing the system administrator password. This prevents monitoring from being disabled for significant periods of time or changes (accidental or unauthorized) being made to the monitor. Provide only the minimum access necessary to each user.

Unfortunately, Chemcassette® installation inherently requires interrupting monitoring and requires human intervention. The Vertex can be set up to issue a fault if this intervention is not performed promptly. For more information see the “Az Out of Mon” timer in [Section 3.7](#).

However, for thorough protection against errors by personnel who are only authorized to install Chemcassettes®, many of the permission bits must be set to “No”. Specifically, bits A, E, F, I, J, L and O bits set to “No” and bit “B” must be set to “Yes”. The TAPECHANGER account on the previous page is an example of this.

Permission Codes

- A - Program Update Access
- B - Maintenance Menu Access
- C - Calibration Menu Access
- D - Diagnostics Menu Access
- E - Service Menu Access
- F - Runtime Options Access
- G - Event History Access
- H - Data Trending Access
- I - Security Setup
- J - Configuration Access
- K - Flow Adjust Commands
- L - Event Ack/Reset Command
- M - RFID bypass
- N - ChemCam Access
- O - ProjectStop Command



4.6.7 Configuration


Before the Vertex System can begin monitoring, you must create a configuration profile. Use the Configuration menu to create a new configuration profile or modify an existing profile.

[Section 3.7 Configuration Utility](#) for the procedures on using the Configuration window.

Vertex™ 72-Point Continuous Monitor

4.7 OnScreen Keyboard

The Vertex display provides an onscreen keyboard for data entry.

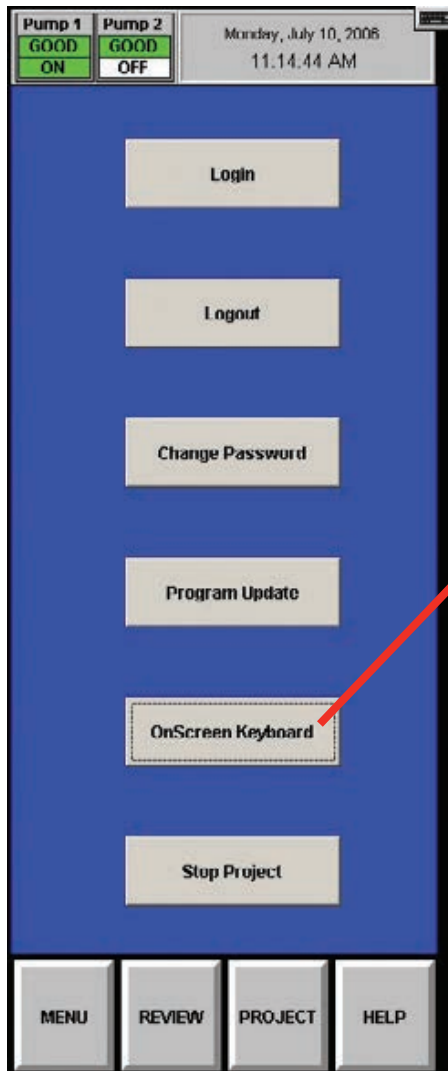

Keyboard
Access
Button

OnScreen
Keyboard
Button



Keyboard

Keyboard Help Menu

4.7.1 Restore OnScreen Keyboard

If keyboard is hidden, restore it with the OnScreen Keyboard button from the Project Menu.

5 Maintenance

5.1 Introduction

This section describes routine maintenance procedures including general instrument maintenance and Chemcassette® and pyrolyzer analyzer maintenance.

The Maintenance chapter includes:

- [5.3 Chemcassette® Analyzer Maintenance](#)
- [5.4 Replacing an Analyzer](#)
- [5.5 Remove and Replace Pyrolyzer Filters](#)
- [5.6 Remove and Install Pumps](#)
- [5.7 Remove and Install Power Supplies](#)
- [5.8 Clean the Touch Screen](#)
- [5.9 PLC Module battery backup check](#)
- [5.10 File Maintenance](#)
- [5.11 Optics Cleaning](#)

Most of the procedures in this section use functions in the Maintenance Window. To reach the Maintenance Window, touch Main Screen, Menu and then Maintenance.

Vertex™ 72-Point Continuous Monitor

5.2 Maintenance Schedules

Perform maintenance following the schedule in Table 5-1. See [Appendix D, Replacement and Consumable Items](#) for part numbers of maintenance items

| Item | Schedule |
|--|--------------------------------|
| Sample line filters (end of line) | 3-6 months |
| Teflon Corrosive Filter Membrane (end of line) | 1 month |
| Teflon Corrosive Filter | 3 months |
| Cabinet filter (located in front of pump module) | 3 months or as needed |
| Air filters (located on the analyzer face) Applies only to early Series 1 (1291-1000 and 1291-2000) | 3 months |
| Pump vane replacement | 9-24 months operation per pump |
| Pump stem and o-ring | 6 months |
| Valve filter | 1 year |
| Supply Vacuum Filters | 3-6 months |
| Particulate Filters | 3-6 months |
| Pyrolyzer Freon Filter | 1 month or as needed |
| Acid Scrubber Filter | 6 months |
| Alternate Pumps | 6 months |
| Optics Cleaning | 1 year or as needed |
| System File Maintenance | 1 year or as needed |

Table 5-1: Maintenance Schedule

Vertex™ 72-Point Continuous Monitor

5.3 Chemcassette® Analyzer Maintenance

This section describes maintenance and handling procedures for the Chemcassette® analyzer. Unless noted otherwise, these procedures apply to both the Universal Chemcassette® and the pyrolyzer model analyzers. (Previous style analyzer only)

5.3.1 Air Filter (Series 1 Analyzers only)

Early Series 1 Chemcassette® analyzers draw cooling air through a filter located between the tape reels. Air exhausts through the back of the analyzer.

Preparation

1. Set analyzer to idle in the Runtime Options window.
2. Touch Main Screen, Menu, Maintenance and then Analyzer Operation.
3. Touch the module number in the Maintenance window.
4. Touch Release Analyzer.
5. Slide analyzer out of cabinet until filter housing is visible.

Change Filter

1. Pull the filter housing away from the analyzer



2. Remove the filter foam from the filter housing. Wash with warm water and mild detergent. Dry thoroughly.
3. Place filter foam in housing. Snap housing in place on analyzer body.

Return to Service

1. Push analyzer into cabinet.
2. Return analyzer to monitor mode.


Vertex™ 72-Point Continuous Monitor

5.3.2 Remove and Replace Chemcassette® Analyzer Particulate Filters

The Vertex Chemcassette® analyzer uses various filters to protect the unit from particles and potentially damaging gases. Table 5-1 provides maintenance information about filters.


The Vertex Analyzer houses filters in a filter magazine. Use the following procedure when replacing filters.

1. Set analyzer to idle in the Runtime Options window.
2. Touch Main Screen, Menu, Maintenance and then Change Filter.
3. Touch the Analyzer module number in the Analyzer selection keypad.
4. Touch Release Analyzer.
5. Slide analyzer out of cabinet until filter compartment is visible.

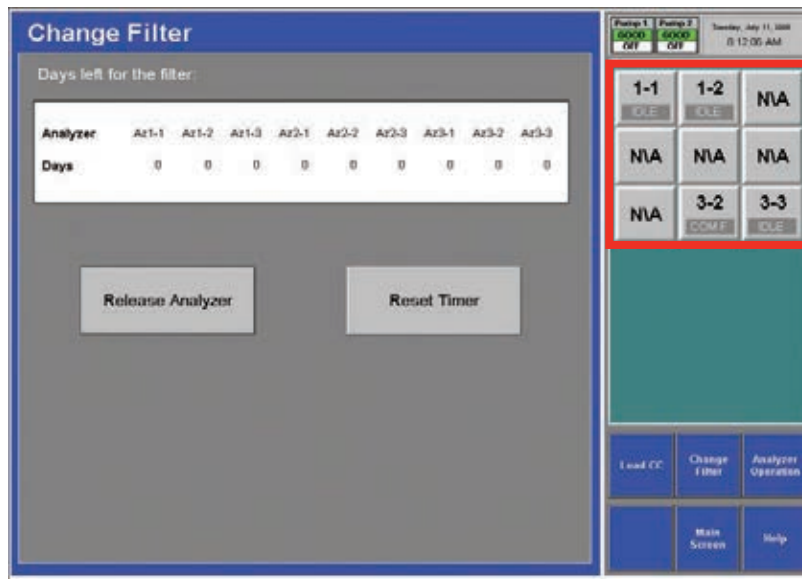

Vertex™ 72-Point Continuous Monitor

5.3.3 Remove Filters

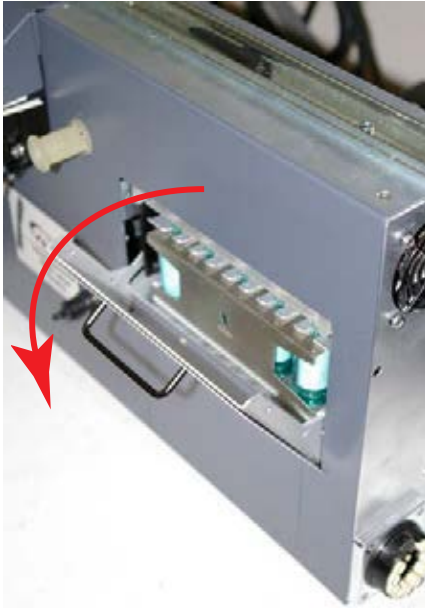


Analyzer Filter Door

1. Open filter compartment by pulling handle down until door is at a 90° angle to the analyzer.
2. Remove filter magazine by grasping the magazine with thumb and middle finger and pulling straight out.

Load Filters in Magazine

1. Remove and discard used filter elements.
2. Position new filters in magazine with the filter flow direction arrow pointing down. Press into place.

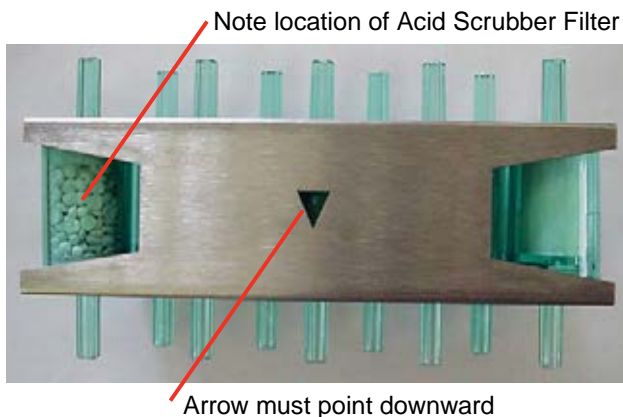

Vertex Filter Magazine

Vertex™ 72-Point Continuous Monitor

5.3.4 Replace Filters



Analyzer Filter Door



Arrows must point downward

Vertex Filters

1. Insert magazine into filter compartment.
2. Note orientation of arrow on side of magazine.
3. Close compartment door.

Return to Service

1. Press Reset Timer button on Change Filter screen.
2. Push analyzer into cabinet.
3. Return analyzer to monitor mode in Runtime Options window.

Vertex™ 72-Point Continuous Monitor

5.3.5 Change Chemcassette® Tape

Change the Vertex Chemcassette® tape for any of the following reasons:

- Scheduled end-of-tape service
- Low Chemcassette® warning (fault 102)
- Chemcassette® has expired (fault 109)
- End of Chemcassette® (fault 203)
- Transport error

Preparation

1. Reset End of Chemcassette® event if present.
2. Touch Main Screen, Menu and then Maintenance.
3. Touch the module number in the Maintenance window.
4. Touch Load CC. Follow the on-screen instructions which will guide you through the following sequence.

Change Chemcassette® Tape

1. Pull analyzer out of cabinet.
2. Remove the old Chemcassette®.
3. Install new tape. Verify the RFID tag is aligned with the RF sensor.

Touch the NEXT button to read RF sensor.

Note:

Series 2 analyzers do not require RFID TAG alignment (360° reading capability)

4. Thread tape leader.
5. Position leading alignment mark on Chemcassette® tape under front edge of optic head.
6. Touch the NEXT button to verify optics. The tape advances as the Vertex verifies the optics.
7. Push the analyzer into the cabinet.

5.4 Replacing an Analyzer

The Vertex rack is designed for quick replacement of major components. You may replace both the Chemcassette® and pyrolyzer analyzers while other analyzers continue to monitor.

5.4.1 Disconnecting Cables

In steps 4 and 5 of the sequence that follows, you will need to disconnect the circular tubing harness and four electrical cables from the back of the analyzer.

Vertex™ 72-Point Continuous Monitor

You need to reach around to the back of the analyzer as shown in this photo. In disconnecting or reconnecting the harness and cables, note the following:


Circular Tubing Harness

To disconnect:

Rotate the red tab onto tubing connector to the open position and pull the connector off

To reconnect:

Align the ports on the connector, seat the connector fully, and rotate the red tab to “lock”

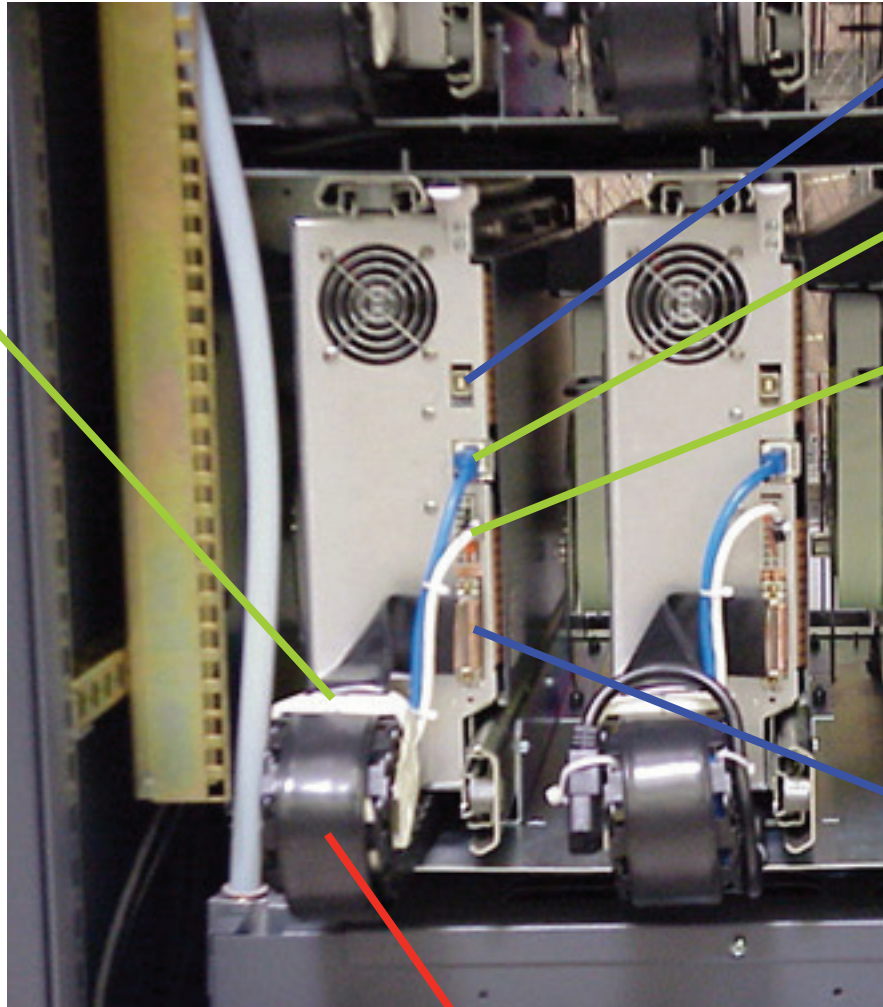

ChemCam USB Connection
(option)

Analyzer Communications
(reconnect this cable first)

Analyzer 24V Power Supply

To disconnect:

To disconnect this, depress the lock tab on the power connector and pull to release.

Multifunction Connector

Note:

Connection secured by slide latch. Push up to open. Push down to close.

Cable Carrier

Vertex™ 72-Point Continuous Monitor

5.4.2 Remove Analyzer

1. Set analyzer to idle in the Runtime Options window.
Touch Main Screen, Menu, Maintenance and then Analyzer Operation.
Select the analyzer which you will replace. Touch Release Analyzer.
2. Open touch screen and turn off power for the analyzer (and heater switch if you are replacing a Pyrolyzer). Close touch screen.
3. Pull analyzer out of cabinet. Locks on the slides limit the analyzer travel.
4. Reach behind analyzer and remove four electrical cables.
5. Unlock and remove tubing harness.
6. Unlatch the slides.
7. Support the analyzer and remove it from the slides.

5.4.3 Install Analyzers

1. Reach into the slot and position cables out of the way.
2. Place analyzer on slides. Push in until locks engage.
3. Slide Analyzer out until fully extended.
4. Reach behind the analyzer; connect and lock the tubing harness.

Note:

When reconnecting the analyzer, connect the Analyzer Communications cable to the analyzer first.

5. Connect the Analyzer Communications, 24V Power Supply, Multifunction Connector and ChemCam cables.
6. Carefully push analyzer partially into the cabinet and then pull out to verify all cables move freely and the slides lock. Repeat in and out action to loosen slide. Push analyzer into cabinet.

Return to Service

1. Open touch screen door and turn analyzer power switch on. Close touch screen door.
2. Re-install Configuration Profile.
3. Install Chemcassette®.
4. Return analyzer to monitor mode in Runtime Options Menu.

Vertex™ 72-Point Continuous Monitor

5.5 Remove and Replace Pyrolyzer Filters

5.5.1 Remove Filters

The pyrolyzer version of the Chemcassette® detects nitrogen trifluoride by “cracking” or breaking it down with high temperatures. Heating nitrogen trifluoride converts it to hydrogen fluoride which the Vertex pyrolyzer detects with a standard mineral acid Chemcassette®. The pyrolyzer heaters and associated control circuits are maintenance items not found in the Universal Chemcassette® analyzer.

This section describes maintenance procedures unique to the pyrolyzer analyzer.

There are eight filters in the pyrolyzer not found on the Universal Chemcassette® analyzer. The additional filters are filled with charcoal to remove Freon and other similar compounds from the sample gas before it is “cracked” in the pyrolyzer. The acid scrubber and particulate filters are identical to the standard Vertex Chemcassette® filters.

1. Set analyzer to idle in the Runtime Options window.
2. Touch Main Screen, Menu, Maintenance and then Analyzer Operation.
3. Touch the module number in the Maintenance window.
4. Touch Release Analyzer.
5. Slide Analyzer out until fully extended.

Freon filters are located on the left side of the analyzer.



Pyrolyzer Filter Door



Vertex Pyrolyzer Filter

1. Open filter compartment by pulling handle down until door is at a 90° angle to the analyzer.
2. Remove filter magazine by grasping the magazine with thumb and middle finger and pulling straight out.

Vertex™ 72-Point Continuous Monitor

Load Filters in Magazine

1. Remove and discard used filter elements.
2. Position new filters in magazine such that the long nipples are up and press into place. Note direction of flow arrows.

5.5.2 Replace Filters



1. Note orientation of arrow on side of magazine.
2. Insert magazine into filter compartment.
3. Close compartment door

Return to Service

1. Push analyzer into cabinet.
2. Return analyzer to monitor mode in Runtime Options window.

Vertex™ 72-Point Continuous Monitor

5.6 Remove and Install Pumps

The Vertex System includes two vacuum pumps. One pump operates while the other is idle. You may replace a defective pump while the other pump continues to operate.


Note:

You may replace a pump only when the system places it in standby. Do not replace an operating pump.

To equalize wear on the pumps, alternate the operating pump every 6 months.

To change operating pump without manually stopping monitoring touch the Main Screen, Menu, Service, Authorized Service buttons and then the Pump Alternate button.


The operating pump indicator is green or yellow; the indicator for the pump in idle is white.

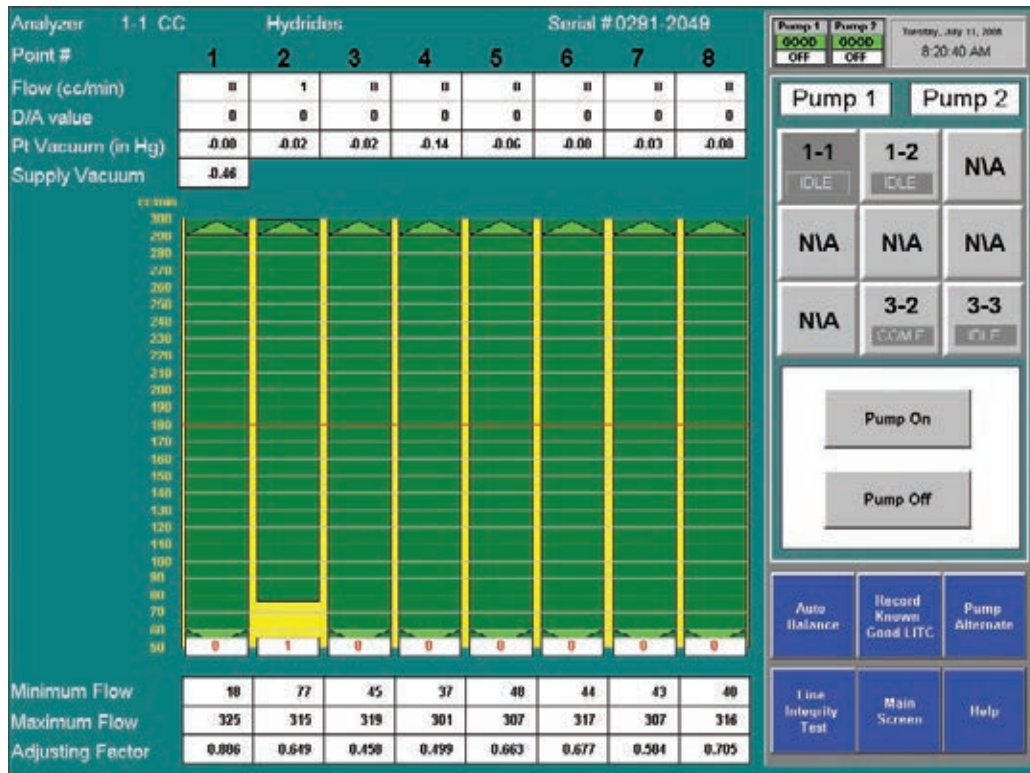

Vertex™ 72-Point Continuous Monitor

5.6.1 Remove Pump

1. Open lower cabinet door and remove filter.
2. Turn thumbscrews counterclockwise to release and open pump enclosure door.
3. For Series 1: Loosen thumbscrews on the top of inlet and outlet fittings.

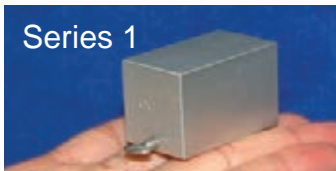

For Series 2: Push slide plate to disengage.



Then pull fittings up to remove from pump.

4. Pull up on slide-release button.



5. Slide pump out of enclosure.



WARNING



The pump may be hot. To avoid burns, allow it to cool or wear protective clothing before handling.



CAUTION

Operating the system with the exhaust fitting improperly installed or with one of the pumps removed can result in exposure to toxic gases from remote sampling areas.

To prevent exposure:

- Insert ½ Plug (P/N 0235-0168) into the fittings of the pump that was removed for service.
- Inspect the pump fittings to ensure that the surface is free from score marks and scratches that could compromise the O-ring seal.
- Fully seat the removable fitting on the pump after installation.
 - o On Series 1 pumps, tighten the setscrew to secure the fitting.
 - o On Series 2 pumps, verify that the slide plate button extends and mechanically secures the fitting.

With the system running, verify the leak integrity with a small amount of leak test fluid.

Vertex™ 72-Point Continuous Monitor

5.6.2 Install New Pump

1. Slide pump assembly into enclosure.




2. Push pump completely into enclosure until the release button locks into the bottom of the enclosure.



3. Series 1 - Push inlet and outlet tubing in pump inlet and outlet fittings. Tighten thumbscrews.



- Series 2 - Push on slideplate to re-install on to fitting

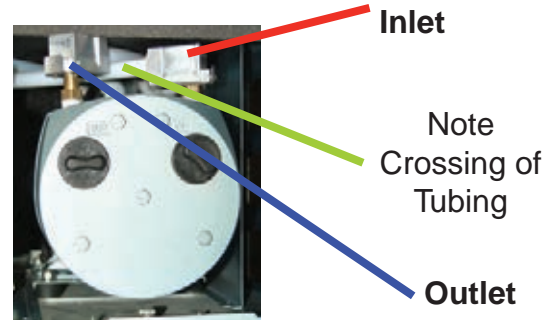

4. Close and fasten the pump enclosure door, install filter, and close lower cabinet door.



WARNING



Adjacent pump may be hot. To avoid burns, allow to cool or wear protective clothing before handling either pump.

Vertex™ 72-Point Continuous Monitor


5.7 Remove and Install Power Supplies

5.7.1 Remove Supply

Two replaceable modules provide power for the Vertex System. A fully populated Vertex will operate with one supply. You may replace the defective supply while the system continues to monitor.

Preparation

1. Open touch screen door.
2. Identify inoperative power supply.

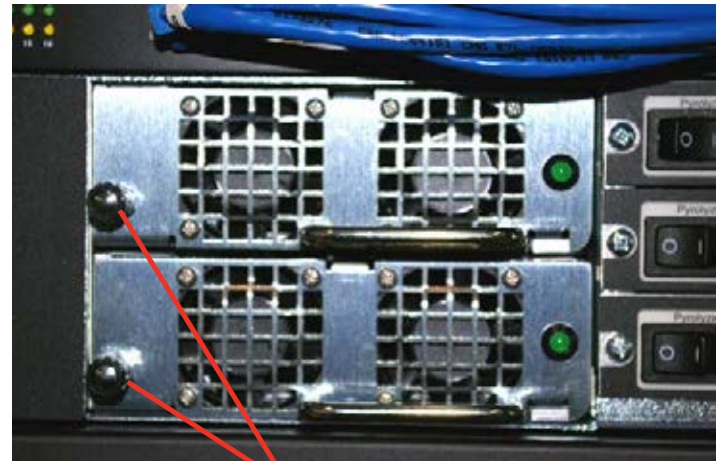

Locking knob



Handle

Slide Catch

Series 1 Power Supplies:

1. Grasp handle and with your thumb, slide catch to left (toward handle).
2. Firmly pull power supply to remove from housing.

Series 2 Power Supplies:

1. Turn locking knob clockwise to disengage catch.
2. Firmly pull power supply to remove from housing.

5.7.2 Replace Supply

1. Insert new supply in housing.
2. Verify handle is on the left of the power supply.
3. Seat firmly into place.
4. Verify latch or locking knob has locked supply in the housing.
5. Tug on handle to verify supply is firmly seated.

5.8 Clean the Touch Screen

Clean the touch screen display with a lightly moistened towel. Do not spray cleaner directly onto the glass. Excess liquid will run down the screen and interfere with operation.

Reference your touch monitor manual for any additional information.


Vertex™ 72-Point Continuous Monitor

5.9 PLC Module Battery Backup Check

1. For status of battery locate indicator as shown in photo on the left.
2. If battery indicator is illuminated the battery has failed. Contact HA Service for corrective action.

Note:

Some serial communication cards (located in slot 2) do not have battery backup.

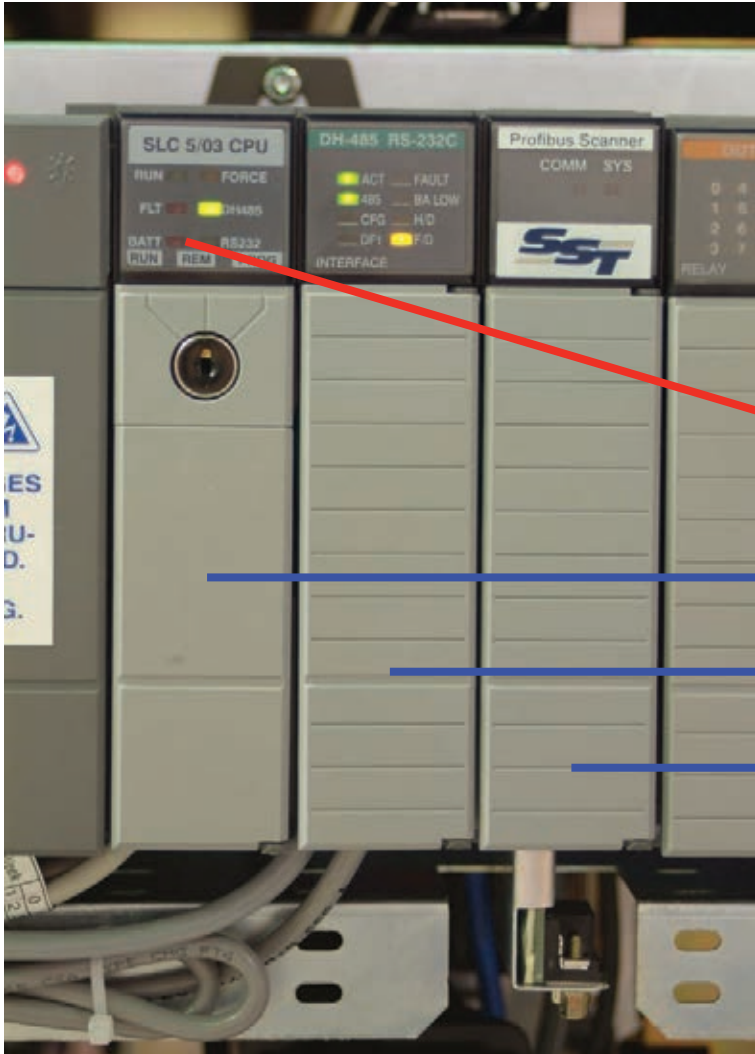

Battery indicator

Slot 0 = CPU

Slot 1 = KE Module

Slot 2 = Serial Communications
Option Module

Vertex™ 72-Point Continuous Monitor

5.10 File Maintenance

This section describes the procedure for making backup copies of Vertex database files:

1. Touch Project then Stop Project to stop the Vertex application. You must have appropriate access rights to perform this step.
2. Close RSView32 by touching File then Exit RSView32.
3. Make an offline backup copy of the files listed below in Table 5-3, File Locations.

The following files on the Vertex should be copied to either a backup location on your local area network, removable media or a CD-R/CD-RW disk.

Note:

Some backup media may change the files to “read only” and may require an additional step of changing the “Attributes” within the file properties to make them usable.

Empty databases for the Event, Concentration and ChemCam databases can be found in the Databases folder on the Vertex Technical Manual CD.

| File Name | Purpose | Location |
|---|--|----------------|
| *.za_Vt | Configuration Profiles | C:\HMIP_Util |
| CM72Data.dsn | ODBC Datasource for Event Database | C:\HMI |
| ConcData.dsn | ODBC Datasource for Concentration Database | C:\HMI |
| ChemCam.dsn | ODBC Datasource for ChemCam Database | C:\HMI |
| CM72.mdb * | Event database | C:\HMI |
| CM72Conc.mbd* | Concentration Database | C:\HMI |
| ChemCam.mdb * | ChemCam Database | C:\HMI\ChemCam |
| * Required if stored locally on the Vertex System | | |
| NOTE: Database files are size limited to a maximum of 2Gb. | | |

Table 5-3: File Locations

Vertex™ 72-Point Continuous Monitor

5.11 Optics Cleaning

Clean Chemcassette® optics annually or whenever optics verification error occurs.

Required equipment:

- Compressed air

Note:

Do not use “canned air” near Pyrolyzer gas based detectors, the halogenated gasses may trigger alarms. Instead, use N2 or a compressed source that is free of oils and contaminants.

- Open the Optics Block Gate
- Remove the Chemcassette®
- Open the Vertex side panel
- Remove tubing (shown in photo) one at the time and blow out with compressed air.
- Re-secure side panel and reload Chemcassette®


Note:

Remove and clean one port at a time to insure proper orientation of tubing. Do not remove the capillary tubing (microtubes).



CAUTION

Failure to replace and retighten hardware after service can adversely affect instrument performance and electromagnetic radiation compliance (EMC). Make certain all fasteners are reinstalled and firmly fastened.

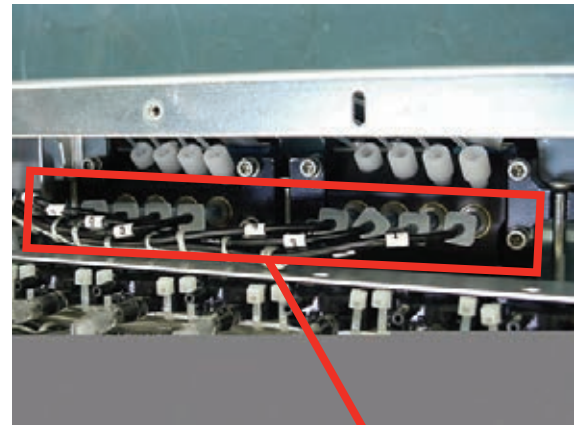

Remove these tubes one at a time for cleaning

6 Troubleshooting

Vertex™ 72-Point Continuous Monitor

6.1 Introduction

This chapter helps you determine the source of Vertex System fault or failure and provides you with a corrective action. There are three general indications that service or maintenance is necessary:

- General failure to operate properly (See [Section 6.2, General System Problems](#))
- Maintenance faults (See [Section 6.3, Maintenance Faults](#))
- Instrument faults (See [Section 6.4, Instrument Faults](#))

Maintenance and instrument faults are Vertex System self-diagnostic messages. They alert you to operation abnormalities by displaying a message with a brief description. The Vertex System also stores the faults in the event history list.

Also included in this chapter are information events which are records of non-fault activities that may aid in troubleshooting (See [Section 6.5, Information Events](#)). Information events include:

- Maintenance activities
- Alarm simulations
- User log in and log out
- Configuration changes

If a fault or failure does not appear in the troubleshooting chart, or if you require further assistance, call Honeywell Analytics Service. Provide the maintenance or instrument fault code number when calling.

In the event of a DAq failure See [Section 6.6, Manual Analyzer Override](#)

Vertex™ 72-Point Continuous Monitor

6.2 General System Problems

This section applies to problems and solutions that are not reported by the Vertex software.

| Symptom | Problem | Recovery |
|---------------------------------|---|---|
| No display | Faulty connection at DAq | Check connection at SVGA connector on back of DAq |
| | Faulty connection at display | Check connection on back of display (display must be removed from cabinet) |
| | No power to display | Check power cable between power distribution box and display power supply (located on top of power distribution box) Later units have power connected directly to display. |
| | Screen saver or Energy Star feature enabled | Open door and touch screen Press a key on the optional keyboard Disable screen saver and Energy Star setting in Windows control panel |
| Display distorted or wrong size | Incorrect settings in Windows control panel | Use Windows control panel to set display to 1028 x 768 display |
| "No signal" on screen | Data acquisition computer not operational | Turn on data acquisition computer power switch |

Table 6-1: LCD Display

Vertex™ 72-Point Continuous Monitor

| Symptom | Problem | Recovery |
|-------------------------------|--|--|
| No response from touch screen | Faulty connection at DAq | Check cable connection at serial port |
| | Faulty connection at display | Check cable connection on back of display (display must be removed from cabinet) |
| | COM1 not assigned | Check assignment for COM1 in Windows control panel |
| | Incorrect touch screen driver settings | Restore setting in ELO Windows control panel |

Table 6-2: Touchscreen

| Symptom | Problem | Recovery |
|----------------------|--------------|-------------------------|
| No green power light | Power switch | Turn power switch on |
| | | Turn circuit breaker on |
| | | Check power cable |

Table 6-3: Data Acquisition Computer

Vertex™ 72-Point Continuous Monitor

| Symptom | Problem | Recovery |
|--|---|--|
| “Optional Keyboard not detected” message | Keyboard only recognized by Windows at start up | Plug in keyboard and restart system |
| Continuous key press | When stored, the keyboard cable is pressing against a key | Remove keyboard from storage and replace with without cables laying on top of keyboard |
| Single key not responding | Defective keyboard | Replace keyboard |
| Keyboard not responding with any key | Faulty connection | Check keyboard connection on back of data acquisition computer |
| | Defective keyboard | Replace keyboard |
| Touch pad not responding | Faulty connection | Check mouse connection on back of data acquisition computer |
| | Defective touch pad | Replace keyboard |

Table 6-4: Optional Keyboard and Touch Pad

Vertex™ 72-Point Continuous Monitor

| Symptom | Problem | Recovery |
|---------------------------------|------------------------------------|--|
| Vertex not appearing on network | Incorrect network connection | Check cable connection to Ethernet port Note: Use only the Ethernet connection on the back of the data acquisition computer. The Ethernet hub in the Vertex System is only for Vertex internal use. |
| | Windows not configured for network | Use Windows Network control panel to configure network Vertex computer name is Vertex_291-xxxx Default workgroup is "Workgroup" |

Table 6-5: Communications

| Symptom | Problem | Recovery |
|-----------------------------------|--|-----------------------------|
| No image from one or more ChemCam | No power to USB hubs | Check power to USB hubs |
| | Defective USB hub | Replace USB hub |
| Poor image quality | Camera settings are incorrect or illumination LED has failed | Contact Honeywell Analytics |

Table 6-6: ChemCam

6.3 Maintenance Faults

A maintenance fault indicates the Vertex System requires attention but is continuing to monitor. When a maintenance fault occurs, the following actions take place within the Vertex System:

- The LED indicator flashes yellow on the analyzer with the fault. (See [Table 3-1, Analyzer Status LED](#))
- A yellow fault indicator appears on the main screen
- The event list and event history are updated
- Maintenance Fault relays associated with this analyzer will activate

Vertex™ 72-Point Continuous Monitor

Table 6-7: Maintenance Faults

| Event No. | Event List Desc. (Short) | Event History Description | Data Field | Problem | Possible Cause | Recovery |
|-----------|--------------------------|---------------------------|------------------|--|--|--|
| 101 | FLOW ADJ ERR LOW | Low Flow After Adjustment | cc/min. of error | Point Flow reading can not reach 150 cc/min. | | Verify range of valve by performing Auto Balance calibration Identify possible cause if maximum flow is below 240 cc/min. |
| | | | | | Condensation | Check internal lines for moisture Purge as required |
| | | | | | Internal proportional valve filter clogged | Replace particulate filter at manifold |
| | | | | | Proportional valve failure | Replace Valve |
| | | | | | Supply vacuum insufficient (less than 7 in. Hg) | Plug pneumatic connector in unused slots Exhaust tubing restricted Service or switch pumps |
| | | | | Excessive point vacuum | Sample line restricted End of line filter plugged Too many analyzers sharing one sample line Sample Line too long I.D. too small Poor gate seal | Clear restriction Replace filter Reduce number of analyzers on same Line Correct sample line issue Contact Honeywell Analytics Service |

Vertex™ 72-Point Continuous Monitor

Table 6-7: Maintenance Faults (cont'd)

| Event No. | Event List Desc. (Short) | Event History Description | Data Field | Problem | Possible Cause | Recovery |
|-----------|--------------------------|--------------------------------|-----------------|--|--|--|
| 102 | LOW CC WARNING | Chemcassette Low | Days Remaining | Chemcassette counter decremented to less than 120 windows | Less than one day remains on Chemcassette | Replace Chemcassette |
| 103 | TIMEOUT IDLE | Timeout Of Monitor | 0.0 | Analyzer in IDLE, LOAD CC, FLOW | Out of Monitor time limit has been exceeded | Press RESET to reinitialize timer. |
| | | | | | User error | Enter Monitor using Runtime Options Return analyzer to Monitor Mode |
| | | | | | Time limit too short | Change time limit in Configuration Profile |
| 104 | TIMEOUT PNT DIS | Timeout Run-time Point Disable | 0.0 | Operator error | Point disabled longer than time limit setting in the Configuration Profile | Press RESET to reinitialize timer Restore point to Monitor Mode |
| | | | | | Time limit too short | Change time limit in Configuration Profile |
| 105 | TIMEOUT ALM DIS | Timeout Run-time Alarm Disable | 0.0 | Operator error | Point disabled longer than time limit setting in the Configuration Profile | Press RESET to reinitialize timer Restore point to Monitor Mode |
| | | | | | Time limit too short | Change time limit in Configuration Profile |
| 106 | POS PNT PRESSURE | Positive Point Pressure | Pressure in. Hg | Positive pressure between sampling location and instrument | Point pressure above atmospheric pressure while in idle | Relieve/reduce pressure |
| | | | | Transducer error | Calibration error | Contact Honeywell Analytics Service |
| | | | | | Defective sensor | Contact Honeywell Analytics Service |
| | | | | Offset incorrect | | Contact Honeywell Analytics Service |

Vertex™ 72-Point Continuous Monitor

Table 6-7: Maintenance Faults (cont'd)

| Event No. | Event List Desc. (Short) | Event History Description | Data Field | Problem | Possible Cause | Recovery |
|-----------|--------------------------|-------------------------------------|------------|---|---|--|
| 108 | FLOW ADJ ERR HI | High Flow After Adjustment | cc/min. | Flow cannot be adjusted below 210 cc/min. | Debris in proportional valve | Verify range of valve Perform Auto Balance to clear debris |
| | | | | | Debris or defective valve Proportional valve held open | Replace with 0235-1279 |
| 109 | CC EXPIRED | Chemcassette Passed Expiration Date | 0.0 | Operator error | Chemcassette installed past its expiration date | Replace Chemcassette |
| | | | | Chemcassette expired | Expiration date reached | Replace Chemcassette |
| 111 | DACS COM FAIL | No Communication from PC To Az | 0.0 | Ethernet communications | Communications to DACS interrupted longer than 20 seconds | Check Ethernet cable at rear of analyzer Check Ethernet hub connection and operation Check Ethernet connection to DACS Restart DACS to clear OPC driver problem |

Vertex™ 72-Point Continuous Monitor

Table 6-7: Maintenance Faults (cont'd)

| Event No. | Event List Desc. (Short) | Event History Description | Data Field | Problem | Possible Cause | Recovery |
|-----------|--------------------------|-------------------------------------|--|--|---|--|
| 112 | SWAPPED BAD PUMP | Single pump failed and swapped | Number of bad pump - 1 or 2 | Pump swap has occurred because vacuum levels fell below 6 in. Hg | Pump failure | Rebuild/Replace non-operating pump |
| | | | | | Unused slots not plugged | Install 1295-0404 connector plug on unused slot |
| | | | | | Large 0.018 in transport flow orifices installed | Replace all orifices with 0.015 in orifices (p/n 1290K0009 per Analyzer) Series 2: adjust system vacuum control |
| | | | | | Low-flow pump installed | Upgrade to high-flow pump (p/n 0235-0171) |
| | | | | | Check valve on inactive pump leaking | Replace check valve |
| | | | | | | Contact Honeywell Analytics Service |
| 113 | OPTICS MAINT | Optics Drive High-Cleaning Required | LED drive required to set zero to high | | | Clean optics as described in section 5.11; contact Honeywell Analytics Service |
| | | | | Tape leader installed improperly | Leader not centered (Pts 1 or 5 error) | Reload Chemcassette and recalibrate using leader |
| | | | | | Autozero performed while tape on light or dark gray portion of leader | Reload Chemcassette and recalibrate using leader |
| | | | | | Dirt in optics | Clean optics block |

Vertex™ 72-Point Continuous Monitor

Table 6-7: Maintenance Faults (cont'd)

| Event No. | Event List Desc. (Short) | Event History Description | Data Field | Problem | Possible Cause | Recovery |
|-----------|--------------------------|---------------------------|------------|---|---|--|
| 114 | POINT VAC ERR | Excessive Point Vacuum | in. Hg | Sample vacuum is greater than 5 in. Hg vacuum for longer than 5 seconds | End of line filter clogged | Replace clogged end of line filter |
| | | | | | Sample line kinked | Isolate by disconnecting possible crimped sample line |
| | | | | | Maximum line length exceeded on a shared sample line | Isolate shared sample line Review limits number of analyzers, tubing ID vs. Length (See Table B.2) |
| | | | | | Crimped tube in cable carrier | Identify crimps in tubing harness by checking pressure with analyzer closed vs. open |
| 115 | AZ SW DIAGNOSTIC | Az Software Diagnostic | 0.0 | Analyzer failed to enter monitor after pump swap | Control related fault is issued because of an improper control response from another analyzer | Verify all analyzers enter monitor mode successfully |
| 116 | PUMP OVER-TEMP | Pump Over Temperature | 0.0 | Pump module Temperature exceeded | Clogged Filter | Replace air filter |
| | | | | | Fan Failure | Check fans in pump module |
| | | | | | Line voltage less than 208 VAC | Verify main line voltage |

Vertex™ 72-Point Continuous Monitor

Table 6-7: Maintenance Faults (cont'd)

| Event No. | Event List Desc. (Short) | Event History Description | Data Field | Problem | Possible Cause | Recovery |
|-----------------------------------|--------------------------|--|--------------------------------|---|--|---|
| 117 | PUMP EXHAUST HI | High Exhaust Pressure | 0.0 | Exhaust Manifold pressure greater than 9 in. Hg (4.4 PSI) | Kinked exhaust | Check exhaust tubing for kinks or restrictions |
| | | | | | Exhaust tubing length exceeds 50 ft. (15 m.) | Reroute to reduce length or change to a larger diameter sample line |
| | | | | | Exhaust manifold check valve | Series 1 pump module only |
| 118 | POWER SUPPLY | Power Supply Fail/missing | 0.0 | Power supply installed in slot other than 1 or 2 | Operator error | Install supply in proper location |
| | | | | Redundant supply not available | Failure | Replace with supply (Series 1 P/N) 0185-0066 (Series 2 P/N) 0060-0020 |
| 119 | BAD OPTICS TEMP | Optics Temperature Out Of Range | Sum of error codes 1.0 to 64.0 | 1.0: Front block reads <0°C | Cold Environment | Relocate Vertex |
| | | | | 2.0: Front block reads >60°C | Electronic problem | Replace front optics block |
| | | | | 4.0: Front block reads 45-60°C | Cooling air failure | Change air filter, replace fan |
| | | | | | Hot environment | Relocate Vertex |
| | | | | 8.0: Rear block reads <0° | Cold environment | Relocate Vertex |
| | | | | 16.0: Rear block reads >60° | Electronic problem | Replace rear optics block |
| | | | | 32.0: Rear block reads 45-60°C | Cooling air failure | Change air filter, replace fan |
| | | | | | Hot environment | Relocate Vertex |
| 64.0: Two blocks disagree by 10°C | Electronic problem | Observe Log1 output to identify defective block, replace | | | | |

Vertex™ 72-Point Continuous Monitor

Table 6-7: Maintenance Faults (cont'd)

| Event No. | Event List Desc. (Short) | Event History Description | Data Field | Problem | Possible Cause | Recovery |
|-----------|--------------------------|---------------------------------|------------------------------------|---|--|---|
| 120 | CHANGE FILTERS | Filter Timer Expired | 0.0 | Filter time in configuration profile elapsed | Maintenance reminder, no malfunction | Change filter and reset timer |
| 121 | CABLE PROBLEM | Multifunction Cable Problem | varies | DB-25 disconnected at rear of some analyzer | | Connect cable |
| 122 | LIT NO REF | LIT has no reference | bitmask of points skipped, 1-255 | Analyzer has no record or correct cracking pressure | Point was disabled in configuration when previous LIT characterization was performed | Perform characterization or disable LIT test for point in configuration |
| 123 | LIT CHAR FAIL | LIT Characterization failed | Observed cracking pressure (in Hg) | Inadequate cracking pressure measured during characterization | Check valve not installed | Install check valve or disable LIT test in config |
| | | | | | Sample tubing cut or leaking | Replace tubing |
| 124 | LINE FAIL | Sample line leak detected | Observed cracking pressure (in Hg) | Inadequate cracking pressure measured during the monitoring by the optional Line Integrity Test | Sample tubing cut or leaking | Replace tubing |
| | | | | | Ambient pressure at sampled point differs from Vertex exhaust by more than 0.3 in Hg (1 KPa) | Revise installation |
| | | | | | | Disable LIT for affected point |
| | | | | | Check valve not seating | Replace check valve |
| 125 | LIT COORDINATION | Coordination failure during LIT | Error code 1.0 - 6.0 | LIT test not performed because analyzers could not coordinate the test | Some analyzers were in LOADCC or other special mode | None needed |
| | | | | | Software anomaly | If repeated, notify Honeywell Analytics Service |
| 126 | OPTICS DEBRIS | Possible debris in optics block | Diagnostic Counter | Optics signal has been erratic on at least 3 windows | Debris in optics block | Clean optics block as shown in Section 5.11 |

Vertex™ 72-Point Continuous Monitor

Table 6-7: Maintenance Faults (cont'd)

| Event No. | Event List Desc. (Short) | Event History Description | Data Field | Problem | Possible Cause | Recovery |
|-----------|--------------------------|--------------------------------|--------------------------------------|---|---|--|
| 127 | AUTOBALANCE FAIL | Flow Autobalance Failed | No. of Failed Attempts | Detailed failures can be determined by the data from the accompanying info event(s) by using the table below. | | |
| | | | 11 to 23 | Adjusting factor out of range | Anomaly encountered | Repeat Auto balance |
| | | | | | Faulty valve | Contact HA Service |
| | | | 30 | Adjusting factor varies among 3 spots | Anomaly encountered | Repeat Auto balance |
| | | | | | Other | Contact HA Service |
| | | | 41 to 43 | Inadequate flow | Insufficient vacuum (<8 in Hg) | See recovery for Fault 112 |
| | | | | | Excessive pressure drop in tubing | See recovery for Fault 114 |
| | | | | | Faulty valve | Contact HA Service |
| | | | 51 to 53 | Excessive minimum flow | Debris in valve | Repeat Auto balance |
| | | | | | Faulty valve | Contact HA Service |
| 128* | WINDOW ZERO RESET | Window Zero Reset | Diagnostic Counter | Same as Fault 126 | Same as Fault 126 | Same as Fault 126 |
| 129 | ACCEL. CC USAGE | Accelerated Chemcassette Usage | Time since last Chemcassette advance | Chemcassette advancing more often than expected | Low level background gas below lower detectable limit | Locate source of background gas |
| 130 | VR FAILED | Virtual Reference Test Failed | Sample Counter | Tape reflectance differs slightly between windows | Old tape | Contact HA Service if this occurs frequently |
| | | | | | Ambient gas concentration | |

*Dependent on the setting in the Configuration menu.

Vertex™ 72-Point Continuous Monitor

6.4 Instrument Faults

An instrument fault indicates a loss of monitoring on one or more points. When an instrument fault occurs, the following actions take place within the Vertex System:

The LED indicator flashes yellow on the analyzer with the fault (See [Table 3-1, Analyzer Status LED](#))

A yellow fault indicator appears on the main screen

The fault is entered into the event list and event history

Instrument Fault relays associated with this analyzer will activate

Table 6-8: Instrument Faults

| Event No. | Event List Desc. (Short) | Event History Description | Data Field | Problem | Possible Cause | Recovery |
|-----------|--------------------------|---------------------------|----------------------|---|--|--|
| 202 | HIGH BACKGROUND | High Background | Optics signal counts | Bad Chemcassette | Chemcassette discolored | Check optics values in event history |
| | | | | | Moisture on Chemcassette | Check optics values for last Chemcassette load in event history |
| | | | | Chemcassette tracking/ installation error | Errors occurring on points 1 and 5 or 4 and 8 only indicate a tracking problem | Check guide position Reload Chemcassette using maintenance analyzer operation |
| | | | | Optics block dirty | Dust | Clean optics |

Vertex™ 72-Point Continuous Monitor

Table 6-8: Instrument Faults (cont'd)

| Event No. | Event List Desc. (Short) | Event History Description | Data Field | Problem | Possible Cause | Recovery |
|-----------|--------------------------|---------------------------------|----------------------------|---|--|--|
| 203 | END OF CC | End Of Chemcassette | 0.0 | Insufficient Chemcassette motion detected | End of Chemcassette | Replace Chemcassette |
| | | | | | Chemcassette broken | Rethread Chemcassette (See Section 5.3.5. Change Chemcassette Tape) |
| | | | | | Faulty tape encoder | Service analyzer |
| | | | | | Advance motor failure | Service analyzer |
| | | | | | Gate opening insufficient | Service analyzer |
| 205 | FAIL WR HW CONF | Failure Writing Hardware Config | | Failure writing hardware configuration | Non-volatile memory failure in analyzer CPU | Service or replace analyzer |
| 206 | FAIL RD HW CONF | Failure Reading Hardware Config | | Failure reading hardware configuration | Non-volatile memory failure in analyzer CPU | Service or replace analyzer |
| 207 | PYRO FAILURE | Pyrolyzer Failure | Internal Temp | Pyrolyzer failure | Heater element Fuse failure Thermocouple Failure | Service or replace analyzer |
| 208 | PYRO OVERTEMP | Skin Over-Temperature | 1 or 2 Pyrolyzer number | Pyrolyzer skin temperature greater than 105°C | Fan failure in analyzer | Replace fan |
| | | | | | Sensor failure | Replace sensor |

Vertex™ 72-Point Continuous Monitor

Table 6-8: Instrument Faults (cont'd)

| Event No. | Event List Desc. (Short) | Event History Description | Data Field | Problem | Possible Cause | Recovery |
|-----------|--------------------------|---------------------------|------------|--|---|---|
| 209 | GATE TIMEOUT | Gate Motor Timeout | 0.0 | Gate motor timeout 7 seconds | Gate position sensor not activated before timeout | Check motor operation using Maintenance/ Analyzer Operations/ Open Gate or Close Gate |
| | | | | | Motor does not operate | Check motor connections to sensor interface PCB in analyzer |
| | | | | | Bad sensor or cable | Check sensor connection on PCB Contact Honeywell service |
| 210 | OPTICS NOISE | Optics Noise | Counts | Optics Noise | Poor grounding | Contact Honeywell service |
| | | | | | Optics block cover loose | Retighten or reinstall as required |
| 211 | OPTICS FAILURE | Optics Failure | Counts | Count values from optics reading exceeded limits | Cable disconnected | Check cable Contact Honeywell service |
| | | | | | Optics board defective | Contact Honeywell service |
| | | | | | Sensor interface defective | Contact Honeywell service |
| | | | | | Optics LED not properly calibrated | Perform Load CC Operation to recalibrate |
| 212 | GAS TABLE ERROR | Gas Table Error | | Gas table corrupt or missing | No configuration loaded | Reinstall Configuration Profile |

Vertex™ 72-Point Continuous Monitor

Table 6-8: Instrument Faults (cont'd)

| Event No. | Event List Desc. (Short) | Event History Description | Data Field | Problem | Possible Cause | Recovery |
|-----------|--------------------------|---------------------------|-------------------------------------|---|---|--|
| 215 | HIGH PYRO FLOW | High Pyrolyzer Flow | flow cc/min. | Proportional valve failure | Debris in valve | Replace valve |
| | | | | Improperly characterized proportional valve | Change in flow system configuration | Perform Auto Balance operation |
| | | | | Static flow reading | Transducer failure | Service or replace analyzer |
| 216 | OPTICS DRIVE LOW | Optics Drive Low | Drive counts | Drive value below allowable threshold | Problem in optics block or sensor interface electronics | Service or replace analyzer |
| 217 | OPTICS DRIVE HI | Optics Drive High | Drive counts | Drive value above allowable threshold | Problem in optics block or sensor interface electronics | Service or replace analyzer |
| 218 | OPTICS READING HI | Optics Reading High | Optics counts | Drive value above allowable threshold | Problem in optics block or sensor interface electronics | Service or replace analyzer |
| 219 | DOUBLE PUMP FAIL | Double Pump Failure | Number of last pump failed - 1 or 2 | Pump unable to produce 6 in Hg vacuum while Fault 112 active. | See causes for Fault 112 | See recoveries for Fault 112 |
| | | | | | Circuit breaker tripped | Reset circuit breaker at power module (See Section 1.2.8) |
| | | | | | | Series 1: Check circuit breaker inside pump module at rack bottom. Contact Honeywell Service |

Vertex™ 72-Point Continuous Monitor

Table 6-8: Instrument Faults (cont'd)

| Event No. | Event List Desc. (Short) | Event History Description | Data Field | Problem | Possible Cause | Recovery |
|-----------|--------------------------|--------------------------------|------------|---|--|--|
| 220 | LOSS OF FLOW | Loss of Flow | cc/min. | Flow less than 180 cc/min. | | Perform Auto Balance after any service |
| | | | | On point 1 or 1 and 5 only | Tape tracking problem | Reload Chemcassette |
| | | | | Obstruction | Condensation in system | Purge internal lines |
| | | | | | Internal valve filter | Replace filter |
| | | | | | Proportional valve | Replace valve |
| | | | | | Clogged micro tube | Replace tube Note: Calibration required |
| | | | | Clogged freon filter (Pyrolyzer) | Replace freon filter | |
| | | | | Pneumatic integrity compromised | Gate not fully closing | Gate adjustment loose, pivot binding |
| | Optics block loose | Tighten optics block fasteners | | | | |
| 221 | AZ SW DIAGNOSTIC | Az Software Diagnostic | 0.0 | Pump control conflict between one or more analyzers | Power cycled at random on multiple analyzers operating alternate pumps | Cycle power to resynchronize system |
| 223 | AZ SW DIAGNOSTIC | Az Software Diagnostic | 0.0 | Pump control conflict between one or more analyzers | Power cycled at random on multiple analyzers operating alternate pumps | Cycle power to resynchronize system |
| 225 | INVALID PT PRES | Point Pressure Out Of Range | in. Hg | Sample pressure out of range | Miscalibrated sensor board or defective transducer | Replace Analyzer |
| | | | | | Positive pressure at sample location | Determine cause of pressure |
| 226 | INVALID SUP PRES | Supply Pressure Out Of Range | in. Hg | Manifold pressure out of range | Miscalibrated sensor board or defective transducer | Replace Analyzer |

Vertex™ 72-Point Continuous Monitor

Table 6-8: Instrument Faults (cont'd)

| Event No. | Event List Desc. (Short) | Event History Description | Data Field | Problem | Possible Cause | Recovery |
|-----------|--------------------------|---------------------------------|------------|---|------------------------------------|--|
| 228 | NO PYRO MAINS PWR | No Pyrolyzer Mains Power | 1 | No mains power at points 5-8 | Internal thermal fuse opened | Check cooling fan, replace thermal fuse |
| | | | 2 | No mains power at points 1-4 | | |
| | | | 3 | No mains power at all 8 points | Defect external to analyzer | Check Pyrolyzer circuit breaker switch Check connector at rear of Pyrolyzer Check transformer circuit breaker (Series 1) |
| 229 | OPTICS CFG ERR | Invalid Optics Configuration | Error code | Microprocessor in optics block reports problem. | Chemleader read failed | Reread Chemleader. Cycle power to analyzer. Update software in optics block. |
| 230 | COM FAIL TO PLC | No Communication From PLC To Az | 0.0 | No communication from PLC | Communication has timed out to PLC | Cycle power to the analyzers and reload Configuration Profile Check FLT light on PLC |
| | | | | | Connection at rear of analyzer | Check 25-pin, multifunction cable at the rear of the analyzer |
| | | | | | Check cable connections to the PLC | Check cable connection at chassis from carrier |

Vertex™ 72-Point Continuous Monitor

Table 6-8: Instrument Faults (cont'd)

| Event No. | Event List Desc. (Short) | Event History Description | Data Field | Problem | Possible Cause | Recovery |
|-----------|--------------------------|----------------------------|---------------|----------------------------|---|-----------------------------|
| 231 | DRV ADJ FAIL | AUTO LED Adjustment Failed | Optics counts | LED adjustment failed | Tape incorrectly loaded | Reload and retry tape load |
| | | | | | Dirty optics block | Service or replace analyzer |
| | | | | | Bad optics PCB set | Service or replace analyzer |
| | | | | | Bad RFID tag | Load new Chemcassette |
| 232 | BAD Q-FACTOR | Q-Factor Out Of Range | Q-Factor | Q-Factor out of range | Chemcassette leader not tight or improperly positioned during white to light gray calibration | Reload Chemcassette |
| | | | | | Bad RFID tag | Load new Chemcassette |
| | | | | | Dirty optics block | Clean and recalibrate |
| | | | | | Bad optics PCB set | Service or replace analyzer |
| 233 | FAIL OPT VERIFY | Optics Verification Failed | Adj Cnts | Optics Verification Failed | Chemcassette leader not tight or improperly positioned during light gray to dark gray calibration | Reload Chemcassette |
| | | | | | Bad RFID tag | Load new Chemcassette |
| | | | | | Dirty optics block | Clean and recalibrate |
| | | | | | Bad optics PCB set | Service or replace analyzer |

Vertex™ 72-Point Continuous Monitor

Table 6-8: Instrument Faults (cont'd)

| Event No. | Event List Desc. (Short) | Event History Description | Data Field | Problem | Possible Cause | Recovery |
|-----------|--------------------------|------------------------------------|--------------------------|--|---|--|
| 234 | GRAY FAILED | Light Gray Read Failed | Optics Cnts | Optics values of this field were outside limits | Chemcassette leader not tight or improperly positioned during light gray to dark gray calibration | Reload Chemcassette |
| | | | | | Bad RFID tag | Load new Chemcassette |
| | | | | | Dirty optics block | Clean and recalibrate |
| | | | | | Bad optics PCB set | Service or replace analyzer |
| 235 | AZ SW VER WRONG | Analyzer software version mismatch | 0 | Software mismatch | | Reload program to all analyzers Contact Honeywell service |
| 237 | AZ VACUUM LOW | Inadequate Analyzer Vacuum | Observed vacuum in in Hg | Individual analyzer observes inadequate vacuum, stops monitoring | Fault 219 has triggered. | Recover from Fault 219, then reset Fault 237 |
| | | | | | Circular tubing harness disconnected | Connect circular tubing harness |
| | | | | | Tubing pinched | Correct tubing dress in cable carrier Contact Honeywell Service |
| 238 | OP SW MISMATCH | Optics block software mismatch. | 0 | The two optics blocks are not running the same software version. | Program update done incorrectly. | Reload program to both optics blocks. |

Vertex™ 72-Point Continuous Monitor

Table 6-8: Instrument Faults (cont'd)

| Event No. | Event List Desc. (Short) | Event History Description | Data Field | Problem | Possible Cause | Recovery |
|-----------|--------------------------|-------------------------------------|------------------------|--|---|--|
| 239 | OPTICS COMM FAIL | Optics block communication failure | Error code | Analyzer is not able to communicate with the optics block. | Cable disconnected. Software anomaly. Defective optics block. | Check the 14 pin cable connection on the sensor board. Cycle power to analyzer. Contact Honeywell service. |
| 240 | OPTICS REF FAIL | Optics reference limit exceeded | Reference value signal | The signal detected at the reference photodiode is out of range. | Degraded optics block. | Contact Honeywell service. |
| 241 | OPT REF ADJ TIMEOUT | Optics reference adjustment timeout | Error code | Optics block self-adjustment timeout. | | Cycle power to analyzer. Contact Honeywell service. |
| 270 | COM AZ ## BROKEN | OPC To Az ## Communications Broken | | Analyzer not responding to OPC driver polling request | Analyzer powered down | Check switch on power module |
| | | | | | Ethernet cable not connected | Check Ethernet connection at the back of the analyzer Move cable to different port on Ethernet hub |
| 301 | PLC-COM BROKEN | PLC-Com Broken | | PLC fails to respond to DAq communication | Cable connection problem | Check serial communications on DAq COM2 Check serial cable on PLC 1747-KE (See Section 1.2.10. Data Acquisition Computer (rear)) (See Section 1.2.13. Main PLC) |
| | | | | | Loss of PLC power | Check power connections for PLC |

Vertex™ 72-Point Continuous Monitor

| Event No. | Event List Desc. (Short) | Event History Description | Data Field | Problem | Possible Cause | Recovery |
|-----------|--------------------------|------------------------------|----------------|--|--|---|
| 302 | AZ-BAD PROF ID | AZ has wrong profile loaded | | Profile ID in analyzer does not match current configuration in use | Configuration not properly loaded | Reinstall current Configuration Profile |
| 303 | PLC-BAD PROF ID | PLC Has Wrong Profile loaded | | Profile ID in PLC does not match current configuration in use | Configuration not properly loaded | Reinstall current Configuration Profile |
| 304 | PLC SYSTEM FAULT | PLC System Fault | PLC Error Code | A fault has occurred on the PLC that prevents the PLC program from running | Faulty or missing PLC module PLC is not properly configured | Contact Honeywell Analytics Service |
| 305 | DATA LOG FAILED | Unable To Log Conc Data | | Failure to store concentration data in the database | Local database file has reached size limit (1GB maximum size for Access database). | Enable automatic database purge or adjust database purge settings to purge old data |
| 413 | CMD ERR AZ #-# | Cmd Error Az #-# | | Analyzer not responding DAq Communica-tions | Cable connections | Check Ethernet connections |
| | | | | | Analyzer missing or powered down | Remove analyzer from Configuration Profile |

Vertex™ 72-Point Continuous Monitor

6.5 Information Events

The Vertex System enters informational and other non-fault events into the event history database. These do not require any action by the user. Use the event history to check the status of the instrument.

Table 6-9: Information Events

| Event Type In History | Event History Message | Possible Cause |
|-----------------------|-------------------------------|---|
| ALM SIMULATE | Various | An alarm was artificially created (See Section 4.6.6, Security Access) |
| ALM 1 | Concentration > AL1 | Gas concentration exceeded limit |
| ALM 2 | Concentration > AL2 | Gas concentration exceeded limit |
| ALM WARNING | Concentration > Warning | Gas concentration exceeded lower detection limit |
| AZ NO RECORD | Various | A fault was cleared in the DAq for which the analyzer has no record |
| AZ PROGRAM INSTALL | Various | The analyzer program update process was started |
| CALIBRATION | Command – Valves Auto Balance | Auto Balance was started |
| CONFIG INSTALL | Various | The configuration profile installation was started |
| DEFAULT RESET | Various | A fault was cleared in the DAq from an analyzer that is no longer present in the rack |
| FAULT SIMULATE | Various | A fault was artificially created (See Section 4.6.6, Security Access) |
| INFO | 20 mA Loop Test Ended | User initiated action |
| INFO | 20 mA Loop Driven for Test | User initiated action |
| INFO | Windows Zero Reset | Optics defect detected and corrected |

Vertex™ 72-Point Continuous Monitor

Table 6-9: Information Events (cont'd)

| Event Type In History | Event History Message | Possible Cause |
|------------------------------|--------------------------------|--|
| INFO | Analyzer accepts new location | Analyzer moved |
| INFO | Analyzer Powered Up | User initiated action |
| INFO | Az Button Resets Alm&Flts | Internal override pushbutton operated |
| INFO | Az Button Starts Monitoring | Internal override pushbutton operated |
| INFO | Az Button Stops Monitoring | Internal override pushbutton operated |
| INFO | Clock Adjusted By DAq PC | Normal drift or clock set on DAq |
| INFO | Flow Auto Balance Performed | User initiated action |
| INFO | Hardware Configuration Changed | Auto Balance, Load CC, New Location or Pump Alternated |
| INFO | LED Drive Adjusted | Load CC |
| INFO | Monitoring stopped for no pts | All points disabled by faults |
| INFO | New Chemcassette Was Installed | User initiated action |
| INFO | New Sector Started | Normal maintenance |
| INFO | Optics Verified Successfully | Load CC |
| INFO | Program Loaded | User initiated action |
| INFO | Pump Selection Resynchronized | Analyzer installed in different system |
| INFO | Q-Factor Set | Load CC |
| INFO | Rebooted W | Watchdog reboot of analyzer |
| INFO | Run-Time Alarm Disable | User initiated action |
| INFO | Run-Time Alarm Disable Cancel | User initiated action |
| INFO | Run-Time Point Disable | User initiated action |
| INFO | Run-Time Point Disable Cancel | User initiated action |
| INFO | Start Monitor | User or power restored |
| INFO | Stop Monitor | User or instrument fault |
| INFO | User Requested Pump Switch | User initiated action |

Vertex™ 72-Point Continuous Monitor

Table 6-9: Information Events (cont'd)

| Event Type In History | Event History Message | Possible Cause |
|------------------------------|------------------------------------|--|
| INFO | OPC Driver Started | The DAq booted |
| INFO | OPC Driver Shut Down | User initiated action |
| INFO | CPLD Programmed Successfully | A new program has been loaded into the sensor board CPLD chip |
| INFO | CPLD Program Failed | An attempt to load a new program into the sensor board CPLD chip failed |
| INFO | RFID Read Skipped | User loaded new Chemcassette but skipped reading the RFID tag by pressing <next> |
| OPC | No Ack Echo From Az n-n | Communications problem to analyzer |
| OPC | No Cmnd Socket Sent To Az n-n | Communications problem to analyzer |
| OPC | OPC To Az n-n Communication Broken | Communications problem to analyzer |
| OUT OF ALARM | Various | Non-latching alarm level decreased because of decrease in gas concentration |
| PLC CONF INSTALL | Various | Download PLC Configuration was started |
| RESET ALM n | Various | Latching alarm level decreased because user pressed RESET CURRENT or RESET ALL |
| RESET ALM SIMULATE | Various | Analyzer acknowledges command to reset an artificial alarm OR fault |
| RESET INST FAULT | Various | Analyzer acknowledges command to reset an instrument fault |
| RESET MAINT FAULT | Various | Analyzer acknowledges command to reset a maintenance fault |

Vertex™ 72-Point Continuous Monitor

Table 6-9: Information Events (cont'd)

| Event Type In History | Event History Message | Possible Cause |
|-----------------------|-----------------------|---|
| USER RESET | Various | A user pressed RESET CURRENT or RESET ALL |
| INFO | Flow Corrected | Flow on one window of tape improper |

Table 6-10: LIT-Related Information Events

| | | |
|------|--------------------------------|--|
| INFO | Command - Perform LIT Char | User pressed “START LIT CHAR” button |
| INFO | LIT Characterization Performed | Analyzer completed LIT characterization. If data field non-zero, this indicates the observed cracking pressure in inches Hg. |
| INFO | Command - Unscheduled LIT | User pressed “START LIT TEST” |
| INFO | Line Integrity Test Performed | Analyzer completed an integrity test. The data field contains the observed cracking pressure in inches Hg. |
| INFO | Analyzer Lacks LIT | Other analyzers in the rack performed a Line Integrity Test but this analyzer was purchased without the option. |

Note:

If additional or replacement Vertex Analyzers are purchased without specifying the LIT option, no faults will be generated for the lack of the option in the new analyzer. However, an “INFO” message will be logged in the Event History each time the LIT option is invoked. Existing analyzers configured for LIT will be unaffected.

Vertex™ 72-Point Continuous Monitor

6.6 Manual Analyzer Override

The Vertex Analyzer is equipped with a “Manual Override” button (Figure 6-1) in the event the communications to the Vertex Data Acquisition (DAq) computer halts. This button activates only when the communications has completely ceased.

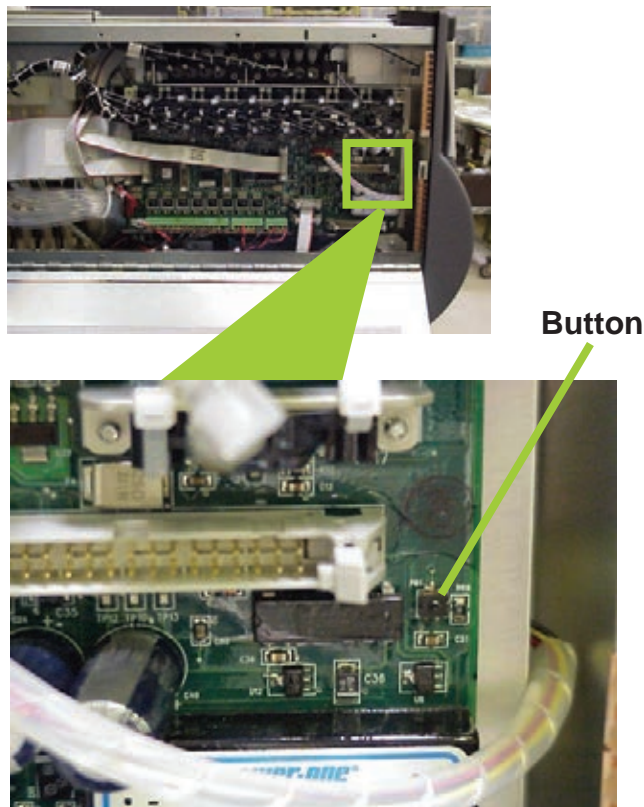


Figure 6-1 – Vertex Analyzer Manual Override Button Location

There are cases where the DAq appears to be “frozen” or “locked-up” (no response from the keyboard and/or any user invoked actions after a few moments) when in reality this is not the case. Events that could cause these symptoms include AC power surges or sags and improper shut-downs of the DAq that result in file corruption. As a result, future attempts to access these files can slow down the response of the DAq. To confirm a non-responsive DAq as opposed to frozen/locked-up, check the clock located in the upper right hand corner of the Vertex HMI window (shown in Figure 6-2). If the clock is still advancing, then the DAq CPU is not frozen/locked-up and your local Authorized Service Center needs to be contacted for assistance.

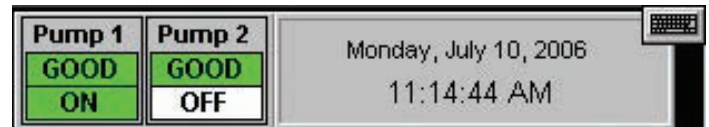


Figure 6-2 – Vertex HMI Clock

On occasions, there may be the need to install a new Chemcassette® to continue monitoring your facility, or to reset alarms or faults. If the DAq is not responding, these tasks can be performed using the “Manual Override” button. An extra step may be required to “force” activation of the “Manual Override” button under the above mentioned conditions if the DAq computer is still communicating with the analyzers. The following instructions will instruct you on how to accomplish this task:

Vertex™ 72-Point Continuous Monitor

Note:

Performing this task will generate Maintenance Fault F111 – DACS COM FAIL

1. Manually release the Analyzer by sliding the Removal key into slot located in the bottom of the Analyzer front (key located in Software Binder shipped with each Vertex rack) and slide the Analyzer out of the cabinet. See Figure 3.

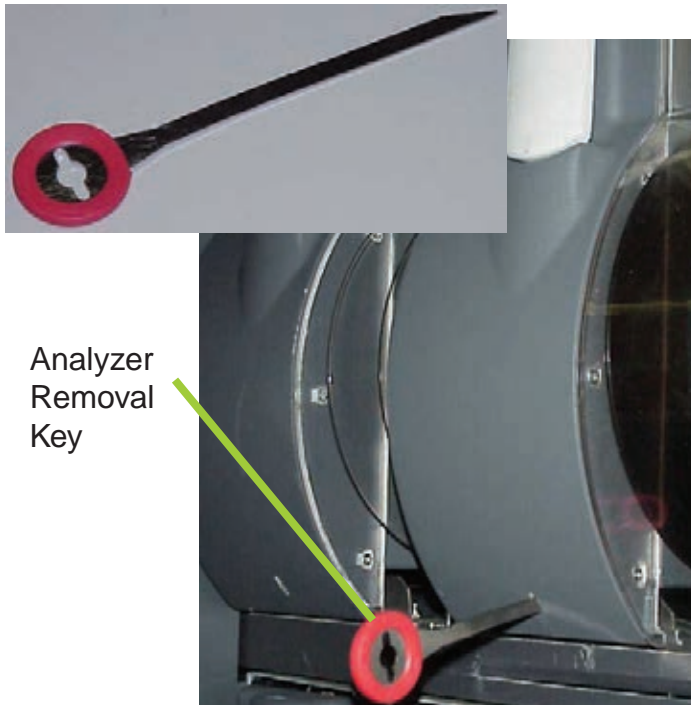


Figure 6-3 – Vertex Analyzer Removal Key and Slot Location

2. Locate the Ethernet cable on the rear panel and disconnect it.

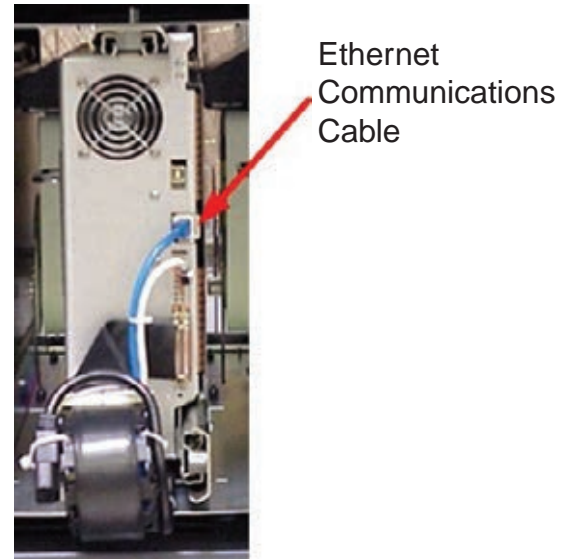


Figure 6-4 – Analyzer Ethernet Communication Cable Location

3. Open the side of the Analyzer by unscrewing the 4 thumbscrews at the top of the left side.

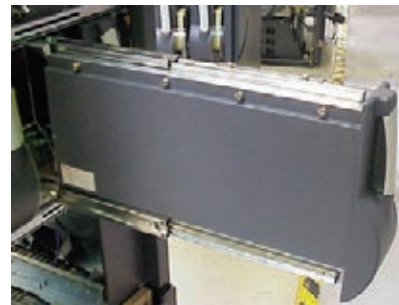


Figure 6-5 - Analyzer

Vertex™ 72-Point Continuous Monitor

4. Approximately 20 seconds after the Ethernet Cable has been disconnected, the Analyzer will recognize that it has lost communications with the DAQ and activate the “Manual

Override” button shown in Figure 1. The LED’s on the front of the Analyzer will flash to show a Maintenance Fault per the LED status flash pattern shown below in Figure 6-10.

| Mon State | Alarm State | Fault State | time in miliseconds | | | | | | | |
|-------------------------|-------------|-------------|---------------------|-------|-------|-------|-------|-------|-------|-------|
| | | | 500 | | 400 | | 100 | | | |
| idle | 0 | none | black | | | green | | | | |
| | | maintenance | amber | | | black | | | | |
| | | instrument | amber | black | | | | | | |
| | 1 | any | red | | | black | | | | |
| | 2 | any | red | black | | | | | | |
| pyrolyzer warmup | 0 | none | green | | black | | | | | |
| | | m or i | green | | black | amber | | | | |
| | 1 | any | green | | black | red | | | | |
| monitoring | 0 | none | green | | | black | | | | |
| | | maintenance | amber | | | green | | | | |
| | | instrument | amber | green | | | | | | |
| | 1 | any | red | | | green | | | | |
| | 2 | | red | green | | | | | | |
| primary program invalid | | | amber | black | amber | black | amber | black | amber | black |
| unpowered | | | black | | | | | | | |
| lockup | | | green | | | | | | | |
| | | | amber | | | | | | | |
| | | | red | | | | | | | |

Table 6-10: Analyzer Status LEDs

Vertex™ 72-Point Continuous Monitor

To reset faults and alarms:

Press and hold button for 1-3 seconds.

To Put Analyzer into Monitor mode:

Press and hold button for 4-9 seconds

To Exit Monitor and Open Gate:

Press and hold button for 10 seconds and above

5. Close and reattach the Analyzer cover, reconnect the Ethernet Communications Cable and slide the Analyzer into the cabinet.



Vertex™ 72-Point Continuous Monitor

A Installation Drawings

A.1 Introduction

Appendix A contains:

- [Floor Space Requirement](#)
- [General Connections & Cooling](#)
- [General Wiring and Computer Connections, Series 2](#)
- [General Wiring and Computer Connections, Series 1](#)
- [EMC Consideration](#)
- [Floor Mounting](#)
- [Door Installation Procedures](#)

Vertex™ 72-Point Continuous Monitor

PRINTED 16 Dec 2015 - 8:54am

THIS PAGE LEFT BLANK INTENTIONALLY.

| | | | | |
|-----|----------|---|-----------|-------|
| 10 | 12/15/15 | ADDED FRONT SERVICE ACCESS REQUIREMENT SHT 8, ECO-8772 | RC | |
| 9 | 09/17/12 | EXHAUST TUBING: TEFLON WAS POLYETHYLENE/ CHANGED ZA WITH HA/ECO-8142 | JAT | |
| 8 | 01/17/06 | ADDED SHT-8 & MOVED DWGS IN SHT-1/ SHT-8: 18" SIDE CLEARANCE WAS 5"/ECO-7337 | JAT | |
| 7 | 11/07/05 | SHT 6: 0060-1021 WAS 0060-0021 (NOTE) CORRECTION/UPDATE TP HW FORMAT/ECO #7317 | MR | |
| 6 | 02/05/04 | ADDED 3U-COMP. & PWR MODULE FOR SERIES-2 APPLICABLE RACK SN: 291-0500 & ABOVE/ ADD SHEET-3, DEL SHEET-6 & RENUMBER/ REVISE OXB PLC WIRING SCHEMATIC/ECO-7110 | JAT NJ | |
| 5 | 06/02/03 | EXHAUST TUBING WAS POLYPROPYLENE - ECO 7051 | NJ | |
| 4 | 04/15/03 | MODIFY PAGE 7 TO ADD VENT ASSY - ECO 7028 | NJ | |
| 3 | 05/27/02 | UPDATE SHT 3&6 FOR CHANGES IN RELAY ASSIGN'T /ADD METER EQUIV. FOR MANUAL/PER ECO 6887 | JAT | |
| 2 | 11/09/01 | SHT-2: EXH. TUBING WAS 100-FTMAX/ADDED TABLE FOR TRANSPORT TIMES/ADDED FILTER LIST/ ADDED SHEET-7/PER ECO 6811 | JAT | |
| 1 | 09/24/01 | RELEASE FOR PRODUCTION - NO CHANGES. | MR | |
| REV | DATE | DESCRIPTION OF REVISION | CAD | CHKD. |

REVISION RECORD

FIRST PARENT P/N: 1290-0019 DRAWING RELEASE NO.: 285-039

Honeywell

| | | | | | | | | |
|--|--|---------------------------------------|--|--|-------------|----------|------------|------------------------|
| DO NOT SCALE DRAWING. | | TOLERANCES UNLESS OTHERWISE SPECIFIED | | DRAWING TITLE: VERTEX INSTALLATION DRAWING | | | | |
| THIS DRAWING AND THE INFORMATION CONTAINED HEREIN ARE PROPRIETARY TO HONEYWELL ANALYTICS INC. AND SHALL NOT BE USED IN WHOLE OR IN PART WITHOUT THE EXPRESS WRITTEN PERMISSION OF HONEYWELL ANALYTICS INC. | | INCH [MM] | | APPROVED BY | SIGNATURE | DATE | SCALE: NTS | DRAWING NO.: 1295G0286 |
| | | 1/4 ± 1/32 [0.79] | | MANUFACTURING ENGINEER | R. ANDERSON | 09/24/01 | | |
| | | .X ± .015 [0.38] | | PROJECT ENGINEER | J. TIWET | 09/24/01 | REV 10 | SHEET 1 OF 8 |
| | | .XX ± .010 [0.25] | | QUALITY ASSURANCE | D. WHITING | 09/24/01 | | |
| XXX ± .008 [0.13] | | ANGLES ± 1° | | | | | | |

BSIZE.DWG REV. OCT. 2005

Vertex™ 72-Point Continuous Monitor

PRINTED 16 Dec 2015 - 8:55am

1. Table: Transport Times in Seconds


| Length in Feet | 0.25" Outside Diameter Tubing | | | | | | | |
|--|--------------------------------|-------|------------------|--------|-------------------------|-------|-------|------------------|
| | I.D. 0.156"(Medium Wall) I.D.Ⓞ | | | | 0.190"(Thin Wall) I.D.Ⓞ | | | |
| Length in meters | 100 | 200 | 300 | 400 | 100 | 200 | 300 | 400 |
| | 30.5m | 61.0m | 91.4m | 121.9m | 30.5m | 61.0m | 91.4m | 121.9m |
| # of Analyzers Per line | 1 | 15 | 30 | 45 | 60 | 22 | 45 | 67 |
| | 2 | 8 | 15 | 22 | 34 | 11 | 22 | 34 |
| | 3 | 5 | Pressure Limited | | | 7 | 15 | Pressure Limited |
| Nominal Transport Time in Seconds | | | | | | | | |
| 1.3-1.8 Liters per Minute per Point (1.5 LPM nominal) | | | | | | | | |
| Pressure limited areas: expected pressure to exceed 5 inHg | | | | | | | | |

- Ⓞ HA PN: 0235-0157 (0.156" I.D.), 400-ft [121.9m] roll
- Ⓞ HA PN: 0235-0109 (0.190" I.D.), 1000-ft [304.8m] roll

2. Sample Line Filter Recommendations:

Refer to Manual, Section B.1, for filter requirements for specific gases.

- HA PN: 780248 Dust Filter (One per line) - TYPE-A
- HA PN: 1830-0055 Filter for Corrosive Gases - TYPE-B (One per line)
- HA PN: 0235-1072 Replacement "corrosive" filter elements (Pack of 100)

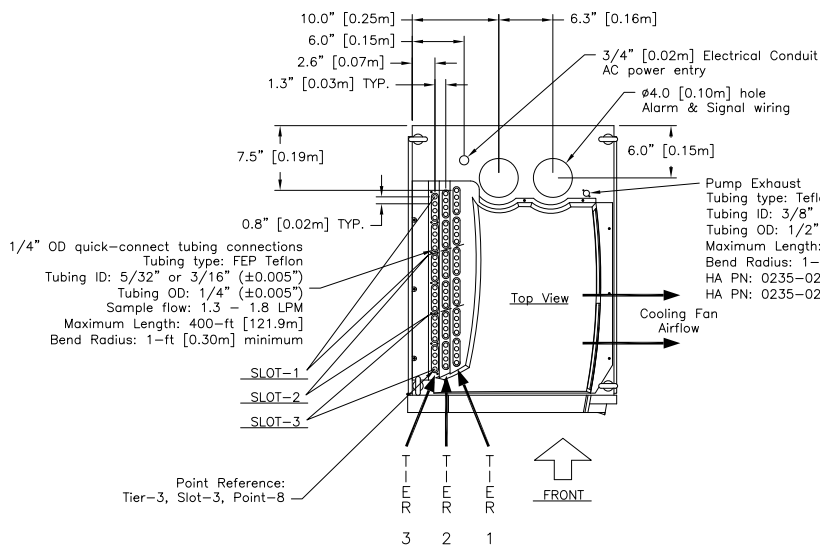

General Connections & Cooling
Refer to sheet-5 for EMC Considerations

| 10 | --/--/-- | SEE SHEET 1 | --- | |
|-----|----------|-------------------------|-----|-------|
| REV | DATE | DESCRIPTION OF REVISION | CAD | CHKD. |


REVISION RECORD

FIRST PARENT P/N: 1290-0019 DRAWING RELEASE NO.: 285-039


Honeywell

| | | | | | |
|--|--|---|--|--|--|
| DO NOT SCALE DRAWING. | | TOLERANCES UNLESS OTHERWISE SPECIFIED | | DRAWING TITLE: VERTEX INSTALLATION DRAWING | |
| THIS DRAWING AND THE INFORMATION CONTAINED HEREIN ARE PROPRIETARY TO HONEYWELL ANALYTICS INC. AND SHALL NOT BE USED IN WHOLE OR IN PART WITHOUT THE EXPRESS WRITTEN PERMISSION OF HONEYWELL ANALYTICS INC. | | INCH [MM] 1/4 ± 1/32 [0.79] X ± .015 [0.38] XX ± .010 [0.25] XXX ± .008 [0.13] ANGLES ± 1° | | APPROVED BY: R. ANDERSON SIGNATURE: J. TWET DATE: 09/24/01 | |
| | | MANUFACTURING ENGINEER: R. ANDERSON PROJECT ENGINEER: J. TWET QUALITY ASSURANCE: D. WHITING | | DATE: 09/24/01 | |
| | | SCALE: NTS | | DRAWING NO.: 1295G0286 | |
| | | REV 10 | | SHEET 2 OF 8 | |

Vertex™ 72-Point Continuous Monitor

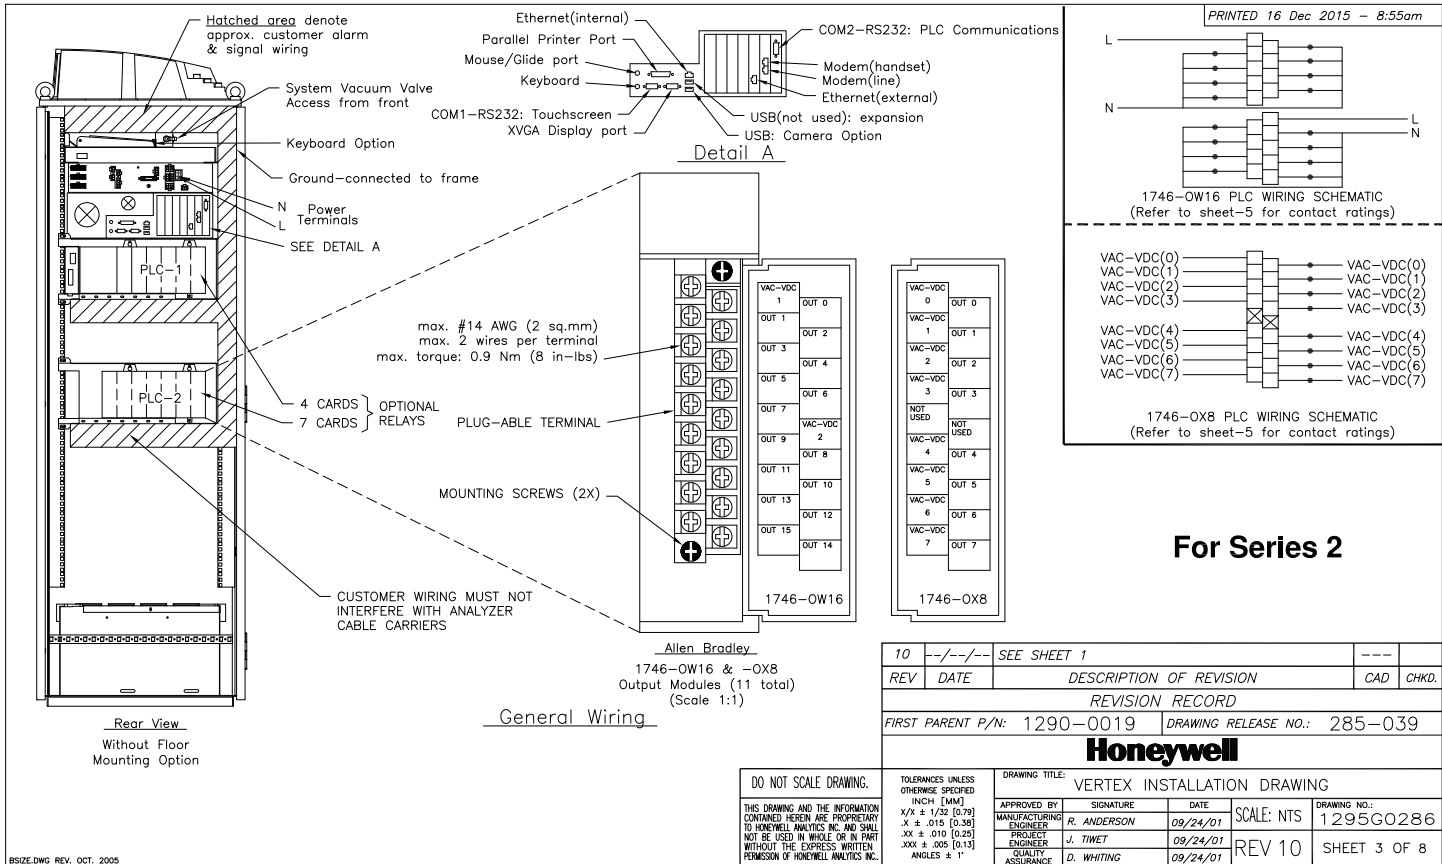


Vertex™ 72-Point Continuous Monitor

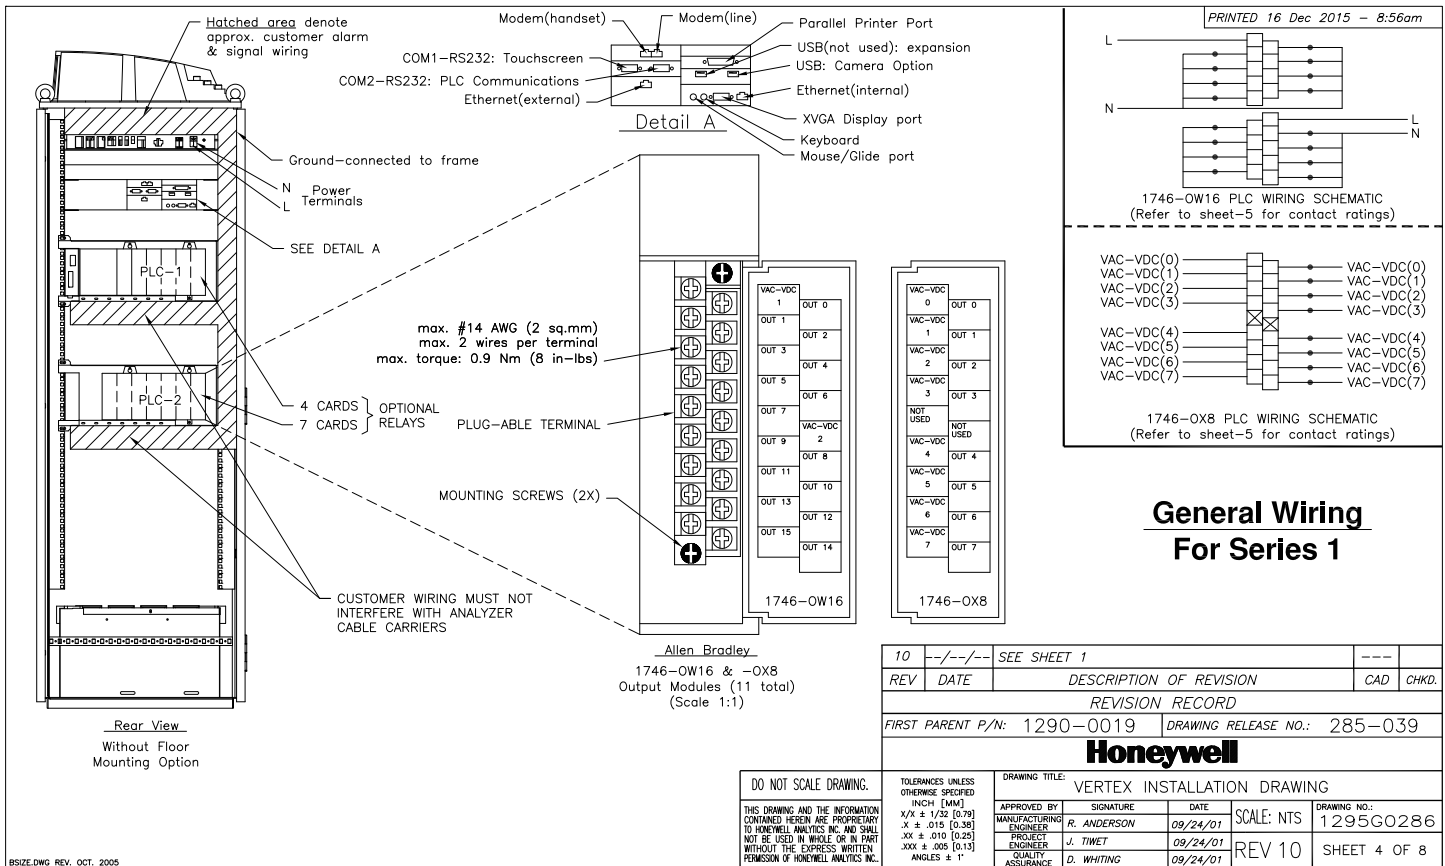

Vertex™ 72-Point Continuous Monitor

PRINTED 16 Dec 2015 - 8:56am

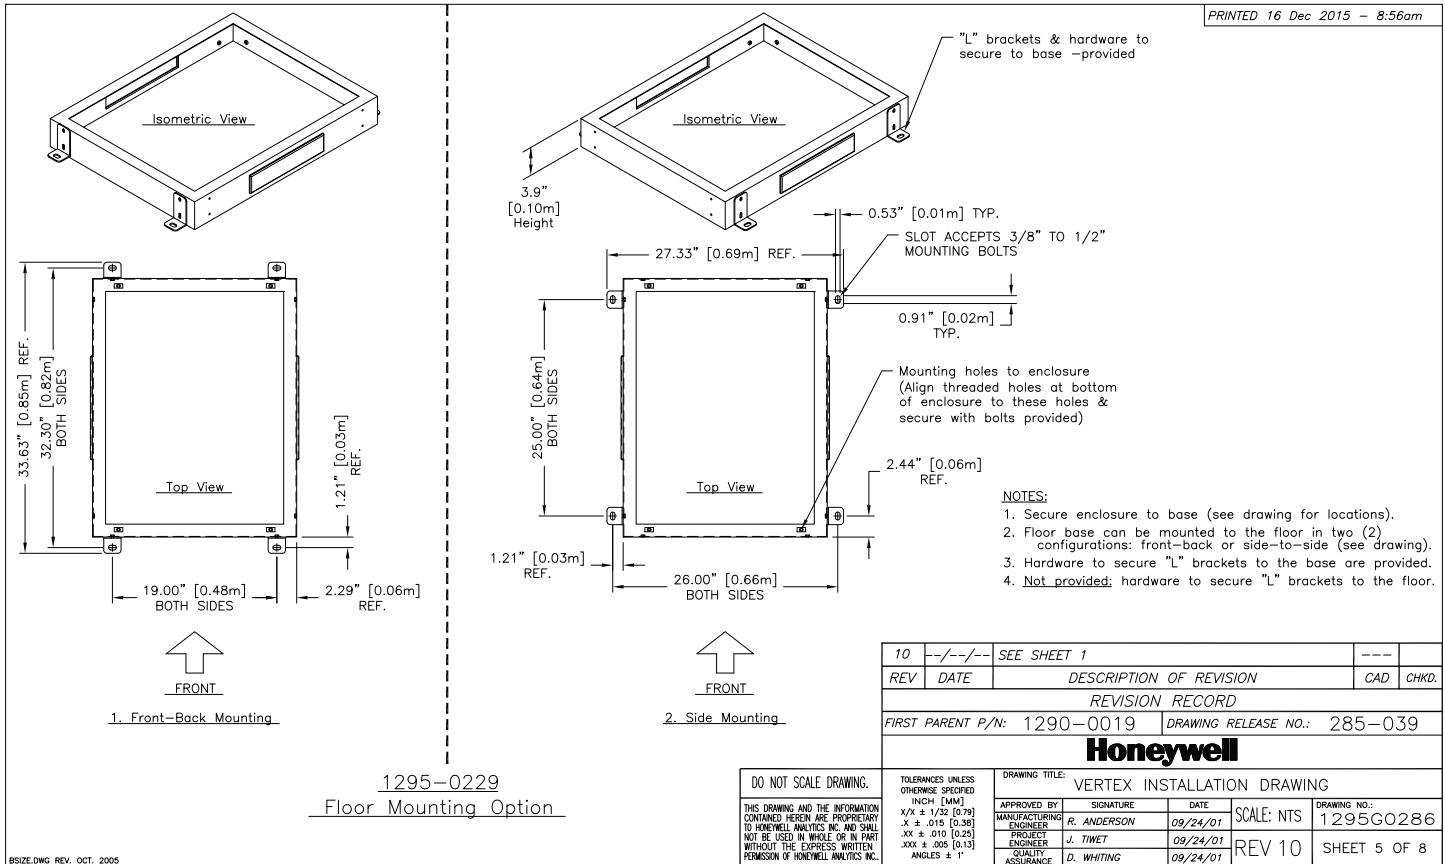

BSZD.DWG REV. OCT. 2005

Vertex™ 72-Point Continuous Monitor

EMC Consideration

Overview

Your Zellweger Analytics MDA Scientific instrument has been designed to comply with applicable Electromagnetic Compatibility (EMC) standards at the time of manufacture. The design includes filtering, shielding and bypassing techniques. At the time of certification, simulated customer Input/Output (I/O) schemes were tested.

All methods used in your equipment for emission suppression and reduction of susceptibility are interactive. Modifications to the instrument will most likely result in increased emission and higher vulnerability to other radiated fields.

Following the guidelines in this EMC Considerations section will ensure your instrument maintains the highest degree of EMC integrity. The guidelines list apply only to I/O emissions and do not apply to A.C. and D.C. Instrument power connections.

Cabling

At a very minimum, all cables should include a braided shield. Ideal results have been obtained with twisted pair cabling which has a foil shield surrounding each pair plus foil and 90% braid shielding around the bundle. While this yields the best results, it can be very expensive. In addition, ensure local electrical code requirements are met.

Cabling Type

The following cable parameters must be considered:

Braid Must have a minimum 90% coverage
Foil When used with braid, provides 100% coverage.
Note: Do not use foil alone. It has a tendency to break.

Twisted Pair Provides for cancelling of magnetic fields.
Stranded Pair Provides the greatest surface area.

MDA Scientific product testing uses >90% braid with foil (around the bundle); twisted pair; stranded 24 AWG (minimum wiring for all qualification and certification testing.)

Shield Termination

Continuation of the shield to the cabinet is most important.

For discrete wire termination, pigtails to the cabinet (connector) ground should be extremely short (absolutely no greater than three inches).

For multiconductor connector terminations, only 360° shielded shells should be used.

Connectors

All qualification and certification of MDA Scientific products were achieved with high quality connectors, providing 360° shield coverage. These connectors generally had metal shells.

Failure to properly secure the connector to the equipment will result in high emission levels. Also, poorly constructed or improperly assembled connectors can be a high source of radiated noise and provide a path for external signals into the instrument.

1. OPERATING VOLTAGE:

SINGLE-PHASE PROVIDING HOT, NEUTRAL & GROUND LINES
 230 VAC ±10%, (UNDERLOAD) 50/60Hz, 15 AMP
 3000 VA/3500 WATTS/12,000 BTU/Hr
 AN EASILY ACCESSIBLE SERVICE DISCONNECT/POWER SWITCH MUST BE INSTALLED NEAR THE INSTRUMENT.

NOTE:

A 5KVA 480/230 VOLT DISTRIBUTION TRANSFORMER CAN BE USED SUCH AS HA# 0060-1020 THAT WILL PROVIDE THE REQUIRED VOLTAGE AND ALLOW A LEG OF THE SECONDARY WINDING TO BE CONNECTED COMMON TO GROUND. TRANSFORMER HA# 0060-1021 WILL STEP-UP 208V TO 240V.

WARNING:

POWER SWITCH ON UNIT DOES NOT DISCONNECT ALL ELECTRICAL POWER.

2. **WIRING:** ELECTRICAL INSTALLATION MUST COMPLY WITH NEC, NFPA AND OTHER LOCAL CODES.

3. RELAY OUTPUT MODULES (1746-0W16, -0X8)

| Specifications | 1746-0W16 (RTB) | 1746-0X8 (RTB) |
|---|--|-----------------------|
| Operating Category | ac/dc Relay | |
| Operating Voltage | 5 to 265V ac 47 to 63 Hz/5 to 125V dc | |
| Number of Outputs | 16 | 8 |
| Points per Common | 8 | Individually Isolated |
| Backplane | 5V | 0.170A |
| Current Draw | 24V | 0.180A |
| | | 0.090A |
| Single Delay(max)-resistive load | on=10ms / off=10ms | |
| Off-State Leakage(max) | 0 mA | |
| Load Current(min) | 10 mA at 5V dc | |
| Continuous Current per Point [ⓐ] (max) | Refer to the Relay Contact Ratings-sheet 4 | |
| Continuous Current per Module(max) | 16.0A ac | ⓐ |
| Current per Common (max) | 8.0A | |

PRINTED 16 Dec 2015 - 8:57am

4. RELAY CONTACT RATINGS FOR 1746-0W16:

| | Maximum Volts | Amperes [ⓐ] | | Amps [ⓑ] Cont. | Volt-Amps | |
|----|---------------|----------------------|-------|-------------------------|-----------|--------|
| | | Make | Break | | Make | Break |
| ac | 240V ac | 7.5A | 0.75A | 2.5A | 1800 VA | 180 VA |
| | 120V ac | 15.0A | 1.50A | | | |
| dc | 125V dc | 0.22A [ⓐ] | | 1.0A | 28 VA | |
| | 24V dc | 1.2A [ⓐ] | | 2.0A | | |

5. RELAY CONTACT RATINGS FOR 1746-0X8:

| | Maximum Volts | Amperes [ⓐ] | | Amps [ⓑ] Cont. | Volt-Amps | |
|----|---------------|----------------------|-------|-------------------------|-----------|-------|
| | | Make | Break | | Make | Break |
| ac | 240V ac | 15A | 1.5A | 5.0A | 3600A | 3600A |
| | 120V ac | 30A | 3.0A | | | |
| dc | 125V dc | 0.22A [ⓐ] | | 1.0A | 28 VA | |
| | 24V dc | 1.2A [ⓐ] | | 2.0A | | |

ⓐ Connecting surge suppression across your external load will extend the life of SLC 500 relay contacts. For recommended surge suppressors when switching ac inductive load, consult SLC 500 Modular Hardware Style Installation and Operation User Manual (Publication 1747-6.2) or the SLC 500 Fixed Hardware Style Installation and Operation User Manual (Publication 1747-6.2.1). Recommended surge suppression for switching 24Vdc inductive load is a 1N4004 diode reverse wired across the load.

ⓑ The continuous current per module must be limited so the module power does not exceed 1440VA.

ⓐ For dc voltage application, the make/break ampere rating for relay contacts can be determined by dividing the 28 VA by the applied dc voltage. For example, 28VA/48V dc=0.58A. For dc voltage applications less than 14V, the make/break for relay contacts cannot exceed 2A.

RTB-Removal Terminal Block

| 10 | --/--/-- | SEE SHEET 1 | --- | |
|-----|----------|-------------------------|-----|-------|
| REV | DATE | DESCRIPTION OF REVISION | CAD | CHKD. |

REVISION RECORD

FIRST PARENT P/N: 1290-0019 DRAWING RELEASE NO.: 285-039

Honeywell

| | | | | | |
|------------------------|-------------|--|------------|---|--|
| DO NOT SCALE DRAWING. | | TOLERANCES UNLESS OTHERWISE SPECIFIED INCH [MM] X/4 ± 1/32 [0.79] X ± .015 [0.38] XX ± .010 [0.25] XXX ± .005 [0.13] ANGLES ± 1° | | DRAWING TITLE: VERTEX INSTALLATION DRAWING | |
| APPROVED BY | SIGNATURE | DATE | SCALE: NTS | DRAWING NO.: 1295G0286 | |
| MANUFACTURING ENGINEER | R. ANDERSON | 09/24/01 | REV 10 | SHEET 6 OF 8 | |
| PROJECT ENGINEER | J. TIWET | 09/24/01 | | | |
| QUALITY ASSURANCE | D. WHITING | 09/24/01 | | | |


Vertex™ 72-Point Continuous Monitor

PRINTED 16 Dec 2015 - 8:58am

DOOR AND VENT PLATE INSTALLATION PROCEDURES

1. To prevent damage to the door and vent plate, these parts are shipped separately.
2. The door and vent plate are assembled with the hinges and screws, wrapped in bubble-bag, and placed above the unit during shipping.
3. Install the door and vent plate after the unit has been positioned at its final location. (The door limits the access to the eyelets at the top of the enclosure.)
4. NOTE: To move or tilt unit, use the four eyelets located on the top panel. Ensure that lifting cables do not damage the cap.
5. NOTE: The screws are pre-installed on the hinge, and the pins are pre-installed on the enclosure. (Remove pins before installation.)
6. When ready, follow the steps below to install the door and vent plate.

SINGLE SAMPLE LINE

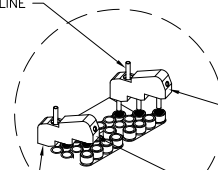

4-PORT MANIFOLD OPTION: 1295-0322


TO SHARE A SAMPLE LINE BETWEEN 2 OR 3 ANALYZERS. KIT INCLUDES 3 CONNECTION TUBINGS AND 1 PLUG (TO BE USED WHEN SHARING BETWEEN 2 ANALYZERS).

NOTE: The manifold can only share lines between the same point number, on the same slot on 3 different tiers for 3 analyzers (or, 2 tiers for 2 analyzers).

3-ANALYZER POSITION
(connecting 3 different tiers)

2-ANALYZER POSITION
(connecting 2 tiers, and the un-used port is plugged)

PLUG THIS PORT

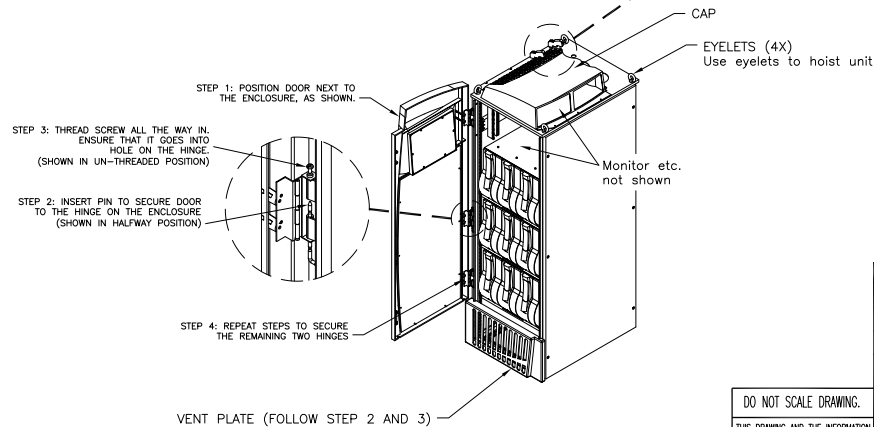

| 10 | --/--/-- | SEE SHEET 1 | --- | |
|-----|----------|-------------------------|-----|-------|
| REV | DATE | DESCRIPTION OF REVISION | CAD | CHKD. |

REVISION RECORD


FIRST PARENT P/N: 1290-0019 DRAWING RELEASE NO.: 285-039

Honeywell

| | | | | | |
|--|--|--|--|--|--|
| DO NOT SCALE DRAWING. | | TOLERANCES UNLESS OTHERWISE SPECIFIED | | DRAWING TITLE: VERTEX INSTALLATION DRAWING | |
| THIS DRAWING AND THE INFORMATION CONTAINED HEREIN ARE PROPRIETARY TO HONEYWELL ANALYTICS INC. AND SHALL NOT BE USED IN WHOLE OR IN PART WITHOUT THE EXPRESS WRITTEN PERMISSION OF HONEYWELL ANALYTICS INC. | | INCH [MM] 1/4" ± 1/32 [0.79] .1" ± .015 [0.38] .05" ± .010 [0.25] XXX ± .005 [0.13] ANGLES ± 1° | | APPROVED BY: R. ANDERSON SIGNATURE: [Signature] DATE: 09/24/01 | |
| | | PROJECT: J. TIWET QUALITY ASSURANCE: D. WHITING | | SCALE: NTS DRAWING NO.: 1295G0286 REV 10 SHEET 7 OF 8 | |

BSIZE.DWG REV. OCT. 2005

Vertex™ 72-Point Continuous Monitor

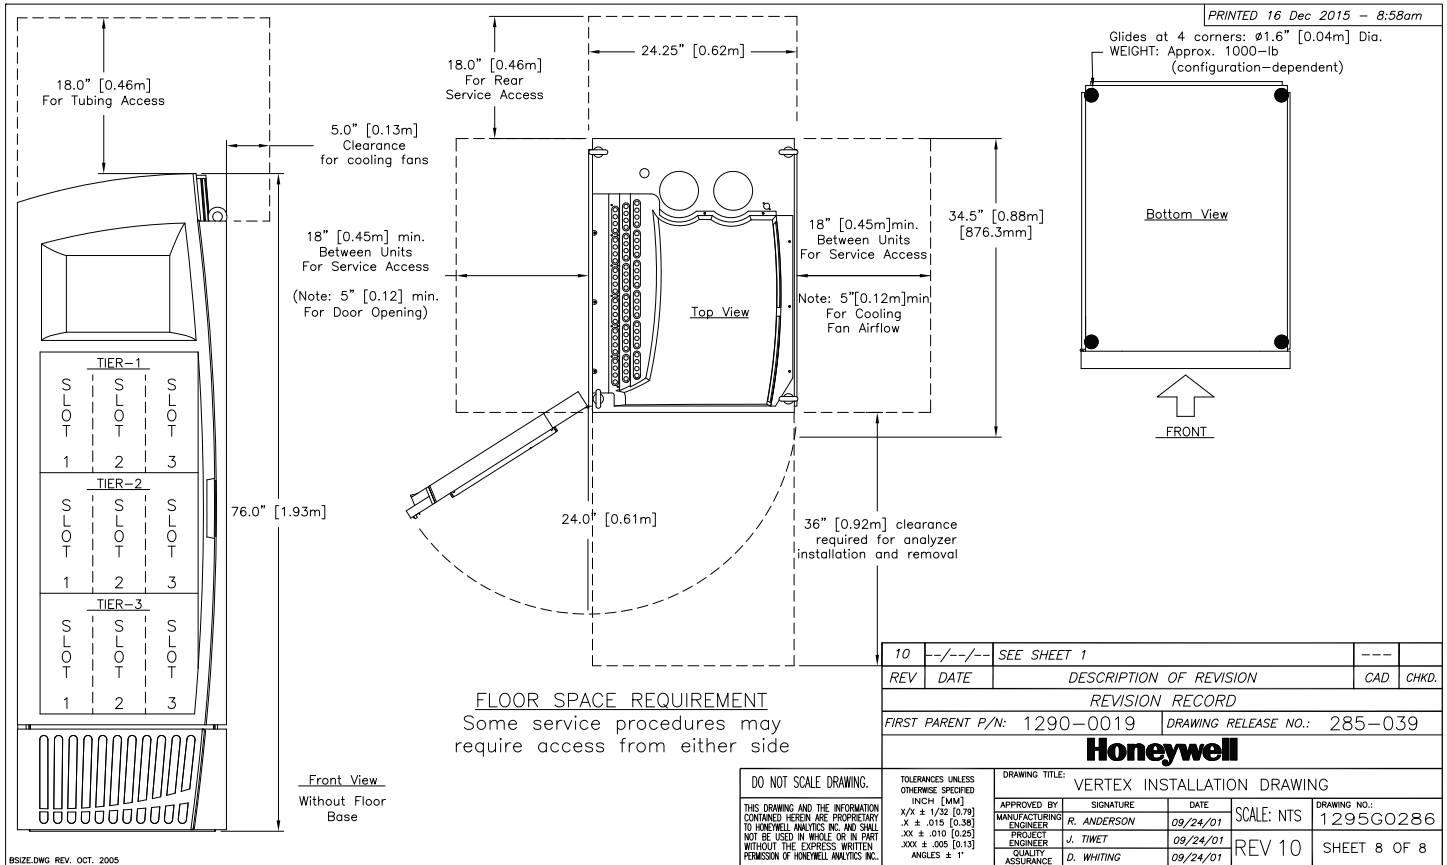

BSIZE.DWG REV. OCT. 2005

B Specifications

B.1 Introduction

Appendix B consists of the following sections:

- [B.2 Filter Compatibility](#)
- [B.3 Vertex General Specifications](#)
- [B.4 Nominal Transport Times](#)

Vertex™ 72-Point Continuous Monitor

B.2 Filter Compatibility

The following table shows sample filter requirements.

If you are monitoring non-corrosive target gases, use filter type A, (P/N 780248), a sample line dust/particulate filter.

For monitoring corrosive gases, such as chlorine (Cl_2), hydrogen fluoride (HF), hydrogen chloride (HCl), and hydrogen bromide (HBr), sample lines in a dusty environment or for outdoors, use filter type B, (P/N 1830-0055), or type C, (P/N 1991-0147) filter assembly for corrosive gases. The Teflon membrane particulate filter is designed to prevent dust and dirt greater than one micron from entering the sample line. Unlike standard particulate filters, it does not exhibit sample loss with corrosive monitoring.

The one micron Teflon membrane contained in the Filter B housing (P/N 0235-1072, 100 per pack) should be replaced every 30 days.

Filters have an arrow on the side of the filter pointing in the direction of airflow toward the Vertex system. Replacement of filters is site dependent.

Filter A - P/N 780248

Filter B - P/N 1830-0055

Filter C - P/N 1991-0147

Table B-1: Sample Filter Requirement

| Symbol | Name | Filter Type A | Filter Type B | Filter Type C |
|---------------------------|----------------------------------|---------------|---------------|---------------|
| NH_3 | Ammonia | | X | X |
| AsH_3 | Arsine | X | | |
| $\text{AsH}_3 \text{ D}$ | Arsine (Dry) | X | | |
| $\text{AsH}_3 \text{ LL}$ | Arsine (Low level) | X | | |
| BF_3 | Boron Trifluoride | | X | X |
| Cl_2 | Chlorine | | X | X |
| ClO_2 | Chlorine Dioxide | | X | X |
| $\text{Cl}_2 \text{ LL}$ | Chlorine (Low Level) | | X | X |
| B_2H_6 | Diborane | X | | |
| DMA | Dimethylamine | | X | X |
| F2 | Fluorine | | X | X |
| GeH_4 | Germane | X | | |
| HBr | Hydrogen Bromide | | X | X |
| HBr LL | Hydrogen Bromide (Low Level) | | X | X |
| HCl | Hydrogen Chloride | | X | X |
| HCl LL | Hydrogen Chloride (Low Level) | | X | X |
| HCN | Hydrogen Cyanide | X | | |
| HF | Hydrogen Fluoride | | X | X |
| HF LL | Hydrogen Fluoride (Low Level) | | X | X |
| HI | Hydrogen Iodide | | X | X |
| H_2Se | Hydrogen Selenide | X | | |
| H_2S | Hydrogen Sulfide | X | | |
| $\text{H}_2\text{S LL}$ | Hydrogen Sulfide (Low Level) | | X | X |
| NO_2 | Nitrogen Dioxide | X | | |
| NF_3 | Nitrogen Trifluoride | X | | |
| COCl_2 | Phosgene | X | | |
| PH_3 | Phosphine | X | | |
| SiH_4 | Silane | X | | |
| SO_2 | Sulfur Dioxide | | X | X |
| TBA | Tert-butyl Arsine | X | | |
| TBP | Tert-butyl Phosphine | X | | |
| TDMAT | Tetrakis(DimethylAmino) Titanium | | X | X |

Vertex™ 72-Point Continuous Monitor

B.3 Vertex General Specifications

Physical dimensions are as follows:

- Height: 76 in. (193 cm)
- Width: 24 in. (61 cm)
- Depth: 34-1/2 in. (88 cm)
- Weight: ~1000 lbs. (456 kg) with 9 analyzers
- Universal Az: 31 lbs. (14 kg)
- Pyrolyzer Az: 48 lbs. (22 kg)
- Empty Vertex Rack: 725 lbs. (330 kg)

Tubing dimensions are:

- Sample lines: 1/4 in. (6.35 mm) O.D. x 0.190 in. (4.83 mm) I.D. FEP Teflon or 1/4 in. (6.35 mm) O.D. x 0.156 in. (3.9 mm) I.D. FEP Teflon, 400 ft (122 m) maximum

Note: It is recommended that the sample tubing length for monitoring acids (HBr, HCl, HF, and BF₃) be kept as short as possible where the relative humidity at the sample point is high (above 50% RH); there will be some sample loss due to absorption into the sample line.

- Exhaust line: 1/2 in. (12.7 mm) O.D. x 3/8 in. (9.5 mm) I.D. Teflon tubing, 50 ft. (15 m) maximum

Output requirements are:

- Optional data output: See [Appendix F, Network Interface and Options](#).
- Optional relay output contacts: Via PLC, normally open (form A). 176 Relay contacts are user configurable. Factory default setting include A1 and A2 alarms per point, as well as 9 general analyzer A1, 9 general analyzer A2, 9 analyzer fault/maintenance and 5 open. See [Appendix E, Optional Relay Specifications](#).
- Optional 4-20 mA analog: 0-500 ohms
- Installation Category (overvoltage category): II (UL 61010B-1)
- Pollution Degree 2
- Temperature: 59°F to 95°F (15°C to 35°C)
- Humidity: 20-80% RH
- Operating Altitude: -1000 ft. (-305 m) to 6000 ft. (1829 m) above sea level
- Operating Voltage: 230 VAC ± 10% (under load) @ 50/60 Hz; 15 Amps maximum, single phase. See [Section 2.6, Electrical Power](#) for proper specifications.

Vertex™ 72-Point Continuous Monitor

B.4 Nominal Transport Times

The following table shows the time required for samples to move from the sampling point to the Vertex system for various lengths of sample lines.

Table B-2: Nominal Transport Times

| O.D. | | 0.25 in. Outside Diameter Tubing | | | | | | | |
|-------------------------|--|----------------------------------|-------------------------|---------|---------|----------------------------|---------|-------------------------|---------|
| I.D. | | 0.15 in. (Medium Wall) I.D. | | | | 0.190 in. (Thin Wall) I.D. | | | |
| Length in Feet | | 100 | 200 | 300 | 400 | 100 | 200 | 300 | 400 |
| Length in Meters | | 30 | 61 | 91 | 122 | 30 | 61 | 91 | 122 |
| # of Analyzers per line | 1 | 15 sec. | 30 sec. | 45 sec. | 60 sec. | 22 sec. | 45 sec. | 67 sec. | 89 sec. |
| | 2 | 8 sec. | 15 sec. | | | 11 sec. | 22 sec. | 34 sec. | 45 sec. |
| | 3 | 5.0 sec. | Pressure Limited | | | 7 sec. | 15 sec. | Pressure Limited | |
| | Nominal Transport Time in Seconds 1.3-1.8 Liters per Minute per Point (1.5 LPM nominal) | | | | | | | | |

C Detectable Gases

Vertex™ 72-Point Continuous Monitor

C.1 Detectable Gases

Vertex System Chemcassette® analyzers are continuous monitoring instruments. The initial analysis period listed in Table C-1 varies based on the programmed alarm levels. This period is valid only after the system pulls a new Chemcassette® window. Increasing the programmed alarm levels will decrease the initial sample period.

For accurate detection, gas must be present at sufficient levels and durations. Typical response times are shown in this table at 2 TLV, which will vary in duration depending on the target gas and alarm level settings. For high concentrations (greater than full scale) a minimum of 4 seconds is required.

| Gas Name ¹ | TLV | LAL | LDL | Default Alarm Level 1 | Default Alarm Level 2 | Range | Alarm Setting | Initial Analysis Period (second) | Time to 1 TLV (Alarm @ 2 TLV Concentration 10-ft. Sample Line) | Chemcassette Part Number |
|--|--------|---------|---------|-----------------------|-----------------------|-----------|--|----------------------------------|--|--------------------------|
| Ammonia II (NH ₃) | 25 ppm | 3 ppm | 3 ppm | 25 ppm | 50 ppm | 0-75 ppm | 3-49.9 ppm 50-75 ppm | 10 10 | <20 sec | 1295-0221 |
| Ammonia XP (NH ₃) | 25 ppm | 1.5 ppm | 1.5 ppm | 25 ppm | 50 ppm | 0-150 ppm | 1.5-49.9 ppm 50-150 ppm | 10 10 | <20 sec | 1295-0405 |
| Ammonia XP4 (NH ₃) | 25 ppm | 1.5 ppm | 1.5 ppm | 25 ppm | 50 ppm | 0-150 ppm | 1.5-49.9 ppm 50-150 ppm | 10 10 | <20 sec | 1257-9309 |
| Arsine (AsH ₃) | 5 ppb | 5 ppb | 5 ppb | 50 ppb | 100 ppb | 0-500 ppb | 5-500 ppb | 30 | <20 sec (Alarm @ 50 ppb with 100 ppb AsH ₃ gas) | 1295-0300 |
| Arsine (AsH ₃) Dry | 5 ppb | 7 ppb | 5 ppb | 50 ppb | 100 ppb | 0-500 ppb | 7-99 ppb 100-199 ppb 200-500 ppb | 60 30 15 | <35 sec (Alarm @ 50 ppb with 100 ppb AsH ₃ gas) | 1295-0300 |
| TLV - Threshold Limit Value LAL - Lowest Alarm Level LDL - Lower Detectable Limit 1. "-1" calibrations allow more stain development but will extend response times 2. Minimum Sample Time | | | | | | | | | | |

Vertex™ 72-Point Continuous Monitor

| Gas Name ¹ | TLV | LAL | LDL | Default Alarm Level 1 | Default Alarm Level 2 | Range | Alarm Setting | Initial Analysis Period (second) | Time to 1 TLV (Alarm @ 2 TLV Concentration 10-ft. Sample Line) | Chemcassette Part Number |
|--|-------|----------|----------|-----------------------|-----------------------|------------|---|----------------------------------|--|--------------------------|
| Arsine XP (AsH ₃) Low Level | 5 ppb | 0.5 ppb | 0.3 ppb | 2.5 ppb | 5 ppb | 0-50 ppb | 0.5-1.9 ppb 2-4.9 ppb 5-9.9 ppb 10-50 ppb | 300 150 60 30 | <45 sec | 1295-0226 |
| Arsine XP (AsH ₃) | 5 ppb | 3 ppb | 2.5 ppb | 50 ppb | 100 ppb | 0-500 ppb | 3-500 ppb | 30 | <20 sec (Alarm @ 50 ppb with 100 ppb AsH ₃ gas) | 1295-0226 |
| Arsine XP4 (AsH ₃) | 5 ppb | 3 ppb | 2.5 ppb | 50 ppb | 100 ppb | 0-500ppb | 3-500 ppb | 30 | <20 sec (Alarm @ 50 ppb with 100 ppb AsH ₃ gas) | 1257-9300 |
| Arsine XP4 (AsH ₃) Low Level | 5 ppb | 0.5 ppb | 0.3 ppb | 2.5 ppb | 5 ppb | 0-50 ppb | 0.5-1.9 ppb 2-4.9 ppb 5-9.9 ppb 10-50 ppb | 300 150 60 30 | <45 sec | 1257-9300 |
| Boron Trifluoride (BF ₃) Low Level | 1 ppm | 120 ppb | 100 ppb | 125 ppb | 250 ppb | 0-1500 ppb | 120-249 ppb 250-499 ppb 500-749 ppb 750-1500 ppb | 240 120 60 30 | <90 sec (Alarm @ 250 ppb with 500 ppb BF ₃ gas) | 1295-0225 |
| Boron Trifluoride XP (BF ₃) | 1 ppm | 0.12 ppm | 0.1 ppm | 1 ppm | 2 ppm | 0-10 ppm | 0.12-0.99 ppm 1.0-10.0 ppm | 45 30 | <45 sec | 1295-0507 |
| Boron Trifluoride XP4 (BF ₃) | 1 ppm | 0.12 ppm | 0.10 ppm | 1.0 ppm | 2.0 ppm | 0-10 ppm | 0.12-0.90 ppm 1.0-10.0 ppm | 45 30 | <45 sec | 1257-9310 |

TLV - Threshold Limit Value LAL - Lowest Alarm Level LDL - Lower Detectable Limit
1. "-1" calibrations allow more stain development but will extend response times
2. Minimum Sample Time

Vertex™ 72-Point Continuous Monitor

| Gas Name ¹ | TLV | LAL | LDL | Default Alarm Level 1 | Default Alarm Level 2 | Range | Alarm Setting | Initial Analysis Period (second) | Time to 1 TLV (Alarm @ 2 TLV Concentration 10-ft. Sample Line) | Chemcassette Part Number |
|--|---------|----------|---------------------|-----------------------|-----------------------|------------|---|----------------------------------|--|--------------------------|
| Chlorine (Cl ₂) | 0.5 ppm | 0.05 ppm | 0.04 ppm | 0.5 ppm | 1 ppm | 0-5 ppm | 0.05-0.24 ppm 0.25-0.49 ppm 0.5-5 ppm | 45 30 15 | <25 sec | 1295-0220 |
| Chlorine XP (Cl ₂) | 0.5 ppm | 0.05 ppm | 0.05 ppm | 0.5 ppm | 1 ppm | 0-5 ppm | 0.05-0.24 ppm 0.25-5.0 ppm | 45 30 | <20 sec | 1295-0227 |
| Chlorine XP4 (Cl ₂) | 0.5 ppm | 0.05 ppm | 0.05 ppm | 0.5 ppm | 1 ppm | 0-5 ppm | 0.05-0.24 ppm 0.25-5.0 ppm | 45 30 | <20sec | 1257-9308 |
| Chlorine XP4 (Cl ₂) Low Level | 500 ppb | 30 ppb | 7 ppb | 250 ppb | 500 ppb | 0-2000 ppb | 30-199 ppb 200-499 ppb 500-2000 ppb | 120 90 60 | <30 sec | 1257-9308 |
| Chlorine XP (Cl ₂) Low Level | 500 ppb | 30 ppb | 7 ppb | 250 ppb | 500 ppb | 0-2000 ppb | 30-199 ppb 200-499 ppb 500-2000 ppb | 120 90 60 | <30 sec | 1295-0227 |
| Chlorine Dioxide (ClO ₂) | 100 ppb | 50 ppb | 50 ppb ² | 100 ppb | 200 ppb | 0-1000 ppb | 50-99 ppb 100-199 ppb 200-399 ppb 400-1000 ppb | 300 240 120 60 | <70 sec | 1295-0220 |
| Diborane (B ₂ H ₆) | 100 ppb | 20 ppb | 15 ppb | 100 ppb | 200 ppb | 0-1000 ppb | 20-99 ppb 100-199 ppb 200-299 ppb 300-1000 ppb | 60 45 30 15 | <40 sec | 1295-0300 |
| Diborane XP (B ₂ H ₆) | 100 ppb | 15 ppb | 10 ppb | 100 ppb | 200 ppb | 0-1000 ppb | 15-49 ppb 50-99 ppb 100-1000 ppb | 60 45 30 | <40 sec | 1295-0226 |

TLV - Threshold Limit Value LAL - Lowest Alarm Level LDL - Lower Detectable Limit
1. "-1" calibrations allow more stain development but will extend response times
2. Minimum Sample Time

Vertex™ 72-Point Continuous Monitor

| Gas Name ¹ | TLV | LAL | LDL | Default Alarm Level 1 | Default Alarm Level 2 | Range | Alarm Setting | Initial Analysis Period (second) | Time to 1 TLV (Alarm @ 2 TLV Concentration 10-ft. Sample Line) | Chemcassette Part Number |
|--|---------|---------|----------|-----------------------|-----------------------|------------|---|----------------------------------|--|--------------------------|
| Diborane XP4 (B ₂ H ₆) | 100 ppb | 15 ppb | 10 ppb | 100 ppb | 200 ppb | 0-1000 ppb | 15-49 ppb 50-99 ppb 100-1000 ppb | 60 45 30 | <40 sec | 1257-9300 |
| Dimethylamine (DMA) | 5 ppm | 0.4 ppm | 0.3 ppm | 5 ppm | 10 ppm | 0-30 ppm | 0.4-2.4 ppm 2.5-4.9 ppm 5-30 ppm | 120 60 30 | <40 sec | 1295-0221 |
| Dimethylamine XP (DMA) | 5.0 ppm | 0.5 ppm | 0.5 ppm | 5.0 ppm | 10.0 ppm | 0-50.0 ppm | 0.5-2.4 ppm 2.5-50.0 ppm | 15 10 | <20 sec | 1295-0405 |
| Dimethylamine XP4 (DMA) | 5 ppm | 0.5 ppm | 0.5 ppm | 5.0 ppm | 10.0 ppm | 0-50.0 ppm | 0.5-2.4 ppm 2.5-50 ppm | 15 10 | <20 sec | 1257-9309 |
| Fluorine (F ₂) | 1 ppm | 0.1 ppm | 0.06 ppm | 1 ppm | 2 ppm | 0-10 ppm | 0.1-0.9 ppm 1-10 ppm | 60 30 | <40 sec | 1295-0220 |
| Germane XP (GeH ₄) | 200 ppb | 100 ppb | 100 ppb | 200 ppb | 400 ppb | 0-2000 ppb | 100-149 ppb 150-199 ppb 200-2000 ppb | 480 360 240 | <252 sec | 1295-0226 |
| Germane XP4 (GeH ₄) | 200 ppb | 100 ppb | 100 ppb | 200 ppb | 400 ppb | 0-2000 ppb | 100-149 ppb 150-199 ppb 200-2000 ppb | 480 360 240 | <252 sec | 1257-9300 |
| Hydrogen Bromide (HBr) | 2 ppm | 0.5 ppm | 0.3 ppm | 2 ppm | 4 ppm | 0-30 ppm | 0.5-2.9 ppm 3-5.9 ppm 6-8.9 ppm 9-30 ppm | 45 30 15 10 | <35 sec | 1295-0225 |
| TLV - Threshold Limit Value LAL - Lowest Alarm Level LDL - Lower Detectable Limit 1. "-1" calibrations allow more stain development but will extend response times 2. Minimum Sample Time | | | | | | | | | | |

Vertex™ 72-Point Continuous Monitor

| Gas Name ¹ | TLV | LAL | LDL | Default Alarm Level 1 | Default Alarm Level 2 | Range | Alarm Setting | Initial Analysis Period (second) | Time to 1 TLV (Alarm @ 2 TLV Concentration 10-ft. Sample Line) | Chemcassette Part Number |
|--|-------|---------|---------|-----------------------|-----------------------|------------|--|----------------------------------|--|--------------------------|
| Hydrogen Bromide (HBr) Low Level | 2 ppm | 100 ppb | 50 ppb | 250 ppb | 500 ppb | 0-2000 ppb | 100-249 ppb 250-499 ppb 500-749 ppm 750-2000 ppb | 240 120 60 30 | <40 sec | 1295-0225 |
| Hydrogen Bromide XP (HBr) | 2 ppm | 0.3 ppm | 0.2 ppm | 2 ppm | 4 ppm | 0-20 ppm | 0.3-1.9 ppm 2-20 ppm | 45 30 | <35 sec | 1295-0507 |
| Hydrogen Bromide XP4 (HBr) | 2 ppm | 0.3 ppm | 0.2 ppm | 2 ppm | 4 ppm | 0-20 ppm | 0.3-1.9 ppm 2-20 ppm | 45 30 | <35 sec | 1257-9310 |
| Hydrogen Bromide XP4 (HBr) Low Level | 2 ppm | 30 ppb | 20 ppb | 200 ppb | 400 ppb | 0-2000 ppb | 30-99 ppb 100-399 ppb 400-2000 ppb | 180 120 60 | <75 sec (Alarm @ 500 ppb with 1000 ppb HBr gas) | 1257-9310 |
| Hydrogen Bromide XP (HBr) Low Level | 2 ppm | 30 ppb | 20 ppb | 200 ppb | 400 ppb | 0-2000 ppb | 30-99 ppb 100-399 ppb 400-2000 ppb | 180 120 60 | <75 sec (Alarm @ 500 ppb with 1000 ppb HBr gas) | 1295-0507 |
| Hydrogen Chloride (HCl) | 2 ppm | 0.5 ppm | 0.5 ppm | 2 ppm | 4 ppm | 0-15 ppm | 0.5-9.9 ppm 10-19.9 ppm 20-50 ppm | 30 20 15 | <25 sec | 1295-0225 |
| Hydrogen Chloride (HCl) Low Level | 2 ppm | 100 ppb | 80 ppb | 250 ppb | 500 ppb | 0-8000 ppb | 100-499 ppb 500-999 ppb 1000-2999 ppb 3000-8000 ppb | 300 120 60 30 | <30 sec | 1295-0225 |
| TLV - Threshold Limit Value LAL - Lowest Alarm Level LDL - Lower Detectable Limit 1. "-1" calibrations allow more stain development but will extend response times 2. Minimum Sample Time | | | | | | | | | | |

Vertex™ 72-Point Continuous Monitor

| Gas Name ¹ | TLV | LAL | LDL | Default Alarm Level 1 | Default Alarm Level 2 | Range | Alarm Setting | Initial Analysis Period (second) | Time to 1 TLV (Alarm @ 2 TLV Concentration 10-ft. Sample Line) | Chemcassette Part Number |
|--|---------|---------|---------|-----------------------|-----------------------|------------|---|----------------------------------|--|--------------------------|
| Hydrogen Chloride XP (HCl) | 2 ppm | 0.2 ppm | 0.2 ppm | 2 ppm | 4 ppm | 0-20 ppm | 0.2-0.9 ppm 1-3.9 ppm 4-20 ppm | 60 30 20 | <25 sec | 1295-0507 |
| Hydrogen Chloride XP4 (HCl) | 2 ppm | 0.2 ppm | 0.2 ppm | 2 ppm | 4 ppm | 0-20 ppm | 0.2-0.9 ppm 1-3.9 ppm 4-20 ppm | 60 30 20 | <25 sec | 1257-9310 |
| Hydrogen Chloride XP4 (HCl) Low Level | 2 ppm | 30 ppb | 20 ppb | 200 ppb | 400 ppb | 0-2000 ppb | 30-199 ppb 200-399 ppb 400-2000 ppb | 240 150 90 | <95 sec (Alarm @ 200 ppb with 400 ppb HCl gas) | 1257-9310 |
| Hydrogen Chloride XP (HCl) Low Level | 2 ppm | 30 ppb | 20 ppb | 200 ppb | 400 ppb | 0-2000 ppb | 30-199 ppb 200-399 ppb 400-2000 ppb | 240 150 90 | <95 sec (Alarm @ 200 ppb with 400 ppb HCl gas) | 1295-0507 |
| Hydrogen Cyanide (HCN) | 4.7 ppm | 1 ppm | 0.5 ppm | 4.7 ppm | 9.4 ppm | 0-30 ppm | 1-9.9 ppm 10-19.9 ppm 20-30 ppm | 30 20 15 | <25 sec | 1295-0222 |
| Hydrogen Fluoride (HF) | 2 ppm | 0.4 ppm | 0.4 ppm | 2 ppm | 4 ppm | 0-30 ppm | 0.4-2.9 ppm 3-5.9 ppm 6-11.9 ppm 12-30 ppm | 120 60 30 15 | <45 sec | 1295-0225 |
| Hydrogen Fluoride XP (HF) | 2 ppm | 0.4 ppm | 0.4 ppm | 2 ppm | 4 ppm | 0-20 ppm | 0.4-0.9 ppm 1-3.9 ppm 4-20 ppm | 240 90 60 | <50 sec | 1295-0507 |
| TLV - Threshold Limit Value LAL - Lowest Alarm Level LDL - Lower Detectable Limit 1. "-1" calibrations allow more stain development but will extend response times 2. Minimum Sample Time | | | | | | | | | | |

Vertex™ 72-Point Continuous Monitor

| Gas Name ¹ | TLV | LAL | LDL | Default Alarm Level 1 | Default Alarm Level 2 | Range | Alarm Setting | Initial Analysis Period (second) | Time to 1 TLV (Alarm @ 2 TLV Concentration 10-ft. Sample Line) | Chemcassette Part Number |
|--|---------------------|---------|---------|-----------------------|-----------------------|-------------|---|----------------------------------|--|--------------------------|
| Hydrogen Fluoride XP4 (HF) | 2 ppm | 0.4 ppm | 0.4 ppm | 2 ppm | 4 ppm | 0-20 ppm | 0.4-0.9 ppm 1-3.9 ppm 4-20 ppm | 240 90 60 | <50 sec | 1257-9310 |
| Hydrogen Fluoride XP (HF) Low Level | 500 ppb (ACGIH-TWA) | 30 ppb | 20 ppb | 500 ppb | 1000 ppb | 0-2000 ppb* | 30-99 ppb 100-199 ppb 200-399 ppb 400-2000 ppb | 360 240 120 90 | <95 sec | 1295-0507 |
| Hydrogen Fluoride XP4 (HF) Low Level | 500 ppb (ACGIH-TWA) | 30 ppb | 20 ppb | 500 ppb | 1000 ppb | 0-2000 ppb* | 30-99 ppb 100-199 ppb 200-399 ppb 400-2000 ppb | 360 240 120 90 | <95 sec | 1257-9310 |
| *Due to U.S. Government regulations, this range may be subject to restrictions requiring special licensing for certain countries outside North America. Contact Honeywell Analytics for eligibility information. | | | | | | | | | | |
| Hydrogen Iodide (HI) | None Est. | 0.2 ppm | 0.1 ppm | 3 ppm | 6 ppm | 0-25 ppm | 0.2-1.4 ppm 1.5-25 ppm | 240 60 | <30 sec | 1295-0225 |
| Hydrogen Selenide (H ₂ Se) | 50 ppb | 8 ppb | 6 ppb | 50 ppb | 100 ppb | 0-500 ppb | 8-49 ppb 50-99 ppb 100-500 ppb | 180 120 60 | <55 sec | 1295-0300 |
| Hydrogen Selenide XP (H ₂ Se) | 50 ppb | 8 ppb | 6 ppb | 50 ppb | 100 ppb | 0-500 ppb | 8-49 ppb 50-99 ppb 100-500 ppb | 180 120 60 | <45 sec | 1295-0226 |
| Hydrogen Selenide XP4 (H ₂ Se) | 50 ppb | 8 ppb | 6 ppb | 50 ppb | 100 ppb | 0-500 ppb | 8-49 ppb 50-99 ppb 100-500 ppb | 180 120 60 | <45 sec | 1257-9300 |
| TLV - Threshold Limit Value LAL - Lowest Alarm Level LDL - Lower Detectable Limit 1. "-1" calibrations allow more stain development but will extend response times 2. Minimum Sample Time | | | | | | | | | | |

Vertex™ 72-Point Continuous Monitor

| Gas Name ¹ | TLV | LAL | LDL | Default Alarm Level 1 | Default Alarm Level 2 | Range | Alarm Setting | Initial Analysis Period (second) | Time to 1 TLV (Alarm @ 2 TLV Concentration 10-ft. Sample Line) | Chemcassette Part Number |
|---|-------|--------|---------|-----------------------|-----------------------|------------|--|----------------------------------|--|--------------------------|
| Hydrogen Sulfide (H ₂ S) | 1 ppm | 1 ppm | 0.5 ppm | 10 ppm | 20 ppm | 0-100 ppm | 1-9.9 ppm 10-19.9 ppm 20-39.9 ppm 40-100 ppm | 30 15 10 10 | <20 sec (Alarm @ 10 ppm with 20 ppm H ₂ S gas) | 1295-0223 |
| Hydrogen Sulfide (H ₂ S) (Hydrides) | 1 ppm | 2 ppm | 1 ppm | 10 ppm | 20 ppm | 0-50 ppm | 2-9.9 ppm 10-19.9 ppm 20-39.9 ppm 40-50 ppm | 60 45 30 15 | <20 sec (Alarm @ 10 ppm with 20 ppm H ₂ S gas) | 1295-0300 |
| Hydrogen Sulfide (H ₂ S) Low Level | 1 ppm | 10 ppb | 8 ppb | 250 ppb | 500 ppb | 0-2000 ppb | 10-99 ppb 100-499 ppb 500-999 ppb 1000-2000 ppb | 480 240 120 60 | <40 sec (Alarm @ 500 ppb with 1 ppm H ₂ S gas) | 1295-0223 |
| Hydrogen Sulfide XP (H ₂ S) | 1 ppm | 1 ppm | 0.5 ppm | 10 ppm | 20 ppm | 0-50 ppm | 1-4.9 ppm 5-9.9 ppm 10-50 ppm | 30 15 10 | <20 sec (Alarm @ 10 ppm w/ 20 ppm H ₂ S gas) | 1295-0226 |
| Hydrogen Sulfide XP4 (H ₂ S) | 1 ppm | 1 ppm | 0.5 ppm | 10 ppm | 20 ppm | 0-50 ppm | 1-4.9 ppm 5-9.9 ppm 10-50 ppm | 30 15 10 | <20 sec (Alarm @ 10 ppm with 20 ppm H ₂ S gas) | 1257-9300 |
| Hydrogen Sulfide XP (H ₂ S) Low Level | 1 ppm | 20 ppb | 15 ppb | 500 ppb | 1000 ppb | 0-2000 ppb | 20-99 ppb 100-199 ppb 200-399 ppb 400-2000 ppb | 120 60 30 15 | <25sec (Alarm @ 500 ppb with 1000 ppb H ₂ S gas) | 1295-0226 |
| Hydrogen Sulfide XP4 (H ₂ S) Low Level | 1 ppm | 20 ppb | 15 ppb | 500 ppb | 1000 ppb | 0-2000 ppb | 20-99 ppb 100-199 ppb 200-399 ppb 400-2000 ppb | 120 60 30 15 | <15sec (Alarm @ 500 ppb with 1000 ppb H ₂ S gas) | 1257-9300 |

TLV - Threshold Limit Value LAL - Lowest Alarm Level LDL - Lower Detectable Limit

1. "-1" calibrations allow more stain development but will extend response times

2. Minimum Sample Time

Vertex™ 72-Point Continuous Monitor

| Gas Name ¹ | TLV | LAL | LDL | Default Alarm Level 1 | Default Alarm Level 2 | Range | Alarm Setting | Initial Analysis Period (second) | Time to 1 TLV (Alarm @ 2 TLV Concentration 10-ft. Sample Line) | Chemcassette Part Number |
|--|---------|---------|---------|-----------------------|-----------------------|------------|---|----------------------------------|--|--------------------------|
| Nitrogen Dioxide (NO ₂) | 3 ppm | 0.5 ppm | 0.3 ppm | 3 ppm | 6 ppm | 0-30 ppm | 0.5-8.9 ppm 9-30 ppm | 240 120 | <130 sec | 1295-0220 |
| Nitrogen Trifluoride (NF ₃) Pyrolyzer Only | 10 ppm | 1 ppm | 1 ppm | 10ppm | 20 ppm | 0-50 ppm | 1-9.9 ppm 10-19.9 ppm 20-39.9 ppm 40-50 ppm | 40 20 10 10 | <70 sec | 1295-0225 |
| Nitrogen Trifluoride XP (NF ₃) Pyrolyzer Only | 10 ppm | 1 ppm | 1 ppm | 10 ppm | 20 ppm | 0-50 ppm | 1-9.9 ppm 10-19.9 ppm 20-39.9 ppm 40-50 ppm | 30 15 10 10 | <20 sec | 1295-0507 |
| Nitrogen Trifluoride XP4 (NF ₃) Pyrolyzer Only | 10 ppm | 1 ppm | 1 ppm | 10 ppm | 20 ppm | 0-50 ppm | 1-9.9 ppm 10-19.9 ppm 20-39.9 ppm 40-50 ppm | 30 15 10 10 | <20 sec | 1257-9310 |
| Phosgene XP (COCl ₂) | 100 ppb | 10 ppb | 7 ppb | 100 ppb | 200 ppb | 0-1000 ppb | 10-49 ppb 50-99 ppb 100-199 ppb 200-1000 ppb | 60 45 30 15 | <25 sec | 1295-0228 |
| Phosgene XP (COCl ₂) High Range | 100 ppb | 10 ppb | 7 ppb | 100 ppb | 200 ppb | 0-4000 ppb | 10-49 ppb 50-99 ppb 100-199 ppb 200-4000 ppb | 60 45 30 15 | <25 sec | 1295-0228 |
| Phosgene XP4 (COCl ₂) | 100 ppb | 10 ppb | 7 ppb | 100 ppb | 200 ppb | 0-1000 ppb | 10-49 ppb 50-99 ppb 100-199 ppb 200-1000 ppb | 60 45 30 15 | <25 sec | 1257-9307 |
| TLV - Threshold Limit Value LAL - Lowest Alarm Level LDL - Lower Detectable Limit 1. "-1" calibrations allow more stain development but will extend response times 2. Minimum Sample Time | | | | | | | | | | |

Vertex™ 72-Point Continuous Monitor

| Gas Name ¹ | TLV | LAL | LDL | Default Alarm Level 1 | Default Alarm Level 2 | Range | Alarm Setting | Initial Analysis Period (second) | Time to 1 TLV (Alarm @ 2 TLV Concentration 10-ft. Sample Line) | Chemcassette Part Number |
|--|---------|----------|----------|-----------------------|-----------------------|-------------|--|----------------------------------|--|--------------------------|
| Phosgene XP4 (COCl ₂) High Range | 100 ppb | 10 ppb | 7 ppb | 100 ppb | 200 ppb | 0-4000 ppb | 10-49 ppb 50-99 ppb 100-199 ppb 200-4000 ppb | 60 45 30 15 | <25 sec | 1257-9307 |
| Phosphine (PH ₃) | 300 ppb | 5 ppb | 5 ppb | 300 ppb | 600 ppb | 0-3000 ppb | 5-3000 ppb | 15 | <20 sec | 1295-0300 |
| Phosphine XP (PH ₃) | 300 ppb | 5 ppb | 5 ppb | 300 ppb | 600 ppb | 0-3000 ppb | 5-3000 ppb | 15 | <20 sec | 1295-0226 |
| Phosphine XP4 (PH ₃) | 300 ppb | 5 ppb | 5 ppb | 300 ppb | 600 ppb | 0-3000 ppb | 5-3000 ppb | 15 | <20 sec | 1257-9300 |
| Silane (SiH ₄) | 5 ppm | 1 ppm | 0.5 ppm | 5 ppm | 10 ppm | 0-50 ppm | 1-4.9 ppm 5-9.9 ppm 10-19.9 ppm 20-50 ppm | 60 45 30 15 | <35 sec | 1295-0300 |
| Silane-M XP (SiH ₄ -M) | 5 ppm | 0.06 ppm | 0.05 ppm | 2.5 ppm | 5.0 ppm | 0.05-15 ppm | 0.05-2.49 ppm 2.5-4.99 ppm 5-9.99 ppm 10-15 ppm | 180 60 45 30 | <20 sec | 1295-0226 |
| Silane-M XP4 (SiH ₄ -M) | 5 ppm | 0.06 ppm | 0.05 ppm | 2.5 ppm | 5.0 ppm | 0.05-15 ppm | 0.05-2.49 ppm 2.5-4.99 ppm 5-9.99 ppm 10-15 ppm | 180 60 45 30 | <20 sec | 1257-9300 |

TLV - Threshold Limit Value LAL - Lowest Alarm Level LDL - Lower Detectable Limit
1. "-1" calibrations allow more stain development but will extend response times
2. Minimum Sample Time

Vertex™ 72-Point Continuous Monitor

| Gas Name ¹ | TLV | LAL | LDL | Default Alarm Level 1 | Default Alarm Level 2 | Range | Alarm Setting | Initial Analysis Period (second) | Time to 1 TLV (Alarm @ 2 TLV Concentration 10-ft. Sample Line) | Chemcassette Part Number |
|--|------------------------------------|---------|---------|-----------------------|-----------------------|------------|---|----------------------------------|--|--------------------------|
| Silane XP (SiH ₄) | 5 ppm | 0.5 ppm | 0.3 ppm | 5 ppm | 10 ppm | 0-50 ppm | 0.5-4.9 ppm 5-9.9 ppm 10-19.9 ppm 20-50 ppm | 60 45 30 15 | <30 sec | 1295-0226 |
| Silane XP (SiH ₄) Low Level | 5 ppm | 50 ppb | 50 ppb | 250 ppb | 500 ppb | 0-5000 ppb | 50-249 ppb 250-499 ppb 500-999 ppb 1000-5000 ppb | 360 240 120 60 | <100 sec (Alarm @ 500 ppb with 1 ppm SiH ₄ gas) | 1295-0226 |
| Silane XP4 (SiH ₄) | 5 ppm | 0.5ppm | 0.3 ppm | 5 ppm | 10 ppm | 0-50 ppm | 0.5-4.9 ppm 5-9.9 ppm 10-19.9 ppm 20-50 ppm | 60 45 30 15 | <30 sec | 1257-9300 |
| Silane XP4 (SiH ₄) Low Level | 5 ppm | 50 ppb | 50 ppb | 250 ppb | 500 ppb | 0-5000 ppb | 50-249 ppb 250-499 ppb 500-999 ppb 1000-5000 ppb | 360 240 120 60 | <100 sec (Alarm @500 ppb with 1000 ppb SiH ₄ gas) | 1257-9300 |
| Sulfur Dioxide (SO ₂) | 250 ppb | 30 ppb | 25 ppb | 250 ppb | 500 ppb | 0-2500 ppb | 30-249 ppb 250-2500 ppb | 60 30 | <30 sec | 1295-0552 |
| Tertiary Butyl Arsine (TBA) | 0.5 mg/m ³ as As (OSHA) | 15 ppb | 12 ppb | 50 ppb | 100 ppb | 0-500 ppb | 15-49 ppb 50-99 ppb 100-199 ppb 200-500 ppb | 120 60 30 15 | <42 sec | 1295-0300 |
| Tertiary Butyl Arsine XP (TBA) | 0.5 mg/m ³ as As (OSHA) | 15 ppb | 12 ppb | 50 ppb | 100 ppb | 0-500 ppb | 15-24 ppb 25-49 ppb 50-99 ppb 100-500 ppb | 120 60 30 15 | <45 sec (Alarm @ 50 ppb with 100 ppb TBA gas) | 1295-0226 |
| Tertiary Butyl Arsine XP4 (TBA) | 0.5 mg/m ³ as As (OSHA) | 15 ppb | 12 ppb | 50 ppb | 100 ppb | 0-500 ppb | 15-24 ppb 25-49 ppb 50-99 ppb 100-500 ppb | 120 60 30 15 | <45 sec (Alarm @ 50 ppb with 100 ppb TBA gas) | 1257-9300 |

TLV - Threshold Limit Value LAL - Lowest Alarm Level LDL - Lower Detectable Limit

1. "-1" calibrations allow more stain development but will extend response times

2. Minimum Sample Time


Vertex™ 72-Point Continuous Monitor

| Gas Name ¹ | TLV | LAL | LDL | Default Alarm Level 1 | Default Alarm Level 2 | Range | Alarm Setting | Initial Analysis Period (second) | Time to 1 TLV (Alarm @ 2 TLV Concentration 10-ft. Sample Line) | Chemcassette Part Number |
|--|-----------|---------|---------|-----------------------|-----------------------|------------|--|----------------------------------|--|--------------------------|
| Tertiary Butyl Phosphine XP (TBP) | None Est | 80 ppb | 75 ppb | 300 ppb | 600 ppb | 0-2000 ppb | 80-149 ppb 150-299 ppb 300-599 ppb 600-2000 ppb | 240 120 60 30 | <70 sec (Alarm @300 ppb with 600 ppb TBP gas) | 1295-0226 |
| Tertiary Butyl Phosphine XP4 (TBP) | None Est. | 80 ppb | 75 ppb | 300 ppb | 600 ppb | 0-2000 ppb | 80-149 ppb 150-299 ppb 300-599 ppb 600-2000 ppb | 240 120 60 30 | <70 sec (Alarm @ 300 ppb with 600 ppb TBP gas) | 1257-9300 |
| Tetrakis Dimethylamino Titanium XP (TDMAT) | None Est. | 0.1 ppm | 0.1 ppm | 1.0 ppm | 2.0 ppm | 0-10.0 ppm | 0.1-0.4 ppm 0.5-10.0 ppm | 15 10 | <20 sec | 1295-0405 |
| Tetrakis Dimethylamino Titanium XP4 (TDMAT) | Not Est. | 0.1 ppm | 0.1 ppm | 1.0 ppm | 2.0 ppm | 0-10.0 ppm | 0.1-0.4 ppm 0.5-10.0 ppm | 15 10 | <20 sec | 1257-9309 |
| TLV - Threshold Limit Value LAL - Lowest Alarm Level LDL - Lower Detectable Limit 1. "-1" calibrations allow more stain development but will extend response times 2. Minimum Sample Time | | | | | | | | | | |


D Replacement and Consumable Items

Vertex™ 72-Point Continuous Monitor


Consumables

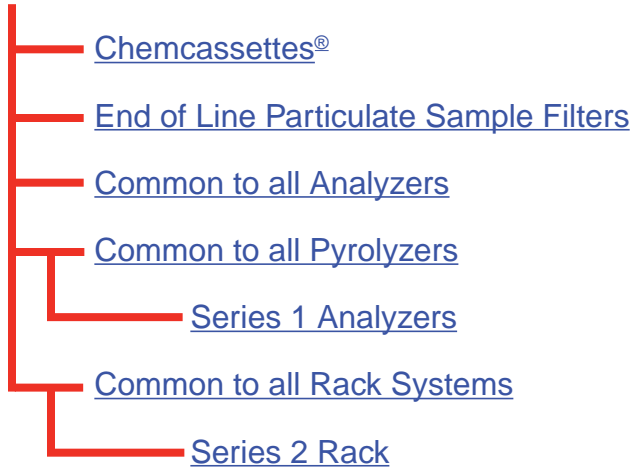

Printed Circuit Boards

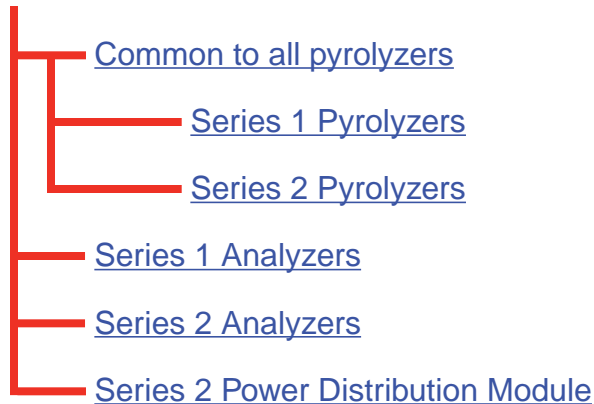

Components

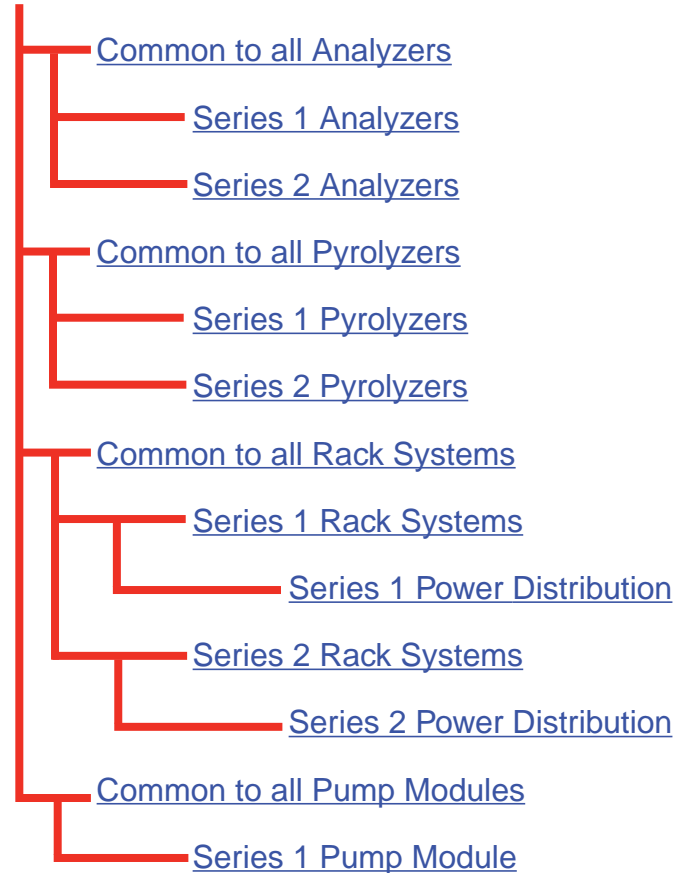

Vertex™ 72-Point Continuous Monitor

D.1 Consumables

D.1.1 Chemcassettes®

| | |
|--|------------------|
| <i>ALIPHATIC AMINES NH3</i> | <i>1295-0221</i> |
| <i>FLUORINE</i> | <i>1295-0220</i> |
| <i>HYDRIDES</i> | <i>1295-0300</i> |
| <i>HYDROGEN CYANIDE</i> | <i>1295-0222</i> |
| <i>HYDROGEN SULFIDE</i> | <i>1295-0223</i> |
| <i>MINERAL ACIDS</i> | <i>1295-0225</i> |
| <i>XP CHLORINE (Extended Play)</i> | <i>1295-0227</i> |
| <i>XP HYDRIDES (Extended Play)</i> | <i>1295-0226</i> |
| <i>XP PHOSGENE (Extended Play)</i> | <i>1295-0228</i> |
| <i>XP AMINES/AMMONIA (Extended Play)</i> | <i>1295-0405</i> |
| <i>XP MINERAL ACIDS (Extended Play)</i> | <i>1295-0507</i> |
| <i>XP4-V for AMINES/AMMONIA</i> | <i>1257-9309</i> |
| <i>XP4-V for CHLORINE</i> | <i>1257-9308</i> |
| <i>XP4-V for HYDRIDES</i> | <i>1257-9300</i> |
| <i>XP4-V for MINERAL ACIDS</i> | <i>1257-9310</i> |
| <i>XP4-V for PHOSGENE</i> | <i>1257-9307</i> |

D.1.2 End of Line Particulate Sample Filters - See [Appendix B](#)

| | |
|--|------------------|
| <i>For non-corrosive gases</i> | <i>780248</i> |
| <i>For corrosive gases</i> | <i>1830-0055</i> |
| <i>Replacement membrane, for corrosives (pk/100)</i> | <i>0235-1072</i> |
| <i>For corrosive gases</i> | <i>1991-0147</i> |

D.1.3 Common to all Analyzers (Series 1 or Series 2, Chemcassette® or Pyrolyzers)

| | |
|---|------------------|
| <i>Acid Scrubber Filter</i> | <i>710235</i> |
| <i>Particulate Filter</i> | <i>780248</i> |
| <i>Analyzer Internal Valve Filter Kit</i> | <i>1295K0366</i> |

D.1.4 Common to all Pyrolyzers (Series 1 or Series 2)

| | |
|------------------------------------|------------------|
| <i>Freon Filter (package of 4)</i> | <i>1874-0139</i> |
|------------------------------------|------------------|

D.1.4.1 Series 1 Analyzers (Chemcassette® or Pyrolyzer)

| | |
|---------------------------------|------------------|
| <i>Analyzer Fan Dust Filter</i> | <i>1295-0120</i> |
|---------------------------------|------------------|

Note: Only used on early Series One Analyzers

D.1.5 Common to all Rack Systems (Series 1 or Series 2)

| | |
|---|------------------|
| <i>Glass Fiber Filter (pump module)</i> | <i>0235-1186</i> |
|---|------------------|

D.1.5.1 Series 2 Rack

| | |
|--|---------------|
| <i>Filter (system vacuum) 2 required</i> | <i>780248</i> |
|--|---------------|

Vertex™ 72-Point Continuous Monitor

D.2 Printed Circuit Boards

D.2.1 Common to all Pyrolyzers

| | |
|-----------------------|------------------|
| <i>AC Line Filter</i> | <i>1874A0248</i> |
|-----------------------|------------------|

D.2.1.1 Series 1 Pyrolyzers

| | |
|-------------------------------|------------------|
| <i>Temperature Controller</i> | <i>1874A0203</i> |
|-------------------------------|------------------|

D.2.1.2 Series 2 Pyrolyzers

| | |
|-------------------------------|------------------|
| <i>Temperature Controller</i> | <i>1295A0466</i> |
|-------------------------------|------------------|

D.2.2 Series 1 Analyzers (Chemcassette® or Pyrolyzer)

| | |
|------------------------|------------------|
| <i>Solenoid Driver</i> | <i>1295A0246</i> |
|------------------------|------------------|

| | |
|---------------------------------|------------------|
| <i>RFID Modulator w/Antenna</i> | <i>0185-0092</i> |
|---------------------------------|------------------|

D.2.3 Series 2 Analyzers (Chemcassette® or Pyrolyzer)

| | |
|--------------------------|------------------|
| <i>RFID PCB Assembly</i> | <i>1295A0412</i> |
|--------------------------|------------------|

D.2.4 Series 2 Power Distribution Module

| | |
|----------------------|------------------|
| <i>Connector PCB</i> | <i>1295A0420</i> |
|----------------------|------------------|

| | |
|-------------------|------------------|
| <i>Switch PCB</i> | <i>1295A0422</i> |
|-------------------|------------------|

D.3 Components

D.3.1 Common to all Analyzers(Series 1 or Series 2, Chemcassette® or Pyrolyzer)

| | |
|---|------------------|
| <i>Proportional Valve</i> | <i>0235-1279</i> |
| <i>Closed Loop Optics Block Assembly (4 points)</i> | <i>1295A0607</i> |
| <i>Dual Optics Cover</i> | <i>1295-0218</i> |
| <i>Stepper Motor Assembly (tape advance)</i> | <i>1295A0095</i> |
| <i>Encoder Assembly</i> | <i>1295A0094</i> |
| <i>Encoder Brake Assembly</i> | <i>1295A0091</i> |
| <i>Chemcassette Sprocket</i> | <i>1874-0322</i> |
| <i>Tape Guide</i> | <i>1295-0026</i> |
| <i>Microtube Assembly (one point)</i> | <i>874272</i> |
| <i>2 Way N.C. Valve</i> | <i>874173</i> |
| <i>Aluminum Gate Actuator Kit</i> | <i>1874K0407</i> |
| <i>Gate Motor Assembly</i> | <i>1295A0096</i> |
| <i>0.015" Orifice Kit (8 pieces)</i> | <i>1290K0009</i> |
| <i>24VDC Fan Assembly</i> | <i>1295A0239</i> |

D.3.1.1 Series 1 Analyzers (Chemcassette® or Pyrolyzer)

| | |
|-------------------------|------------------|
| <i>Ejector Solenoid</i> | <i>0235-1182</i> |
|-------------------------|------------------|

D.3.1.2 Series 2 Analyzers (Chemcassette® or Pyrolyzer)

| | |
|-------------------------|------------------|
| <i>Ejector Solenoid</i> | <i>0100-2002</i> |
|-------------------------|------------------|

Vertex™ 72-Point Continuous Monitor

D.3.2 Common to all Pyrolyzers (Series 1 or Series 2)

| | |
|--|------------------|
| <i>Microtube Assembly (one point, for pyrolyzer Pts 1 - 4)</i> | <i>1295A0235</i> |
| <i>Microtube Assembly (one point, for pyrolyzer Pts 5 - 8)</i> | <i>1295A0236</i> |
| <i>Check Valve</i> | <i>0235-1157</i> |
| <i>Pyrolyzer Fan Assembly</i> | <i>1295A0238</i> |

D.3.2.1 Series 1 Pyrolyzers

| | |
|--|------------------|
| <i>Heater Kit (120 Volt, 2 required)</i> | <i>1874K0283</i> |
|--|------------------|

D.3.2.2 Series 2 Pyrolyzers

| | |
|--|------------------|
| <i>Heater Kit (230 Volt, 2 required)</i> | <i>1295K0485</i> |
|--|------------------|

D.3.3 Common to all Rack Systems (Series 1 or Series 2)

| | |
|--|---------------------|
| <i>0.250 x 0.190 x 1000ft FEP tubing</i> | <i>0235-0109</i> |
| <i>0.250 x 0.156 x 400ft FEP tubing</i> | <i>0235-0157</i> |
| <i>0.500 x 0.375 x 50ft</i> | |
| <i>Polyethylene tubing</i> | <i>102642</i> |
| <i>Fan, 230VAC</i> | <i>0220-0028</i> |
| <i>Ethernet Switch (may be different than the one installed in the unit)</i> | <i>0185-0086</i> |
| <i>LCD Display w/Touch Screen</i> | <i>Call Service</i> |
| <i>PLC Power Supply</i> | <i>0185-0048</i> |
| <i>PLC Processor Module</i> | <i>0185-0049</i> |
| <i>PLC 8 Position Relay Module (Isolated)</i> | <i>0185-0090</i> |
| <i>PLC 16 Position Relay Module (Non-Isolated)</i> | <i>0185-0053</i> |
| <i>DH485/RS232 Interface Module</i> | <i>0185-0050</i> |
| <i>DH485 Link Coupler</i> | <i>0185-0052</i> |
| <i>Advanced Interface Converter</i> | <i>0185-0051</i> |
| <i>All other PLC Cards</i> | <i>Call Service</i> |

D.3.3.1 Series 1 Rack Systems

| | |
|--|---------------------|
| <i>Sample Inlet 1/4" Tube Fitting</i> | <i>1295-0352</i> |
| <i>2U Computer System</i> | <i>Call Service</i> |
| <i>Hard Disk Drive</i> | <i>0185-0078</i> |
| <i>230VAC/110VAC Step Down Transformer</i> | <i>1295A0188</i> |

Vertex™ 72-Point Continuous Monitor

D.3.3.1.1 Series 1 Power Distribution / Power Supply Module

This covers both the power distribution and power supply modules

| | |
|---|------------------|
| <i>Power Distribution Module (complete)</i> | <i>1295A0137</i> |
| <i>Power Supply Module (complete)</i> | <i>1295A0214</i> |
| <i>20 Amp DPDT Switch / Breaker</i> | <i>0170-0029</i> |
| <i>15 Amp SPST Switch / Breaker</i> | <i>0170-0087</i> |
| <i>8 Amp SPST Switch / Breaker</i> | <i>0170-0061</i> |
| <i>4 Amp SPST Switch / Breaker</i> | <i>0170-0060</i> |
| <i>8 Amp Breaker, Push to Reset</i> | <i>0170-0053</i> |
| <i>6 Amp Breaker, Push to Reset</i> | <i>0170-0052</i> |
| <i>1 Amp Breaker, Push to Reset</i> | <i>0170-0051</i> |
| <i>Time Delay Relay</i> | <i>0100-0004</i> |
| <i>Solid State Relay</i> | <i>0100-0003</i> |
| <i>Hot Swappable 24VDC Power Supply</i> | <i>0185-0066</i> |

D.3.3.2 Series 2 Rack Systems

| | |
|---|---------------------|
| <i>Sample Inlet 1/4" Tube Fitting</i> | <i>1295-0427</i> |
| <i>2U i3 Computer System</i> | <i>Call Service</i> |
| <i>Replacement Hard Disk Drive (PATA)</i> | <i>0185-0098</i> |
| <i>Replacement Hard Disk Drive (SATA)</i> | <i>0185-0107</i> |

D.3.3.2.1 Series 2 Power Distribution Module

| | |
|---|------------------|
| <i>Power Distribution Module (complete)</i> | <i>1295A0413</i> |
| <i>Hot Swappable 24VDC Power Supply</i> | <i>0060-0020</i> |

D.3.4 Common to all Pump Modules (Series 1 or Series 2)

| | |
|------------------------------------|------------------|
| <i>Pump Assy, 220VAC High Flow</i> | <i>1295A0477</i> |
| <i>Pump Rebuild Kit</i> | <i>0235-1205</i> |
| <i>Pump Stem and O-Ring</i> | <i>0235-1212</i> |
| <i>Neoprene Isolation Mount</i> | <i>0950-1061</i> |
| <i>Thermal Switch (170F)</i> | <i>0170-0082</i> |
| <i>Fan, 24VDC</i> | <i>0220-0023</i> |

D.3.4.1 Series 1 Pump Module

| | |
|-------------------------------------|------------------|
| <i>Differential Pressure Switch</i> | <i>0050-0039</i> |
|-------------------------------------|------------------|

E Optional Relay Specifications

E.1 Relay Output Contacts

Relay output contacts: Via PLC, normally open (form A). Available in 88 and 176 contacts, both are user configurable. Factory default setting include A1 and A2 alarms per point as well as 9 general analyzer A1, 9 general analyzer A2, 9 analyzer fault/maintenance and 5 open.

Vertex™ 72-Point Continuous Monitor

E.2 Relay Contact Ratings

- 0.1 to 2.0 Amps
- 5-24 VDC or
- 5-120 VAC

The alarm relay has a minimum load requirement of greater than 5 volts and 10 mA. For reliable relay operation, ensure the alarm circuit meets these requirements.

Revision 10 (07/10)

| Maximum Volts | | Amperes ¹ | | Amperes Continuous ² | Volt-Amperes | |
|---|---------|----------------------|-------|---------------------------------|--------------|-------|
| | | Make | Break | | Make | Break |
| AC | 240 VAC | 7.5A | 0.75A | 25A | 1800VA | 180VA |
| | 120 VAC | 15A | 1.5A | | | |
| DC | 125 VDC | 0.22A3 | | 1.0A | 28VA | |
| | 24 VDC | 1.2A3 | | | | |
| AC | 240 VAC | 15A | 1.5A | 50A | 3600VA | 360VA |
| | 120 VAC | 30A | 3.0A | | | |
| DC | 125 VDC | 0.22A3 | | 1.0A | 28VA | |
| | 24 VDC | 1.2A3 | | | | |
| <p>(1) Connecting surge suppressors across your external load will extend the life of SLC 500 relay contacts. For recommended surge suppressor when switching AC inductive loads, consult the SLC 500 Modular Hardware Style Installation and Operation User Manual (Publication 1747-6.2) or the SLC 500 Fixed Hardware Style Installation and Operation User Manual (Publication 1747-6.2.1). Recommended surge suppression for switching 24 VDC inductive loads is a 1N4004 diode reverse wired across the load.</p> | | | | | | |
| <p>(2) The continuous current per module must be limited so the module power does not exceed 1440 VA.</p> | | | | | | |
| <p>(3) For DC voltage applications, the make/break ampere rating for relay contacts can be determined by dividing the 28 VA by the applied DC voltage. For example, 28 VA / 48 VDC = 0.58A. For DC voltage applications less than 14V, the make/break ratings for relay contacts cannot exceed 2A. RTB = Removable Terminal Block.</p> | | | | | | |

Table E-1: Relay Contact Ratings for 1746-OW16

For more information see Allen-Bradley publication 1746-2.35. This can be found at:

http://literature.rockwellautomation.com/idc/groups/literature/documents/td/1746-td006_-en-p.pdf

E.3 Default Relay Assignments

E.3.1 Introduction


By default, the Vertex reserves the first 14 contacts for faults. You may associate any remaining relay contacts with points in any analyzer. See [Section 3.7.3, Set Analyzer Window](#) for procedures to associate relay contacts with alarms.

The default settings for relay cards are in the following tables:

- [E-3 Default OW16 Faults](#)
- [E-4 Default OW16 General Alarms](#)
- [E-5 Default OW16 Point Alarms](#)
- [E-6 Default OX8 Faults](#)
- [E-7 Default OX8 General Alarms](#)
- [E-8 Default OX8 Point Alarms](#)


Vertex™ 72-Point Continuous Monitor

E.3.2 Main PLC

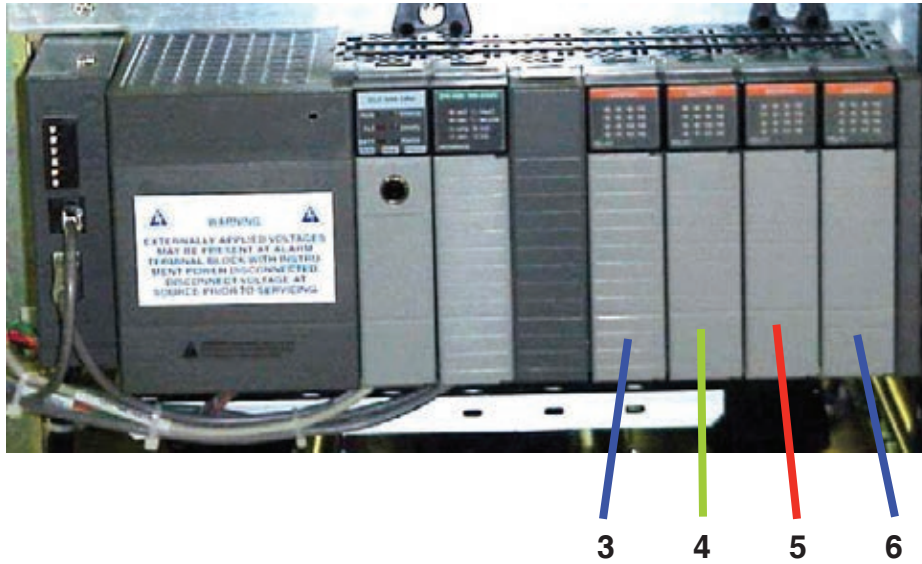


Vertex™ 72-Point Continuous Monitor

E.3.3 Optional Relay PLC

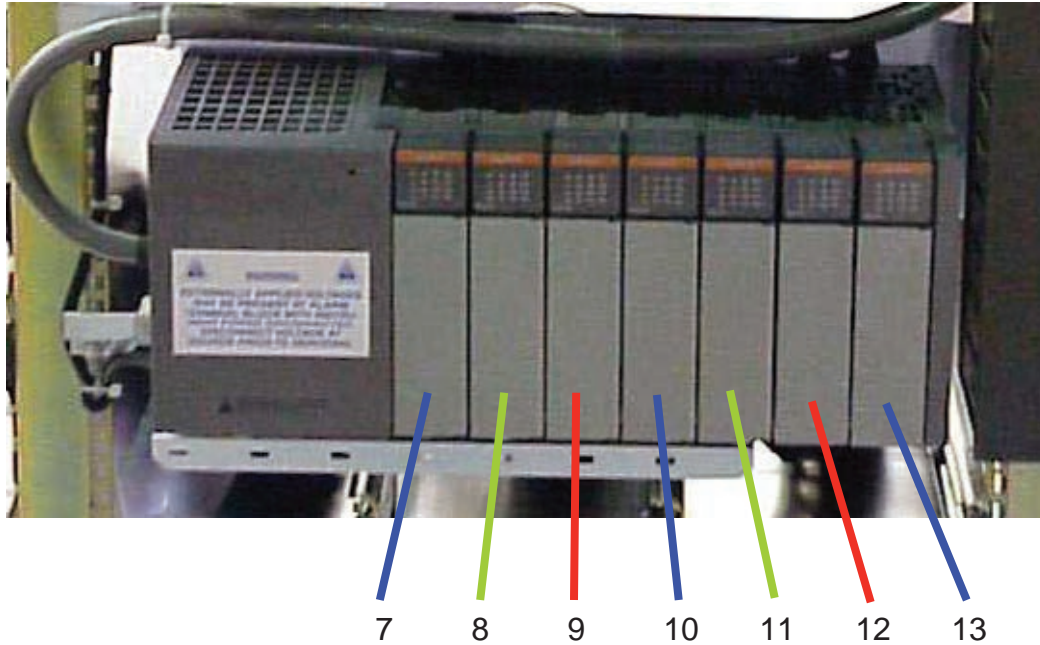

Vertex™ 72-Point Continuous Monitor

E.3.4 Terminal Assignment of 1746-OW16 Relay Module

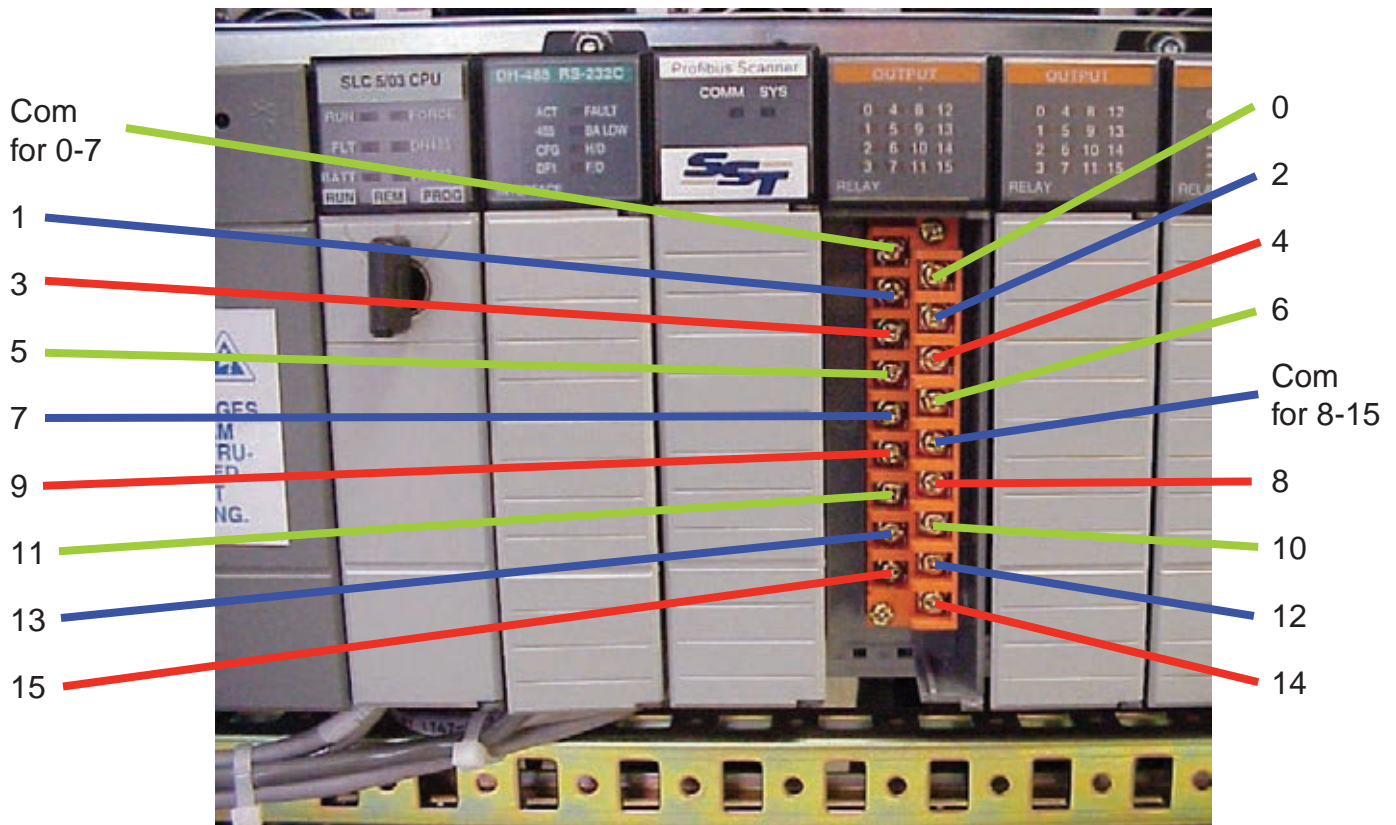

Vertex™ 72-Point Continuous Monitor

| Analyzer | Type of Alarm | Card | Contact |
|--------------|---------------|------|---------|
| Analyzer 1-1 | Fault | 3 | 0 |
| Analyzer 1-2 | Fault | 3 | 1 |
| Analyzer 1-3 | Fault | 3 | 2 |
| Analyzer 2-1 | Fault | 3 | 3 |
| Analyzer 2-2 | Fault | 3 | 4 |
| Analyzer 2-3 | Fault | 3 | 5 |
| Analyzer 3-1 | Fault | 3 | 6 |
| Analyzer 3-2 | Fault | 3 | 7 |
| Analyzer 3-3 | Fault | 3 | 8 |
| | Not assigned | 3 | 9 |
| | Not assigned | 3 | 10 |
| | Not assigned | 3 | 11 |
| | Not assigned | 3 | 12 |
| | Not assigned | 3 | 13 |
| | | | |

Table E-3: Default OW16 Faults

| Analyzer | Type of Alarm | Card | Contact |
|--------------|-----------------|------|---------|
| Analyzer 1-1 | General Level 1 | 3 | 14 |
| | General Level 2 | 3 | 15 |
| Analyzer 1-2 | General Level 1 | 4 | 0 |
| | General Level 2 | 4 | 1 |
| Analyzer 1-3 | General Level 1 | 4 | 2 |
| | General Level 2 | 4 | 3 |
| Analyzer 2-1 | General Level 1 | 4 | 4 |
| | General Level 2 | 4 | 5 |
| Analyzer 2-2 | General Level 1 | 4 | 6 |
| | General Level 2 | 4 | 7 |
| Analyzer 2-3 | General Level 1 | 4 | 8 |
| | General Level 2 | 4 | 9 |
| Analyzer 3-1 | General Level 1 | 4 | 10 |
| | General Level 2 | 4 | 11 |
| Analyzer 3-2 | General Level 1 | 4 | 12 |
| | General Level 2 | 4 | 13 |
| Analyzer 3-3 | General Level 1 | 4 | 14 |
| | General Level 2 | 4 | 15 |

Table E-4: Default OW16 General Alarms

Vertex™ 72-Point Continuous Monitor

| Analyzer | Point | Type of Alarm | Card | Contact |
|--------------|-------|---------------|------|---------|
| Analyzer 1-1 | 1 | Level 1 | 5 | 0 |
| | 1 | Level 2 | 5 | 1 |
| | 2 | Level 1 | 5 | 2 |
| | 2 | Level 2 | 5 | 3 |
| | 3 | Level 1 | 5 | 4 |
| | 3 | Level 2 | 5 | 5 |
| | 4 | Level 1 | 5 | 6 |
| | 4 | Level 2 | 5 | 7 |
| | 5 | Level 1 | 5 | 8 |
| | 5 | Level 2 | 5 | 9 |
| | 6 | Level 1 | 5 | 10 |
| | 6 | Level 2 | 5 | 11 |
| | 7 | Level 1 | 5 | 12 |
| | 7 | Level 2 | 5 | 13 |
| | 8 | Level 1 | 5 | 14 |
| | 8 | Level 2 | 5 | 15 |

Table E-5: Default OW16 Point Alarms

| Analyzer | Point | Type of Alarm | Card | Contact |
|--------------|-------|---------------|------|---------|
| Analyzer 1-2 | 1 | Level 1 | 6 | 0 |
| | 1 | Level 2 | 6 | 1 |
| | 2 | Level 1 | 6 | 2 |
| | 2 | Level 2 | 6 | 3 |
| | 3 | Level 1 | 6 | 4 |
| | 3 | Level 2 | 6 | 5 |
| | 4 | Level 1 | 6 | 6 |
| | 4 | Level 2 | 6 | 7 |
| | 5 | Level 1 | 6 | 8 |
| | 5 | Level 2 | 6 | 9 |
| | 6 | Level 1 | 6 | 10 |
| | 6 | Level 2 | 6 | 11 |
| | 7 | Level 1 | 6 | 12 |
| | 7 | Level 2 | 6 | 13 |
| | 8 | Level 1 | 6 | 14 |
| | 8 | Level 2 | 6 | 15 |

Table E-5: Default OW16 Point Alarms (cont'd)

Vertex™ 72-Point Continuous Monitor

| Analyzer | Point | Type of Alarm | Card | Contact |
|--------------|-------|---------------|------|---------|
| Analyzer 1-3 | 1 | Level 1 | 7 | 0 |
| | 1 | Level 2 | 7 | 1 |
| | 2 | Level 1 | 7 | 2 |
| | 2 | Level 2 | 7 | 3 |
| | 3 | Level 1 | 7 | 4 |
| | 3 | Level 2 | 7 | 5 |
| | 4 | Level 1 | 7 | 6 |
| | 4 | Level 2 | 7 | 7 |
| | 5 | Level 1 | 7 | 8 |
| | 5 | Level 2 | 7 | 9 |
| | 6 | Level 1 | 7 | 10 |
| | 6 | Level 2 | 7 | 11 |
| | 7 | Level 1 | 7 | 12 |
| | 7 | Level 2 | 7 | 13 |
| | 8 | Level 1 | 7 | 14 |
| | 8 | Level 2 | 7 | 15 |

Table E-5: Default OW16 Point Alarms (cont'd)

| Analyzer | Point | Type of Alarm | Card | Contact |
|--------------|-------|---------------|------|---------|
| Analyzer 2-1 | 1 | Level 1 | 8 | 0 |
| | 1 | Level 2 | 8 | 1 |
| | 2 | Level 1 | 8 | 2 |
| | 2 | Level 2 | 8 | 3 |
| | 3 | Level 1 | 8 | 4 |
| | 3 | Level 2 | 8 | 5 |
| | 4 | Level 1 | 8 | 6 |
| | 4 | Level 2 | 8 | 7 |
| | 5 | Level 1 | 8 | 8 |
| | 5 | Level 2 | 8 | 9 |
| | 6 | Level 1 | 8 | 10 |
| | 6 | Level 2 | 8 | 11 |
| | 7 | Level 1 | 8 | 12 |
| | 7 | Level 2 | 8 | 13 |
| | 8 | Level 1 | 8 | 14 |
| | 8 | Level 2 | 8 | 15 |

Table E-5: Default OW16 Point Alarms (cont'd)

Vertex™ 72-Point Continuous Monitor

| Analyzer | Point | Type of Alarm | Card | Contact |
|--------------|-------|---------------|------|---------|
| Analyzer 2-2 | 1 | Level 1 | 9 | 0 |
| | 1 | Level 2 | 9 | 1 |
| | 2 | Level 1 | 9 | 2 |
| | 2 | Level 2 | 9 | 3 |
| | 3 | Level 1 | 9 | 4 |
| | 3 | Level 2 | 9 | 5 |
| | 4 | Level 1 | 9 | 6 |
| | 4 | Level 2 | 9 | 7 |
| | 5 | Level 1 | 9 | 8 |
| | 5 | Level 2 | 9 | 9 |
| | 6 | Level 1 | 9 | 10 |
| | 6 | Level 2 | 9 | 11 |
| | 7 | Level 1 | 9 | 12 |
| | 7 | Level 2 | 9 | 13 |
| | 8 | Level 1 | 9 | 14 |
| | 8 | Level 2 | 9 | 15 |

Table E-5: Default OW16 Point Alarms (cont'd)

| Analyzer | Point | Type of Alarm | Card | Contact |
|--------------|-------|---------------|------|---------|
| Analyzer 2-3 | 1 | Level 1 | 10 | 0 |
| | 1 | Level 2 | 10 | 1 |
| | 2 | Level 1 | 10 | 2 |
| | 2 | Level 2 | 10 | 3 |
| | 3 | Level 1 | 10 | 4 |
| | 3 | Level 2 | 10 | 5 |
| | 4 | Level 1 | 10 | 6 |
| | 4 | Level 2 | 10 | 7 |
| | 5 | Level 1 | 10 | 8 |
| | 5 | Level 2 | 10 | 9 |
| | 6 | Level 1 | 10 | 10 |
| | 6 | Level 2 | 10 | 11 |
| | 7 | Level 1 | 10 | 12 |
| | 7 | Level 2 | 10 | 13 |
| | 8 | Level 1 | 10 | 14 |
| | 8 | Level 2 | 10 | 15 |

Table E-5: Default OW16 Point Alarms (cont'd)

Vertex™ 72-Point Continuous Monitor

| Analyzer | Point | Type of Alarm | Card | Contact |
|--------------|-------|---------------|------|---------|
| Analyzer 3-1 | 1 | Level 1 | 11 | 0 |
| | 1 | Level 2 | 11 | 1 |
| | 2 | Level 1 | 11 | 2 |
| | 2 | Level 2 | 11 | 3 |
| | 3 | Level 1 | 11 | 4 |
| | 3 | Level 2 | 11 | 5 |
| | 4 | Level 1 | 11 | 6 |
| | 4 | Level 2 | 11 | 7 |
| | 5 | Level 1 | 11 | 8 |
| | 5 | Level 2 | 11 | 9 |
| | 6 | Level 1 | 11 | 10 |
| | 6 | Level 2 | 11 | 11 |
| | 7 | Level 1 | 11 | 12 |
| | 7 | Level 2 | 11 | 13 |
| | 8 | Level 1 | 11 | 14 |
| | 8 | Level 2 | 11 | 15 |

Table E-5: Default OW16 Point Alarms (cont'd)

| Analyzer | Point | Type of Alarm | Card | Contact |
|--------------|-------|---------------|------|---------|
| Analyzer 3-2 | 1 | Level 1 | 12 | 0 |
| | 1 | Level 2 | 12 | 1 |
| | 2 | Level 1 | 12 | 2 |
| | 2 | Level 2 | 12 | 3 |
| | 3 | Level 1 | 12 | 4 |
| | 3 | Level 2 | 12 | 5 |
| | 4 | Level 1 | 12 | 6 |
| | 4 | Level 2 | 12 | 7 |
| | 5 | Level 1 | 12 | 8 |
| | 5 | Level 2 | 12 | 9 |
| | 6 | Level 1 | 12 | 10 |
| | 6 | Level 2 | 12 | 11 |
| | 7 | Level 1 | 12 | 12 |
| | 7 | Level 2 | 12 | 13 |
| | 8 | Level 1 | 12 | 14 |
| | 8 | Level 2 | 12 | 15 |

Table E-5: Default OW16 Point Alarms (cont'd)


Vertex™ 72-Point Continuous Monitor

| Analyzer | Point | Type of Alarm | Card | Contact |
|--------------|-------|---------------|------|---------|
| Analyzer 3-3 | 1 | Level 1 | 13 | 0 |
| | 1 | Level 2 | 13 | 1 |
| | 2 | Level 1 | 13 | 2 |
| | 2 | Level 2 | 13 | 3 |
| | 3 | Level 1 | 13 | 4 |
| | 3 | Level 2 | 13 | 5 |
| | 4 | Level 1 | 13 | 6 |
| | 4 | Level 2 | 13 | 7 |
| | 5 | Level 1 | 13 | 8 |
| | 5 | Level 2 | 13 | 9 |
| | 6 | Level 1 | 13 | 10 |
| | 6 | Level 2 | 13 | 11 |
| | 7 | Level 1 | 13 | 12 |
| | 7 | Level 2 | 13 | 13 |
| | 8 | Level 1 | 13 | 14 |
| | 8 | Level 2 | 13 | 15 |

Table E-5: Default OW16 Point Alarms (cont'd)

Vertex™ 72-Point Continuous Monitor

E.3.5 Terminal Assignment of 1746-OX8 Relay Module

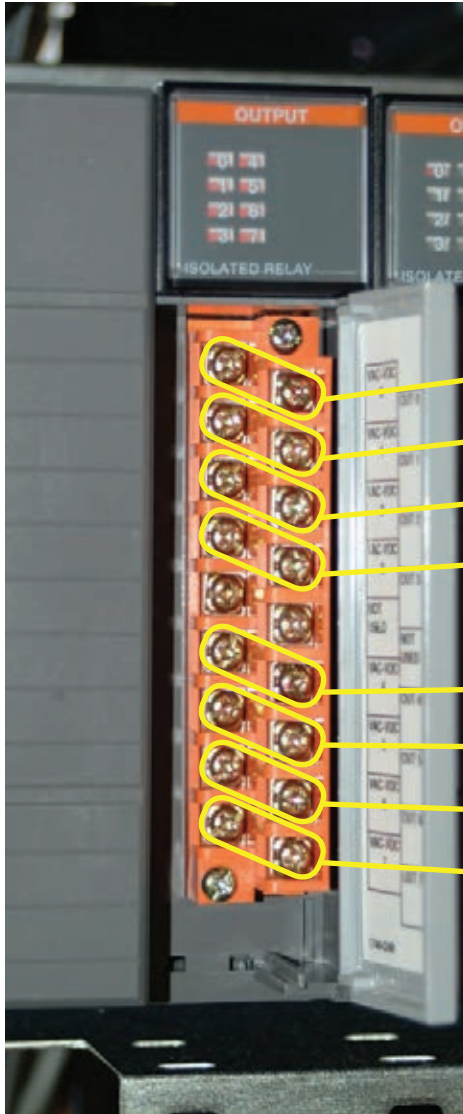

Part # 1290-0021

Note:

User is required to setup the relay configuration when OX8 relays are used. The default settings do not include complete alarm and fault settings for all nine analyzers or all 72 points.

- 0
- 1
- 2
- 3
- 4
- 5
- 6
- 7

Vertex™ 72-Point Continuous Monitor

| Analyzer | Type of Alarm | Card | Contact |
|--------------|---------------|------|---------|
| Analyzer 1-1 | Fault | 3 | 0 |
| Analyzer 1-2 | Fault | 3 | 1 |
| Analyzer 1-3 | Fault | 3 | 2 |
| Analyzer 2-1 | Fault | 3 | 3 |
| Analyzer 2-2 | Fault | 3 | 4 |
| Analyzer 2-3 | Fault | 3 | 5 |
| Analyzer 3-1 | Fault | 3 | 6 |
| Analyzer 3-2 | Fault | 3 | 7 |
| Analyzer 3-3 | Fault | 4 | 0 |
| | Not Assigned | 4 | 1 |
| | Not Assigned | 4 | 2 |
| | Not Assigned | 4 | 3 |
| | Not Assigned | 4 | 4 |
| | Not Assigned | 4 | 5 |
| | | | |

Table E-6: Default OX8 Faults

| Analyzer | Type of Alarm | Card | Contact |
|--------------|-----------------|------|---------|
| Analyzer 1-1 | General Level 1 | 4 | 6 |
| | General Level 2 | 4 | 7 |
| Analyzer 1-2 | General Level 1 | 5 | 0 |
| | General Level 2 | 5 | 1 |
| Analyzer 1-3 | General Level 1 | 5 | 2 |
| | General Level 2 | 5 | 3 |
| Analyzer 2-1 | General Level 1 | 5 | 4 |
| | General Level 2 | 5 | 5 |
| Analyzer 2-2 | General Level 1 | 5 | 6 |
| | General Level 2 | 5 | 7 |
| Analyzer 2-3 | General Level 1 | 6 | 0 |
| | General Level 2 | 6 | 1 |
| Analyzer 3-1 | General Level 1 | 6 | 2 |
| | General Level 2 | 6 | 3 |
| Analyzer 3-2 | General Level 1 | 6 | 4 |
| | General Level 2 | 6 | 5 |
| Analyzer 3-3 | General Level 1 | 6 | 6 |
| | General Level 2 | 6 | 7 |
| | | | |

Table E-7: Default OX8 General Alarms

Vertex™ 72-Point Continuous Monitor

| Analyzer | Point | Type of Alarm | Card | Contact |
|--------------|-------|---------------|------|---------|
| Analyzer 1-1 | 1 | Level 1 | 7 | 0 |
| | 1 | Level 2 | 7 | 1 |
| | 2 | Level 1 | 7 | 2 |
| | 2 | Level 2 | 7 | 3 |
| | 3 | Level 1 | 7 | 4 |
| | 3 | Level 2 | 7 | 5 |
| | 4 | Level 1 | 7 | 6 |
| | 4 | Level 2 | 7 | 7 |
| | 5 | Level 1 | 8 | 0 |
| | 5 | Level 2 | 8 | 1 |
| | 6 | Level 1 | 8 | 2 |
| | 6 | Level 2 | 8 | 3 |
| | 7 | Level 1 | 8 | 4 |
| | 7 | Level 2 | 8 | 5 |
| | 8 | Level 1 | 8 | 6 |
| | 8 | Level 2 | 8 | 7 |

Table E-8: Default OX8 Point Alarms

| Analyzer | Point | Type of Alarm | Card | Contact |
|--------------|-------|---------------|------|---------|
| Analyzer 1-2 | 1 | Level 1 | 9 | 0 |
| | 1 | Level 2 | 9 | 1 |
| | 2 | Level 1 | 9 | 2 |
| | 2 | Level 2 | 9 | 3 |
| | 3 | Level 1 | 9 | 4 |
| | 3 | Level 2 | 9 | 5 |
| | 4 | Level 1 | 9 | 6 |
| | 4 | Level 2 | 9 | 7 |
| | 5 | Level 1 | 10 | 0 |
| | 5 | Level 2 | 10 | 1 |
| | 6 | Level 1 | 10 | 2 |
| | 6 | Level 2 | 10 | 3 |
| | 7 | Level 1 | 10 | 4 |
| | 7 | Level 2 | 10 | 5 |
| | 8 | Level 1 | 10 | 6 |
| | 8 | Level 2 | 10 | 7 |

Table E-8: Default OX8 Point Alarms (cont'd)

Vertex™ 72-Point Continuous Monitor

| Analyzer | Point | Type of Alarm | Card | Contact |
|---------------------|-------|---------------|------|---------|
| Analyzer 1-3 | 1 | Level 1 | 11 | 0 |
| | 1 | Level 2 | 11 | 1 |
| | 2 | Level 1 | 11 | 2 |
| | 2 | Level 2 | 11 | 3 |
| | 3 | Level 1 | 11 | 4 |
| | 3 | Level 2 | 11 | 5 |
| | 4 | Level 1 | 11 | 6 |
| | 4 | Level 2 | 11 | 7 |
| | 5 | Level 1 | 12 | 0 |
| | 5 | Level 2 | 12 | 1 |
| | 6 | Level 1 | 12 | 2 |
| | 6 | Level 2 | 12 | 3 |
| | 7 | Level 1 | 12 | 4 |
| | 7 | Level 2 | 12 | 5 |
| | 8 | Level 1 | 12 | 6 |
| | 8 | Level 2 | 12 | 7 |

Table E-8: Default OX8 Point Alarms

| Analyzer | Point | Type of Alarm | Card | Contact |
|---------------------|-------|---------------|------|---------|
| Analyzer 2-1 | 1 | Level 1 | 13 | 0 |
| | 1 | Level 2 | 13 | 1 |
| | 2 | Level 1 | 13 | 2 |
| | 2 | Level 2 | 13 | 3 |
| | 3 | Level 1 | 13 | 4 |
| | 3 | Level 2 | 13 | 5 |
| | 4 | Level 1 | 13 | 6 |
| | 4 | Level 2 | 13 | 7 |

Table E-8: Default OX8 Point Alarms (cont'd)

F Network Interface and Options

Vertex™ 72-Point Continuous Monitor

F.1 Network Interface and Options

Network interface options currently available on Vertex are:

Standard:

- OLE for Process Control (OPC) Interface
(See [Section F.2, OLE for Process Control \(OPC\) Interface](#))

Options:

The Vertex can be fitted with any one of six optional fieldbus interfaces as summarized in Table F-1.

| Protocol Name | Honeywell Analytics part number | Section |
|---------------|---------------------------------|---------|
| Profibus - DP | 1295-0275 | F.5 |
| DeviceNet | 1295-0329 | F.6 |
| ControlNet | 1295-0394* | F.7 |
| DF1 | 1295-0343 | F.8 |
| ModBus Plus | 1295-0330 | F.9 |
| LonWorks | 1295-0328 | F.10 |
| Modbus/TCP | 1295-0520 | F.11 |
| Ethernet/CIP | 1295-0519 | F.12 |

* Part Number is obsolete

Table F-1: Vertex Fieldbus Options



CAUTION

Do not install routers between the optional PLC fieldbus networks and the internet. These networks are not designed to resist cyberattack so their cabling must have rigorous physical isolation from malicious traffic.

Optional Remote Display Software.

The Vertex can be ordered with any one of three remote display software options. Installation of this is discussed in section F.11.

Vertex™ 72-Point Continuous Monitor

F.2 OLE for Process Control (OPC) Interface

The Vertex monitor's primary method of alarm and fault annunciation relies on the Allen Bradley SLC500 PLC system installed in the base enclosure using optional fieldbusses or contact closure.

A secondary method for annunciation and data access is available via the Ethernet network port on the Vertex Data Acquisition System using OPC. Concentration data as well as alarm and fault status are available through this interface. The OPC drivers are automatically initialized at startup of the RSView32 application enabling the Vertex to act as an OPC Server. The user may connect to the Network interface Cards RJ45 Port at the rear of the data Acquisition System See [Section 1.2.10, Data Acquisition Computer \(rear\)](#).



CAUTION

System display and operator control is through an on-screen keyboard or an optional external keyboard. OPC via Ethernet is not recommended for the primary safety system notification.



CAUTION

Tunnel OPC communication outside the Vertex rack using secure software such as *KeypWare OPC Connectivity Suite* or *Matrikon OPC Tunneller*. OPC communication among Microsoft Windows computers is not highly resistant to cyberattack.

F.2.1 Setting Up an OPC Client Application

To request data from RSView32 your OPC Client application will need to include the following information. More information on OPC and client application is available at www.opcfoundation.org.

| | |
|--|--|
| Server | RSI.RSView32OPCTagServer |
| Type | Local |
| Server Computer Name or Address | Enter the Computer Name of the Vertex Data acquisition PC from Settings, Control Panel, System, Network Identification. Typically: Vertex_291-####, with the # being the 4 digit serial number. |
| Access Path | Project name. You can leave this blank. If you do specify a name, use the name of the open project. |
| Update Rate | A period in seconds. |
| Item | Tag name. Whether to specify an item depends on the client application. |

Vertex™ 72-Point Continuous Monitor

| Alarms | | |
|--|---|---|
| Alarm\#_1 Where # = 1 - 72 (Point 1-1-1 to Point 3-3-8) | | Data type is 1 byte Status 0 = No alarm 1 = Warning 2 = Alarm 1 3 = Alarm 2 |
| Concentration | | |
| GasCon\#_1 Where # = 1 - 72 (Point 1-1-1 to Point 3-3-8) | | Data type is 32-bit floating point in ppb, ppm, or mg/m3 as configured. |
| Faults | | |
| Main\Fault\# Where # = 1 - 72 (Point 1-1-1 to Point 3-3-8) | Indicates the presence of a point-specific fault for the point | Data is an unsigned integer Status 0 = No fault 1 = Maintenance Fault 2 = Instrument Fault 3 = Both |
| Main\Ana_Fault\# Where # = 1 - 9 (Az 1-1 to Az 3-3) | Indicates the presence of an analyzer fault for the analyzer. Does not indicate the presence of a point-specific fault | Data is an unsigned integer Status 0 = No fault 1 = Maintenance Fault 2 = Instrument Fault 3 = Both |

Table F-2: Tag Names

Vertex™ 72-Point Continuous Monitor

| | | |
|---|---|---|
| Main\Ana_Fault\PLC# Where # = 1 - 9 (Az 1-1 to Az 3-3) | Indicates the presence of a fault for the analyzer . The item can indicate the presence of a point-specific fault or an analyzer fault | Data is an unsigned integer Status 0 = No fault 1 = Maintenance Fault 2 = Instrument Fault 3 = Both |
| Fault\LFault\Pt# Where # = 1 - 72 (Point 1-1-1 to Point 3-3-8) | String containing the fault number and long fault description for the current analyzer fault. The contents of this item, the corresponding short description item and the corresponding timestamp will be based on the following priority: | Priority 1) Most severe point-specific fault 2) If no point-specific fault, the most severe analyzer fault 3) If no fault, a blank string |
| Fault\SFault\Pt# Where # = 1 - 72 (Point 1-1-1 to Point 3-3-8) | String containing the fault number and short fault description for the current point fault | |
| Fault\Timestamp\Pt# Where # = 1 - 72 (Point 1-1-1 to Point 3-3-8) | String containing the date and time when the current point fault occurred. | |
| Fault\LFault\Az# Where # = 1 - 9 (Az 1-1 to Az 3-3) | String containing the fault number and long fault description for the current analyzer fault. The contents of this item, the corresponding short description item, the corresponding timestamp item will be based on the following priority: | Priority 1) Most severe analyzer fault 2) Most severe simulated fault 3) If no fault, a blank string |
| Fault\SFault\Az# Where # = 1 - 9 (Az 1-1 to Az 3-3) | String containing the fault number and short fault description for the current analyzer fault | |
| Fault\Timestamp\Az# Where # = 1 - 9 (Az 1-1 to Az 3-3) | String containing the date and time when the current analyzer fault occurred. | |

Table F-2: Tag Names (cont'd)

Vertex™ 72-Point Continuous Monitor

| | | |
|--|---|---|
| Main\Fault\HMI | Indicates the presence of a fault for the HMI | Data is an unsigned integer Status 0 = No fault 1 = Maintenance Fault 2 = Instrument Fault 3 = Both |
| Fault\Fault\HMI | String containing the fault number and fault description for the current HMI fault. The contents of this item, the corresponding short description item and the corresponding timestamp item will be based on the following priority: | Priority 1) Most severe HMI fault 2) If no fault, a blank string |
| Fault\SFault\HMI | String containing the fault number and short fault description for the current HMI fault | |
| Fault\Timestamp\HMI | String containing the date and time when the current HMI fault occurred. | |
| Main\Fault\PLC | Indicates the presence of a fault for the PLC | Data is an unsigned integer Status 0 = No fault 1 = Maintenance Fault 2 = Instrument Fault 3 = Both |
| Fault\Fault\PLC | String containing the fault number and long fault description for the current PLC fault. The contents of this item, the corresponding short description item and the corresponding timestamp item will be based on the following priority: | Priority 1 = Most severe PLC fault 2 = If no fault, a blank string |
| Fault\SFault\PLC | String containing the fault number and short fault description for the current PLC fault | |
| Fault\Timestamp\PLC | String containing the date and time when the current PLC fault occurred. | |
| NOTE: If a Pyrolyzer Analyzer is installed in a Tier, Slot 2 assignments are used, Slot 1 points are ignored. | | |

Table F-2: Tag Names (cont'd)

Vertex™ 72-Point Continuous Monitor

F.3 Data Values Common to Fieldbus Networks

All six optional fieldbus networks report alarm, fault and concentration information.

F.3.1 Alarms and Faults

The alarm status of each point is reported as a single byte. The meaning of that byte is as listed in Table F-3. Similarly, the fault status of each analyzer is reported as a single byte. The meaning of the fault byte is listed in Table F-3.

| Alarm/ Fault value | LonWorks SNVT_lev_ disc value | Alarm Interpretation | Fault Interpretation |
|--------------------------|--|---|---------------------------|
| 0 | ST_OFF | No Gas | No Fault |
| 1 | ST_LOW | Warning of non-zero concentration below Alarm Level 1 | Maintenance Fault Present |
| 2 | ST_MED | Alarm Level 1 Exceeded | Instrument Fault Present |
| 3 | ST_HIGH | Alarm Level 2 Exceeded | Both Faults Present |

Table F-3: Alarm and Fault Interpretations

F.3.2 Concentrations

Finally, the concentration information is reported as one 16-bit word for each point as shown in Table F-4.

| Value | Description |
|---------------|---|
| 0 | Analyzer not present |
| 3120 | Instrument Fault exists (only if configured) |
| 6241 to 31206 | Normalized concentration from zero to the 20 mA full scale value as set in the point configuration. |

Table F-4: Interpretation of Concentration Values

Fault status can be superimposed over the concentration information in a manner similar to legacy 4-20 mA analog outputs. -- the output will drop below nominal if an instrument fault exists. However, indication of faults via the concentration output is disabled by default. It can be turned on in the configuration profile as shown in Figure F-1 below. For details see [Section 3.7 Configuration Utility](#).

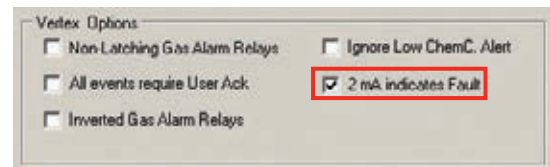


Figure F-1

Vertex™ 72-Point Continuous Monitor

If the concentration is non-zero and a fault exists, the concentration value will take priority and be reported. It is not possible to detect the existence of maintenance faults from the concentration outputs.

Unlike previous Honeywell Analytics products, the full-scale value of the concentration output is not equal to the full scale value of the gas table by default. Instead the full scale (31206 count) level defaults to twice the threshold limit value (TLV). Therefore an output of 12482 counts corresponds to a gas concentration of 0.5 TLV and 18723 counts corresponds to 1.0 TLV by default. This can be altered by editing the configuration profile as shown in Figure F-2.

| | | |
|---|------------|------------|
| <input checked="" type="checkbox"/> Warning Enabled | | |
| <input checked="" type="checkbox"/> Alarm L1 | 25 | ppb |
| <input checked="" type="checkbox"/> Alarm L2 | 50 | ppb |
| <input type="checkbox"/> Log never | 5 | ppb |
| PLC F/5 Conc. | 100 | ppb |

Figure F-2

For more information on the configuration profile see [Section 3.7.4 Configure Point](#).

If the concentration data is to be used only for visualization and datalogging, it may be more convenient to capture this information through OPC (See [F.2 OLE for Process Control \(OPC\) Interface](#)). This avoids the requirement of scaling the value

to get actual concentration. The concentration is available through the highly-reliable fieldbus for those customers who wish to make shutdown decisions based on concentrations instead of alarm levels.

F.3.3 Heartbeat

A heartbeat counter is provided with some of the fieldbusses in word 40. This increments every second to confirm that the internal PLC is running and that communications is working. External equipment communicating with the Vertex via Ethernet/CIP, LonWorks or Profibus must verify that this value is changing to be certain that the PLC is operating.

Each optional fieldbus interface is implemented using commercial communications modules connected to the internal PLC. In the Vertex the modules function as slaves only, although the hardware may be capable of acting as scanners or masters when installed elsewhere.

Vertex™ 72-Point Continuous Monitor

F.4 Data Map

Five of the optional fieldbusses (all except LonWorks) report the status of the Vertex in the same 122 word (244 byte) format which is listed in Table F-5. If concentration information is not needed, only the first 41 words must be read. This significantly reduces the consumption of scanner memory. For Ethernet/CIP, see Table F-8.

| Word Address | Hi Byte | Lo Byte |
|--------------|--------------|--------------|
| 0 | Pt 1-1-1 Alm | Pt 1-1-2 Alm |
| 1 | Pt 1-1-3 Alm | Pt 1-1-4 Alm |
| 2 | Pt 1-1-5 Alm | Pt 1-1-6 Alm |
| 3 | Pt 1-1-7 Alm | Pt 1-1-8 Alm |
| 4 | Pt 1-2-1 Alm | Pt 1-2-2 Alm |
| 5 | Pt 1-2-3 Alm | Pt 1-2-4 Alm |
| 6 | Pt 1-2-5 Alm | Pt 1-2-6 Alm |
| 7 | Pt 1-2-7 Alm | Pt 1-2-8 Alm |
| 8 | Pt 1-3-1 Alm | Pt 1-3-2 Alm |
| 9 | Pt 1-3-3 Alm | Pt 1-3-4 Alm |
| 10 | Pt 1-3-5 Alm | Pt 1-3-6 Alm |
| 11 | Pt 1-3-7 Alm | Pt 1-3-8 Alm |
| 12 | Pt 2-1-1 Alm | Pt 2-1-2 Alm |
| 13 | Pt 2-1-3 Alm | Pt 2-1-4 Alm |
| 14 | Pt 2-1-5 Alm | Pt 2-1-6 Alm |
| 15 | Pt 2-1-7 Alm | Pt 2-1-8 Alm |
| 16 | Pt 2-2-1 Alm | Pt 2-2-2 Alm |
| 17 | Pt 2-2-3 Alm | Pt 2-2-4 Alm |

| Word Address | Hi Byte | Lo Byte |
|--------------|--------------|--------------|
| 18 | Pt 2-2-5 Alm | Pt 2-2-6 Alm |
| 19 | Pt 2-2-7 Alm | Pt 2-2-8 Alm |
| 20 | Pt 2-3-1 Alm | Pt 2-3-2 Alm |
| 21 | Pt 2-3-3 Alm | Pt 2-3-4 Alm |
| 22 | Pt 2-3-5 Alm | Pt 2-3-6 Alm |
| 23 | Pt 2-3-7 Alm | Pt 2-3-8 Alm |
| 24 | Pt 3-1-1 Alm | Pt 3-1-2 Alm |
| 25 | Pt 3-1-3 Alm | Pt 3-1-4 Alm |
| 26 | Pt 3-1-5 Alm | Pt 3-1-6 Alm |
| 27 | Pt 3-1-7 Alm | Pt 3-1-8 Alm |
| 28 | Pt 3-2-1 Alm | Pt 3-2-2 Alm |
| 29 | Pt 3-2-3 Alm | Pt 3-2-4 Alm |
| 30 | Pt 3-2-5 Alm | Pt 3-2-6 Alm |
| 31 | Pt 3-2-7 Alm | Pt 3-2-8 Alm |
| 32 | Pt 3-3-1 Alm | Pt 3-3-2 Alm |
| 33 | Pt 3-3-3 Alm | Pt 3-3-4 Alm |
| 34 | Pt 3-3-5 Alm | Pt 3-3-6 Alm |
| 35 | Pt 3-3-7 Alm | Pt 3-3-8 Alm |
| 36 | Az 1-1 Flt | Az 1-2 Flt |
| 37 | Az 1-3 Flt | Az 2-1 Flt |
| 38 | Az 2-2 Flt | Az 2-3 Flt |
| 39 | Az 3-1 Flt | Az 3-2 Flt |
| 40 | Az 3-3 Flt | HeartBeat |

**Table F-5: Fieldbus Data Addresses
(Except LonWorks)**

Vertex™ 72-Point Continuous Monitor

Table F-5: Fieldbus Data Addresses (Except LonWorks) (cont'd)

| Word | Address | Word | Address | Word | Address |
|------|---------------|------|---------------|------|---------------|
| 41 | undefined | 68 | Pt 1-3-3 Conc | 95 | Pt 2-3-6 Conc |
| 42 | undefined | 69 | Pt 1-3-4 Conc | 96 | Pt 2-3-7 Conc |
| 43 | undefined | 70 | Pt 1-3-5 Conc | 97 | Pt 2-3-8 Conc |
| 44 | undefined | 71 | Pt 1-3-6 Conc | 98 | Pt 3-1-1 Conc |
| 45 | undefined | 72 | Pt 1-3-7 Conc | 99 | Pt 3-1-2 Conc |
| 46 | undefined | 73 | Pt 1-3-8 Conc | 100 | Pt 3-1-3 Conc |
| 47 | undefined | 74 | Pt 2-1-1 Conc | 101 | Pt 3-1-4 Conc |
| 48 | undefined | 75 | Pt 2-1-2 Conc | 102 | Pt 3-1-5 Conc |
| 49 | undefined | 76 | Pt 2-1-3 Conc | 103 | Pt 3-1-6 Conc |
| 50 | Pt 1-1-1 Conc | 77 | Pt 2-1-4 Conc | 104 | Pt 3-1-7 Conc |
| 51 | Pt 1-1-2 Conc | 78 | Pt 2-1-5 Conc | 105 | Pt 3-1-8 Conc |
| 52 | Pt 1-1-3 Conc | 79 | Pt 2-1-6 Conc | 106 | Pt 3-2-1 Conc |
| 53 | Pt 1-1-4 Conc | 80 | Pt 2-1-7 Conc | 107 | Pt 3-2-2 Conc |
| 54 | Pt 1-1-5 Conc | 81 | Pt 2-1-8 Conc | 108 | Pt 3-2-3 Conc |
| 55 | Pt 1-1-6 Conc | 82 | Pt 2-2-1 Conc | 109 | Pt 3-2-4 Conc |
| 56 | Pt 1-1-7 Conc | 83 | Pt 2-2-2 Conc | 110 | Pt 3-2-5 Conc |
| 57 | Pt 1-1-8 Conc | 84 | Pt 2-2-3 Conc | 111 | Pt 3-2-6 Conc |
| 58 | Pt 1-2-1 Conc | 85 | Pt 2-2-4 Conc | 112 | Pt 3-2-7 Conc |
| 59 | Pt 1-2-2 Conc | 86 | Pt 2-2-5 Conc | 113 | Pt 3-2-8 Conc |
| 60 | Pt 1-2-3 Conc | 87 | Pt 2-2-6 Conc | 114 | Pt 3-3-1 Conc |
| 61 | Pt 1-2-4 Conc | 88 | Pt 2-2-7 Conc | 115 | Pt 3-3-2 Conc |
| 62 | Pt 1-2-5 Conc | 89 | Pt 2-2-8 Conc | 116 | Pt 3-3-3 Conc |
| 63 | Pt 1-2-6 Conc | 90 | Pt 2-3-1 Conc | 117 | Pt 3-3-4 Conc |
| 64 | Pt 1-2-7 Conc | 91 | Pt 2-3-2 Conc | 118 | Pt 3-3-5 Conc |
| 65 | Pt 1-2-8 Conc | 92 | Pt 2-3-3 Conc | 119 | Pt 3-3-6 Conc |
| 66 | Pt 1-3-1 Conc | 93 | Pt 2-3-4 Conc | 120 | Pt 3-3-7 Conc |
| 67 | Pt 1-3-2 Conc | 94 | Pt 2-3-5 Conc | 121 | Pt 3-3-8 Conc |

Vertex™ 72-Point Continuous Monitor

F.5 Profibus Option (P/N 1295-0275)

Profibus is a vendor-independent, open fieldbus standard for a wide range of applications in manufacturing and process automation. Vendor independence and openness are ensured by the international standards EN 50170, EN 50254 and IEC 61158. Profibus allows communication between devices of different manufacturers without any special interface adjustment. Profibus can be used for both high-speed time critical applications and complex communication tasks. Use of special Profibus media is required.

For more information about Profibus, see www.profibus.com. Technical information on the Woodhead Connectivity / SST model

SST-PFB-SLC module which is used in the Vertex is available from

<http://www.woodhead.com/products/automation/networkinterface/PLCBackplaneModules/>.

The data map used by the Profibus interface is shown in Table F-5. The interpretation of the data is in Tables F-3 and F-4. The network management tool will need a .GSE file to describe every slave on the network. The vertex.gse file can be copied from any Vertex at c:\hmi\Profibus\vertex.gse.

F.5.1 Termination

The Profibus adapter PCB assembly shown in Figure F-3 facilitates using standard large Profibus connectors without creating mechanical interferences with the back panel of the Vertex rack. Additionally, this functions as a Profibus terminator if JP1 through JP3 are shorted. If termination is not desired then JP1 through JP3 should be cut as shown. This is Honeywell Analytics part number 1295A0372.

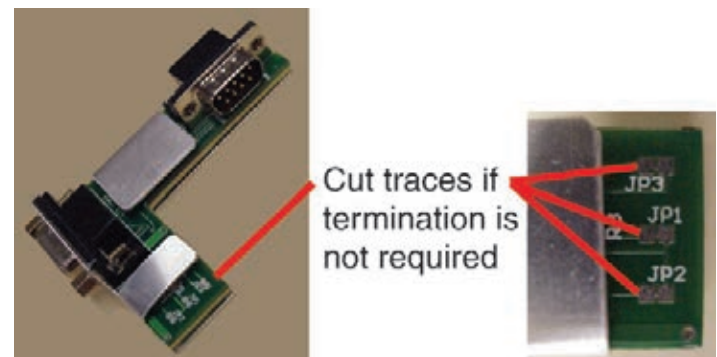


Figure F-3

Vertex™ 72-Point Continuous Monitor

F.5.2 Profibus Module Configuration

The Profibus interface is shipped from the factory with the address set to 3, the speed set to 19200 baud, and the memory length set to 122 words.

The memory length can be reduced to 41 words if only alarms and fault are needed. Changing any of these parameters requires Procedure 1.

| | |
|---------|---|
| F.1.1. | Obtain a computer with free RS232 serial port. |
| F.1.2. | Start a terminal emulator program such as HyperTerminal |
| F.1.3. | Configure the terminal emulator for 115200,N,8,1 |
| F.1.4. | Connect the provided DB9 cable from the selected port on the computer to the top DB9 connector on the Profibus card. |
| F.1.5. | Take the SLC 5/03 PLC CPU out of run mode by turning the key briefly to “PROG” then back to “REM”. Verify that the RUN light is off. The Profibus card will not enter terminal mode if the PLC is running. |
| F.1.6. | Type asterisk (“ * ”)(Shift + 8) up to 5 times until the following message is displayed: Profibus Module (DP, FDL) Note: if pressing the asterisk (“ * ”) does not display the “terminal mode” prompt, first try a different baud rate (step 1.3), i.e. 38400. If it still is not displayed, carefully remove and reinsert the Profibus module on the PLC. |
| F.1.7. | Type “ locstn xx ” where xx is the desired Profibus address. |
| F.1.8. | Type “ baud yyy ” where yyy is the desired baud rate from the set {9k6,19k2,93k75,187k5,500k,750k,1m5,3m,6m or 12m}. |
| F.1.9. | Type “ showned ” and verify that the communications parameters are as desired. |
| F.1.10. | Type “ slvtxlen 0 0 zzz ” where zzz is the desired memory size in words, usually 41 or 122. |
| F.1.11. | Type “ showslv ” and verify that the communication parameters are as desired |
| F.1.12. | If additional information is desired type “ help ” and follow the instructions. |
| F.1.13. | Type “ exit ” to save the changes |
| F.1.14. | Put the SLC 5/03 PLC CPU into run mode by turning the key briefly to “RUN” then back to “REM”. Verify that the RUN light stays on. |

Procedure 1 - Changing Profibus Configuration

F.6 DeviceNet Interface (P/N 1295-0329)

The DeviceNet network is a low-level network that provides connections between simple industrial devices and higher-level devices (such as PLC controllers and computers). DeviceNet network uses a combination of taps and shielded, twisted pair media for device connection.

For more information about DeviceNet, see www.odva.org.

Furthermore, the Allen Bradley DeviceNet Cable System Planning and Installation Manual is useful.

This can be downloaded from:

http://literature.rockwellautomation.com/idc/groups/literature/documents/um/dnet-um072_-en-p.pdf.

Technical Information on the Allen-Bradley 1747-SDN DeviceNet interface which is used in the Vertex is available at:

http://literature.rockwellautomation.com/idc/groups/public/documents/webassets/browse_category_hcst

The data map used by the DeviceNet interface is shown in Table F-5. The interpretation of the data is in Tables F-3 and F-4.

Successful commissioning of a DeviceNet Networks requires the use of a network management tool.

Such a tool can be constructed using a PC, an interface card and RSNetWorx or similar software. Use of special DeviceNet media is required. DeviceNet requires that each network segment include a power supply.

F.7 ControlNet Interface

ControlNet a real-time, control-layer network providing for high-speed transport of both time-critical I/O data and messaging data, including upload/download of programming and configuration data and peer-to-peer messaging, on a single physical media link. Deterministic and repeatable, ControlNet offers high-speed, media redundancy and intrinsically safe options.

For more information about ControlNet, see www.controlnet.org. Technical Information on the Allen-Bradley 1747-SCNR ControlNet interface which is used in the Vertex is available at:

http://literature.rockwellautomation.com/idc/groups/public/documents/webassets/browse_category_hcst

The data map used by the ControlNet interface is shown in Table F-5. The interpretation of the data is in Tables F-3 and F-4.

Successful commissioning of a ControlNet Networks requires the use of a network management tool. Such a tool can be constructed using a PC, an interface card and RSNNetWorx or similar software.

Vertex™ 72-Point Continuous Monitor

F.8 DF1 Interface (P/N1295-0343)

This module emulates the DF1 slave functionality of an Allen-Bradley SLC 5/03 DF1 port. It responds to queries for data from the N14 integer file by sending alarm, fault, and concentration data.

The DF1 protocol is defined by the Allen-Bradley DF1 Protocol and Command Set Reference Manual which can be downloaded from:

http://literature.rockwellautomation.com/idc/groups/literature/documents/rm/1770-rm516_-en-p.pdf

Technical information on the ProSoft Technology MVI46-DFCM interface which is used in the Vertex can be found at

<http://www.prosoft-technology.com>

The baud rate and address of the DF1 interface are set using the configuration profile utility as described in See [Section 3.7, Configuration Utility](#). Supported speeds range from 1200 to 57,600 baud with a default of 19,200. The DF1 address can be set from 2 to 127.

The data map used by the DF1 interface is shown in Table F-5. This appears as the N14 file. The interpretation of the data is in Tables F-3 and F-4.



DF1 connection is made to middle RJ45 socket

Figure F-4

The pinout of the DF1 port is as follows:

| RJ45 Pin | DB-9 Pin | RS-232 mode pin function | RS-422 mode pin function | RS-485 mode pin function |
|----------|----------|--------------------------|--------------------------|--------------------------|
| 1 | 1 | | TxD+ | TxD/RxD+ |
| 2 | 2 | RxD | RxD+ | |
| 3 | 3 | TxD | | |
| 4 | 4 | | | |
| 5 | 5 | GND | GND | GND |
| 6 | 6 | | RxD- | |
| 7 | 7 | RTS | | |
| 8 | 8 | CTS | TxD- | TxD/RxD- |
| | 9 | | | |

F.9 Modbus Plus Interface (P/N1295-0330)

For more information on Modbus Plus, see

<http://eclipse.modicon.com>. Technical information on the ProSoft Technology MVI46-MBP interface which is used in the Vertex can be found at

<http://www.prosoft-technology.com>

The address of the Modbus Plus interface are set using the configuration profile utility as described in See [Section 3.7, Configuration Utility](#). Valid address values are from 1 to 64.

The ProSoft website contains the MVI46-MBP User Manual. Of particular interest in this manual are the general specifications on page 9 (in the pdf document) and the status LED interpretations on page 58 (in the pdf document).

Always wait for 20 seconds after energizing the PLC or changing the address before evaluating the LEDs.

The data map used by the Modbus Plus interface is shown in Table F-5. The interpretation of the data is in Tables F-3 and F-4.

Vertex™ 72-Point Continuous Monitor

F.10 LonWorks Interface (P/N 1295-0329)

The LonWorks protocol permits peer-to-peer communication without relying on a central controller. Routers permit expansion of networks to include thousands of nodes. For more information about LonWorks see <http://www.echelon.com> or www.engenuity.com

The LonWorks interface is implemented using a FieldServer Technologies model FS-B2011 bridge and other components. This is a purple box mounted below the PLC in the rear of the Vertex rack. The interface can be operated in either Polled Mode

or Bind Mode. A service pin is provided for node identification. LED indicators are provided for Power, Run, System Error, and Configuration Error. Media type is FTT-10 twisted pair. Information on the FS-B2011 may be obtained from

<http://www.fieldserver.com>

The LonWorks external interface has 154 network variable outputs as listed in Table F-7. The interpretation of the data is in Tables F-3 and F-4

| Function | Names | Type | Number |
|----------------|--------------------------------|---------------|--------|
| Alarms | nvoAlm_1_1_1 to nvoAlm_3_3_8 | SNVT_lev_disc | 72 |
| Faults | nvoFlt_1_1 to nvoFlt_3_3 | SNVT_lev_disc | 9 |
| Concentrations | nvoConc_1_1_1 to nvoConc_3_3_8 | SNVT_count | 72 |
| Heartbeat | nvoHeartbeat | SNVT_count | 1 |

Table F-7: LonWorks Network Variable Outputs

Vertex™ 72-Point Continuous Monitor

F.11 Modbus/TCP (P/N1295-0520)

Modbus/TCP provides the highly reliable communications like the other fieldbusses over fast, economical Ethernet media. This interface uses ProSoft-Technology MVI46-MNET hardware. In the Vertex, this interface is always a TCP server, never a client. For more information see www.prosoft-technology.com and www.modbus.org.

The 122 words of status information listed in Table F-5 are mapped as Modbus holding registers 40001 to 40122.

F.11.1 Configuring the IP Address

The following resources are needed to set the IP address of the Vertex.

1. An external personal computer with Microsoft Windows 2000 or later operating system and an unused serial port.
2. The debugging cable shown in Figure F-5.
3. The file "WATTCP.CFG". This may be supplied on a floppy disk or may be loaded in "C:\hmi\FieldbusFiles"



Figure F-5 -- Debugging Cable



Figure F-6 -- Connector Locations

Vertex™ 72-Point Continuous Monitor

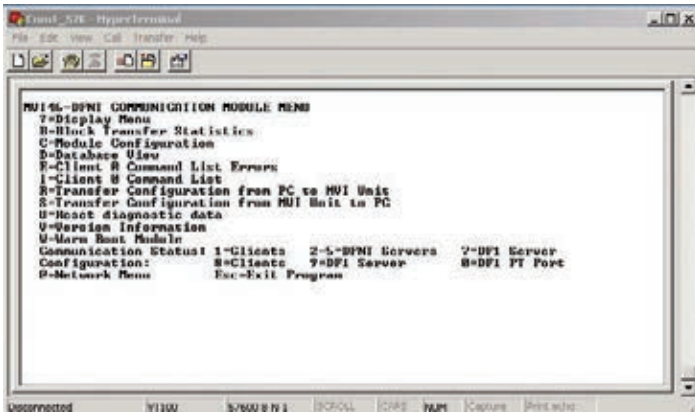


Figure F-6 -- HyperTerminal Setup for Diagnostic Port

```
# WATTCP.CFG file for ProSoft Technology MVI46.DFNT
# 05/25/2005 MJG -- modify for Zellweger Analytics, Inc.
my_ip=10.1.162.99
netmask=255.255.255.0
gateway=10.1.162.1
```

Figure F-7 -- WATTCP.CFG File

This procedure is used to set the IP Address

Procedure 1

1. Determine the desired IP address, subnet mask, and default gateway. Usually a network administrator will assign these numbers. Note that the MVI46-MNET will not function as a client for the DHCP protocol.
2. Modify the WATTCP.CFG file for the correct Internet parameters using a suitable editor such as Notepad. The default file is shown in Figure F-7.
3. Connect the debugging cable from the external

PC to the “DEBUG” port on the MVI-46 as shown in Figure F-6.

4. Start HyperTerminal and configure for 57600 baud.
5. Type “?” in HyperTerminal.
6. Verify that the menu to appears as shown in Figure F-6.
7. Type “M@?”.
8. Verify that HyperTerminal displays:

NETWORK MENU

?=Display Menu

R=Receive WATTCP.CFG

S=Send WATTCP.CFG

V=View WATTCP.CFG

M=Main Menu

9. Type “RY”
10. On the HyperTerminal menu bar, click on <Transfer>/<Send>.
11. Click on <Browse> and navigate to the location of “WATTCP.CFG” in the PC.
12. Click on <Open> and then <Send>.

Note:

An error will occur if the user takes more that 50 seconds to perform this step. If an error occurs, repeat this procedure.

13. Verify that HyperTerminal displays:

FILE TRANSFERRED FROM PC UNIT....

THE MODULE MUST RESTART...

Vertex™ 72-Point Continuous Monitor

14. Cycle power to the PLC.
15. The WATTCP.CFG file may be conveniently viewed with the “V” command.

A 10/100BaseT Ethernet network cable may now be connected to the top RJ45 jack.

Notes

1. Honeywell strongly recommends that any gas detection network which is connected to the Internet be protected from unauthorized access by a firewall.
2. Honeywell recommends that a gas detection Ethernet network be separated from a general-purpose computer networks by a switch. This is because the transmission time of Ethernet networks is non-deterministic and can become large if the network is heavily loaded.
3. When the interface is correctly installed in the PLC backplane the “BP ACT” light will glow steady amber. The “OK” light will glow steady green.
4. The “LINK” indicator will glow steady green when a valid physical-layer connection is established to an Ethernet switch.
5. An external computer can confirm that the interface is set to the correct IP address by use of the “ping” command.
6. The MVI46-MNET contains a second configuration file named “MNET.CFG”. If the module was purchased from Honeywell, this file will be preloaded. Otherwise, the file provided in “C:\hmi\FieldbusFiles” must be loaded.
7. The 122 words of Vertex status which are listed in Table F-5 may be viewed on the diagnostic port. These are mapped as registers 0 to 121 in the ProSoft database. Instructions on viewing the ProSoft database are in Chapter 6 of the ProSoft User Manual.
8. PC-based software for communicating with the MVI46-MNET and other Modbus/TCP devices may be purchased from Witte Software at www.modbustools.com

F.12 Ethernet/CIP (P/N1295-0519)

EtherNet/CIP provides the highly reliable communications like the other fieldbusses over fast, economical Ethernet media. This interface uses ProSoft-Technology MVI46-DFNT hardware. In the Vertex this interface is always a server, never a client. For more information see www.prosoft-technology.com and www.controlnet.org.

This interface provides 122 words of status information as listed in Table F-8. The presentation of this data varies depending on the type of client used. Examples of this presentation are included at the top of page 18 in the ProSoft User Manual and also in Table F-8, below.

Vertex™ 72-Point Continuous Monitor



WARNING

It is essential that Ethernet/CIP clients which communicate with the Vertex monitor the “Heartbeat” byte in word 40. This is because the MVI46-DFNT will continue to communicate if the Vertex PLC ceases to run. External automation equipment must be programmed to treat a failure of the heartbeat to increment as a complete loss of gas detection.

| Database Address | Vertex Meaning | PLC2 Address | PLC5 or SLC Address | ControlLogix | | |
|------------------|-------------------------|--------------|---------------------|--------------------|---------------------------------|---------------------------------|
| | | | | PCC | CIP Byte | CIP Integer |
| 0 to 35 | point alarm status | 0 to 35 | N10:0 to N10:35 | N10:0 to N10:35 | SintData[0] to SintData[71] | Int_Data[0] to Int_Data[35] |
| 36 to 40 | analyzer fault status | 36 to 40 | N10:36 to N10:40 | N10:36 to N10:40 | SintData[72] to SintData[80] | Int_Data[36] to Int_Data[40] |
| | heartbeat | | | | SintData[81] | |
| 41 to 49 | undefined | 41 to 49 | N10:41 to N10:49 | N10:41 to N10:49 | SintData[82] to SintData[99] | Int_Data[41] to Int_Data[49] |
| 50 to 121 | point gas concentration | 50 to 121 | N10:50 to N10:121 | N10:50 to N10:121 | SintData[100] to SintData[243] | Int_Data[50] to Int_Data[121] |
| 122 to 3999 | undefined | 122 to 3999 | N10:122 to N13:999 | N10:122 to N13:999 | SintData[244] to SintData[7999] | Int_Data[122] to Int_Data[3999] |

Table F-8: Data Presentation in Various PLCs

Vertex™ 72-Point Continuous Monitor

F.12.1 Configuring the IP Address

The IP address of this interface is set using a procedure similar to that listed in Section F.11. The file “WATTCP.CFG” is modified with Notepad and downloaded with HyperTerminal.

Notes

1. Honeywell strongly recommends that any gas detection network which is connected to the Internet be protected from unauthorized access by a firewall.
2. Honeywell recommends that a gas detection Ethernet network be separated from a general-purpose computer networks by a switch. This is because the transmission time of Ethernet networks is non-deterministic and can become large if the network is heavily loaded.
3. When the interface is correctly installed in the PLC backplane the “BP ACT” light will glow steady amber. The “OK” light will glow steady green.
4. The “LINK” indicator will glow steady green when a valid physical-layer connection is established to an Ethernet switch.
5. An external computer can confirm that the interface is set to the correct IP address by use of the “ping” command.
6. The MVI46-DFNT contains a second configuration file named “DFNT.CFG”. If the module was purchased from Honeywell, this file will be preloaded. Otherwise, the file provided in “C:\hmi\FieldbusFiles” must be loaded.
7. The 122 words of Vertex status which are listed in Table F-5 may be viewed on the diagnostic port. These are mapped as registers 0 to 121 in the ProSoft database. Instructions on viewing the ProSoft database are in chapter 6 of the ProSoft User Manual.
8. If desired, Allen-Bradley RSLinx software may be used to communicate with the MVI46-DFNT. This is explained in Appendix E of the ProSoft User Manual.

Vertex™ 72-Point Continuous Monitor

F.13 RSView32 Active Display Set-Up Instructions

Three terms have special meanings in this section:

Rack – The DAQ PC inside the Vertex rack.

Remote Station – A computer external to the Vertex rack. The desktop computer will be used to remotely view the Vertex rack PC.

Host ID Device – A USB ethernet device with memory that is used to node lock and hold the license when the Factory Talk activation method is used.

Note

In this process, it will be necessary to reboot the computer several times. For brevity, this instruction has been excluded. In general, reboot whenever prompted to or if a step fails.

Windows Update

Ensure that the current upgrades to the Microsoft Windows operating system have been installed by selecting the *Custom* option from www.update.microsoft.com as shown in Figure F-9.



Figure F-9

Vertex™ 72-Point Continuous Monitor

Ensure that all functionality is enabled by selecting *Hardware, Optional* from the Customized Windows Update as shown in Figure F-10.



Figure F-10

Add Rockwell Software to Rack

The RSView active display server is not installed on the rack unless the license has been purchased. Loading this software without a license file interferes with the Internet Information Service (IIS) needed for other Vertex functionality. Install this software only if it is licensed.

Two versions of RSView are currently active: 6.4 and 7.2. Both versions have three software components:

- RSView on the Vertex rack
- Active Display server on the Vertex rack
- Active Display client on the Vertex desktop

For Active Display to work properly, the revision levels of all three components must match. Determine the revision level of the installation by navigating to the About RSView32 screen:

Project > Stop Project > Help > About RSView32.

A screen similar to Figure F-11 will appear. The version number is highlighted in blue.



Figure F-11

Vertex™ 72-Point Continuous Monitor

Active Display software is distributed via a CD labeled *RSView32* and *Active Display™*. For users on the Honeywell network, this software is available in the Rockwell Software folder at [\\158.100.40.11\vtxinst\](http://158.100.40.11/vtxinst/). The splash screen is shown Figure F-12.

Install the server application on the rack by clicking *Install RSView32 Active Display Server* (highlighted in blue).

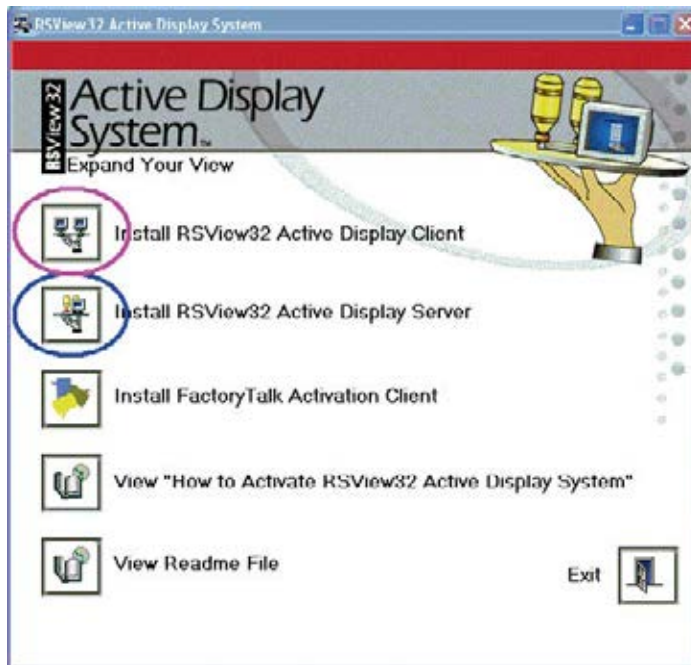


Figure F-12

Add Rockwell Software to Remote Computer

Install these three Rockwell packages on the remote computer:

- Active Display Client
- Security Controls
- TrendX

Active Display Client is installed using the program that installed the server on the rack. Click *Install RSView32 Active Display Client*, (highlighted in purple in Figure F-12) to begin the installation.

Rockwell Security Controls are found on the Honeywell Vertex Application Software CD. The setup program is *ActiveX\Security\setup.exe*. For those on the Honeywell network, this is found in the *ActiveX\Security* folder.

TrendX is distributed on the Honeywell Vertex Application Software CD and on the Honeywell network as the self-extracting zip file *ActiveX\trendx v3.42.exe*.

Create a temporary folder on the desktop and unzip the program files there. Run the installation program by clicking on *setup.exe* in this folder.

Vertex™ 72-Point Continuous Monitor

When the setup program starts, click *Client Install*, highlighted in green in Figure F-13.

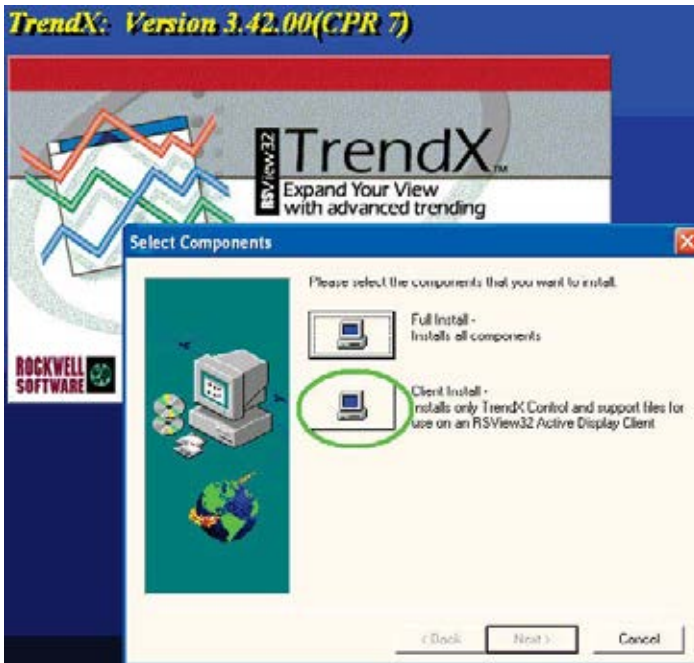


Figure F-13

When the Rockwell software is properly installed on the remote client, the Windows control panel program list will include the four programs highlighted in green in Figure F-14.

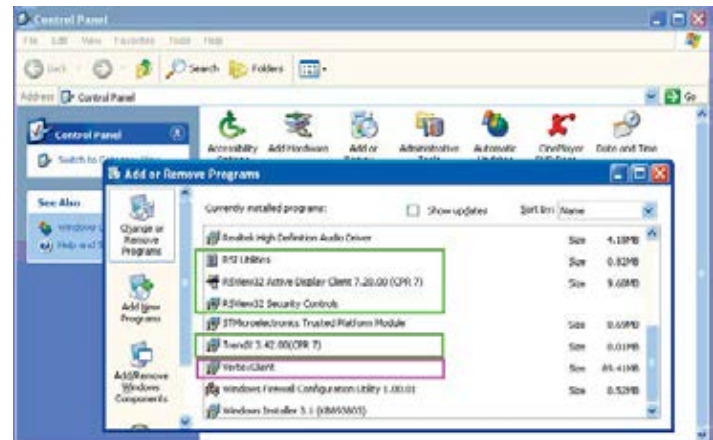


Figure F-14

Add Honeywell Software to Remote Computer

Software from Honeywell Analytics must be installed on the remote computer for correct operation. Run *SetupClient\setup.exe* found on the Vertex Application Software CD and also on the Honeywell network. After successful installation, “VertexClient” will appear in the desktop program list as highlighted in purple in Figure F-14.



CAUTION

Protect both the remote station and the network between it and the Vertex monitor from unauthorized contact. Software changes increase the vulnerability of the Vertex rack to malicious attack.

Vertex™ 72-Point Continuous Monitor

Add Rockwell License Files to the Rack (Master Disc Activation Method)

Moving license files requires that all Rockwell applications be shut down, including RSLinx. To stop RSLinx, right-click the RSLinx icon (highlighted in green below) and select *Shutdown RSLinx*.

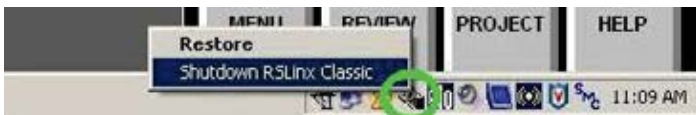 


Figure F-15

The Rockwell Move Activation utility moves license files between the original floppy disk and any non-removable file system. This program is started by navigating to the Move Activation screen:

Start > All Programs > Rockwell Software > Utilities > Move Activation

An example of a rack with several licenses is shown in Figure F-17.

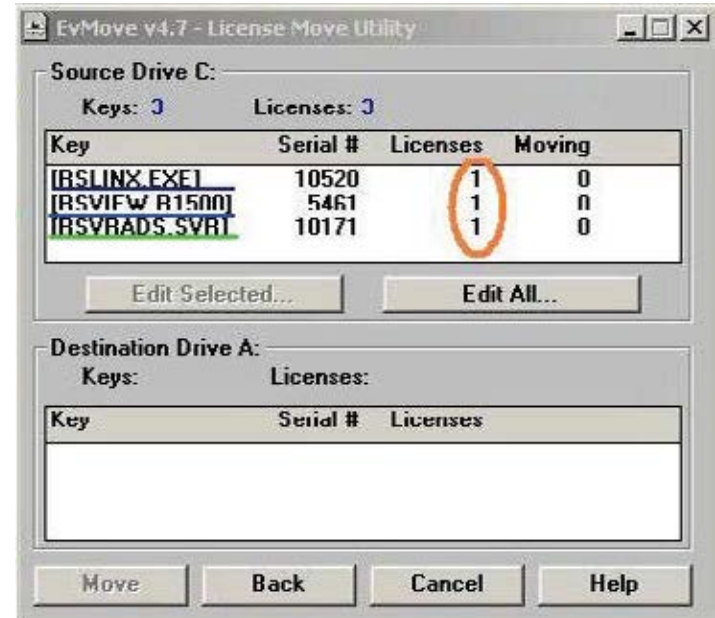


Figure F-17

The number of licenses installed is highlighted in brown. The two lines underlined in blue must be present for the RSView HMI system to work. Additionally, the Active Display server license must be present in the rack for remote Active Display to work. This is highlighted in green. A floating client license may also be present on either the rack or the desktop PC. If a floating client is not used, a dedicated client license must be present on the desktop PC.

Vertex™ 72-Point Continuous Monitor

Add Rockwell License Files to the Rack (Factory Talk activation method)

The Rockwell Factory Talk activation method consists of a host ID device that contains the license file locked to that particular host device's MAC address and the Factory Talk Activation Tool software running on the rack computer. Factory Talk and Master Disc activations can be mixed on a Vertex rack. The advantage to this system is that the host device with the associated file is a standalone RSView activation system that can be used on any computer running that software. In case of a computer swap, no license moving is required; just plug the host device into the new computer.

If the Vertex Rack already uses Factory Talk Activation

The Factory Talk Activation Tool software will already be installed on the Vertex rack and configured to look for the Rockwell licenses on the connected host device (removable drive E:). The new software's license file must be generated and locked to that same host device. The Active Display software package will come with a certificate that contains the software serial number and product key required to complete the activation. Three methods are available to complete the activation:

Method 1

If the Vertex has access to the internet, use the Factory Talk Activation Tool already installed on the rack computer.

- a. Shut down all Rockwell applications as described previously.
- b. Start the Factory Talk Activation Tool from the desktop icon or navigate to the tool:
Start > All Programs > Rockwell Software > Factory Talk Activation > Factory Talk Activation Tool
- c. On the *Get Activations* tab, click the button for *Open Activation Wizard*.
- d. Click *Next* on the welcome screen, then on the *Path Selection* screen. The recommended path will be on the hard drive. Leave this as the default so the file will be stored on the hard drive as a backup. Click *Next*.
- e. Enter the serial number and product key into the appropriate fields.
- f. Select the number of activations to download (one per serial number), click *Next*.
- g. Select the *I need product activation for this computer* radio button. Click *Next*.
- h. Choose the host ID that matches the MAC address of the host device on the rear of the

Vertex™ 72-Point Continuous Monitor

rack computer (the description will be similar to “Realtek RTL8150 USB 10/100 Fast Ethernet Adapter #x”). Click *Next*.

- i. Verify the information on the confirm screen and click *Next*.
- j. On the following screen, note the file name and location that the file is stored, browse to that directory, then copy the file to the memory of the host device (right click the file, select *Send to*, then select *Removeable disk E*).

Method 2

If the Vertex is not connected to the internet, use a computer to generate an activation file and copy it to the host device on the Vertex. Go to the site:

activate.rockwellautomation.com/Default.aspx.

- a. Click the *Get New Activations* link to activate without installing Factory Talk Activation Manager.
- b. Select *Download activations to this computer* and click *Next*.
- c. For host ID type, select *Network MAC Address*. Enter the MAC address found on the bottom of the USB host device on the rear of the rack computer. Enter the serial number and product key from the software certificate.

If installing multiple floating clients on a single rack, click the + sign on the left end of the line, then enter the serial number and product key of the additional license. Click *Next*.

- d. A table will then show how many activations are available for each license. This will typically be *1*, so select *1* from the dropdown box for each licence to download. Click *Next*.
- e. Download the activation file from the next screen and transfer it to the root directory of the memory portion of the USB device installed on the rear of the rack computer.

Method 3

Phone 1-440-646-3434, select *Option 3* (Technical Support), select *Option 1* (Direct Dial), select *Option 1* again and enter the three-digit code *010*. Have the serial number and product key from the certificate and the MAC address from the sticker on the bottom of the the host device ready. Tell the customer service representative (CSR) you need to activate RSview software. The CSR will create the file and email it to you and then guide you through the activation steps.

Vertex™ 72-Point Continuous Monitor

If the Vertex Rack does not currently use Factory Talk Activation:

The Factory Talk Activation Tool software must be installed on the Vertex rack and configured. A host device must also be purchased to host the license. The Factory Talk Activation Tool is on the same CD as the software in the *FactoryTalk_Activation_3.02* directory.

1. Double click the *setup.exe* file in that directory and follow the directions. (Do not install the HASP dongle drivers.)

2. After installation, plug the Host device into the rack computer and install the drivers (The drivers are stored within the device itself.)

3. Start the Factory Talk Activation Tool from the desktop icon or navigate to it from the Start menu:

Start > All Programs > Rockwell Software > Factory Talk Activation > Factory Talk Activation Tool

4. On the *Settings* tab, click the + sign above the box for *Folders and servers searched by applications*:. In the entry field that opens, enter *E:* or use the browse button at the end of the field to browse to the removable memory device.

5. Repeat step 4 for the *Folders searched by local applications* box.

6. Check the box with *Browse for activations on start-up*.

7. Click the *Start* button to open the activation server.

8. Continue with either of the activation methods to activate the new software.

Configure DCOM on Rack

Successful operation of a remote Vertex display requires numerous changes to the Windows operating system using the *dcomcnfg* program. This is started as shown in Figure F-18.

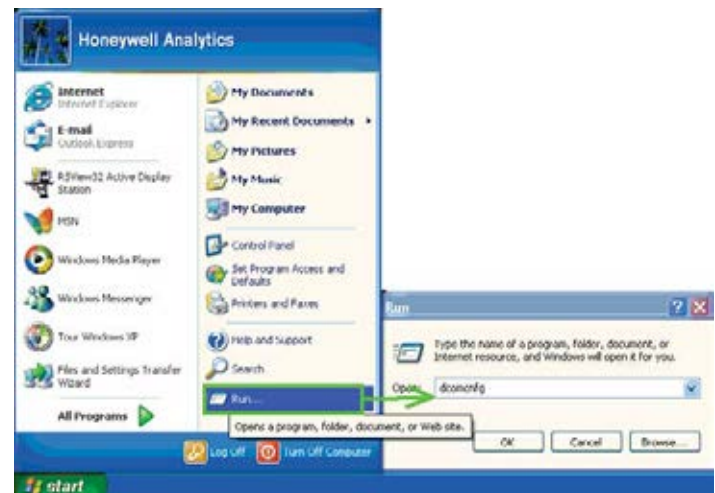


Figure F-18

Vertex™ 72-Point Continuous Monitor

When *OK* is clicked, a Microsoft Component Services Management Console window, shown in Figure F-19, will appear. If a *DCOM Configuration Warning!* message appears (similar to the one in Figure F-18), close it by clicking *Yes*.



Figure F-19

Default security for the entire computer as well as security settings for individual programs can be set with this tool. These four programs selected in Figure F-20 require special attention:

- ChemCamServer
- HvSvr.Xtimer
- Interface for automated file transfer
- Interface for Vertex PLC Utility

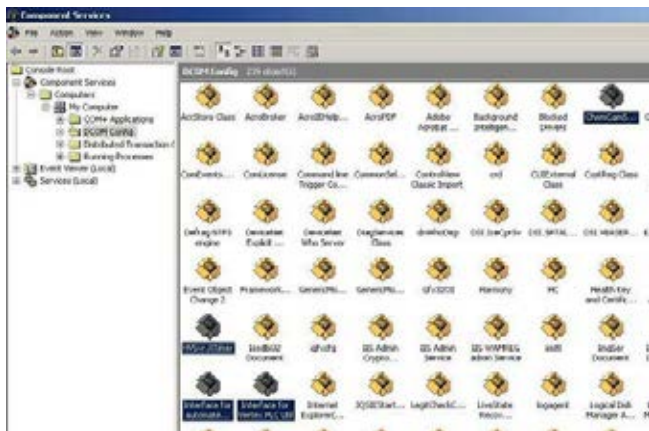


Figure F-20

Security bits are set by clicking on one of the four edit buttons highlighted in purple in Figure F-21. An *Access Permission* window will appear; objects to receive permission are listed at the top, highlighted in brown. Permissions are set with checkboxes below, highlighted in green.

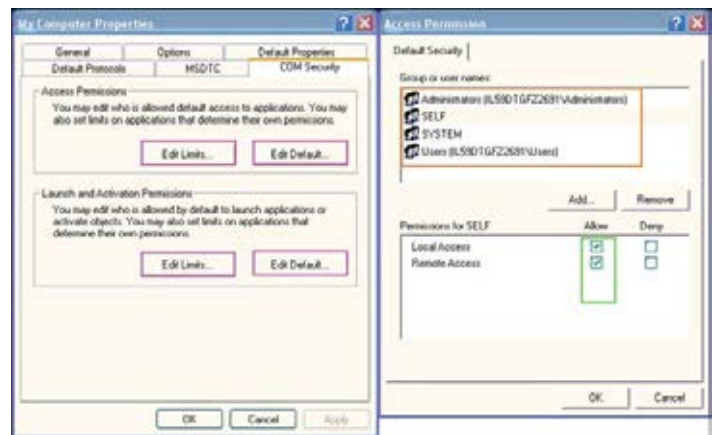


Figure F-21

The necessary DCOM permission settings are listed in tabular form below for brevity. In many cases, it will be necessary to add new objects as shown in Figure F-22.

Vertex™ 72-Point Continuous Monitor

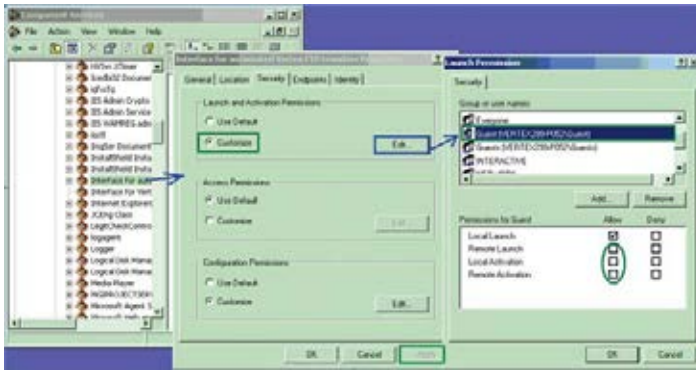


Figure F-22

Typical objects that might be added:

- Administrators
- ANONYMOUS LOGON
- Everyone
- Guests
- INTERACTIVE
- NETWORK
- SYSTEM
- Users

Other Settings on Rack

None.

Other Settings on Desktop

Windows' firewall is incompatible with Active Display and must be turned off. Select

Start > Control Panel > Windows Firewall > Off
as shown in Figure F-23.

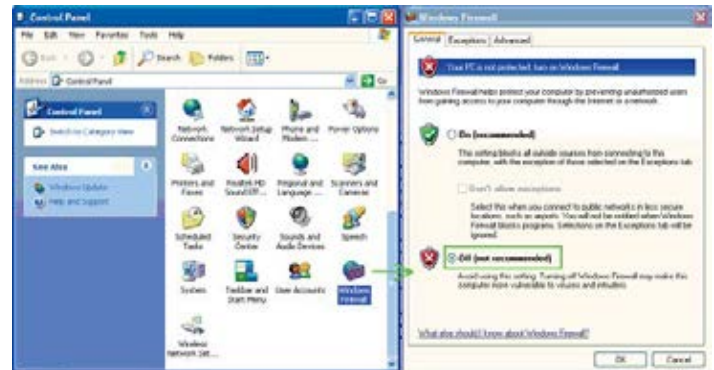


Figure F-23

Create Matching Windows Accounts

Microsoft Windows security requires that matching accounts exist on both the rack and the desktop to provide the necessary credentials. Vertex racks ship with an account named *Honeywell Analytics* with the password *vertex*. Create a similar account on the desktop by selecting

Start > My Computer > right-click on Properties.

Vertex™ 72-Point Continuous Monitor

Add a new account as shown in Figure F-24 and add *Honeywell Analytics* to the *Administrators* group.

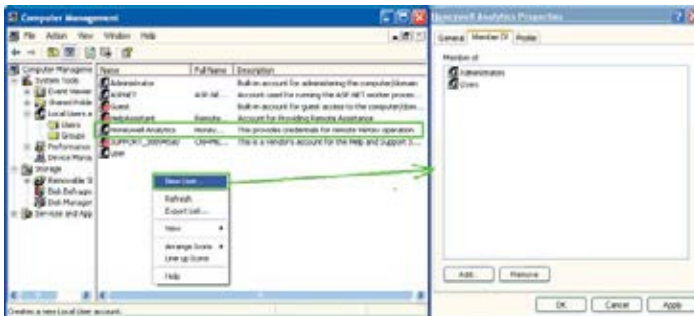


Figure F-24

Create HMI account (optional)

It is often useful to create multiple HMI accounts. This facilitates using the HMI security system to control access to the HMI's features as described in [Section 4.6.6 Security Access](#). Alternatively, the *Admin* account with the password *Admin* can be used.

Creating an Active Display Account

On the remote computer, navigate to

Start > All Programs > Rockwell Software > RAD System > RSView32 Active Display Station.

A dialog similar to Figure F-25 will appear. Create a name for the Window then click *Next*.

A dialog similar to Figure F-26 will appear. Enter the name of the Vertex rack to be displayed (either the IP address or the hostname can be used). The button highlighted in purple facilitates searching for the rack by hostname.



Figure F-25

Figure F-26

Select *Next*.

Vertex™ 72-Point Continuous Monitor



Figure F-27

Click the *Save user name and password* (shown in Figure F-27) checkbox and then click *OK*.



Figure F-30

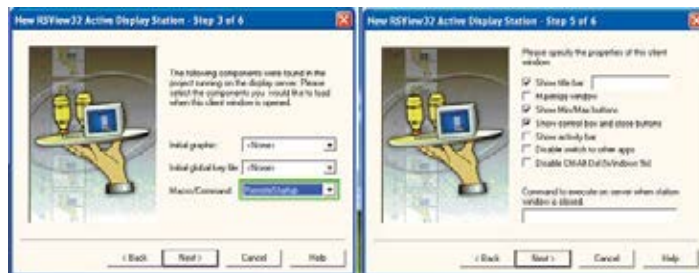


Figure F-28

Figure F-29

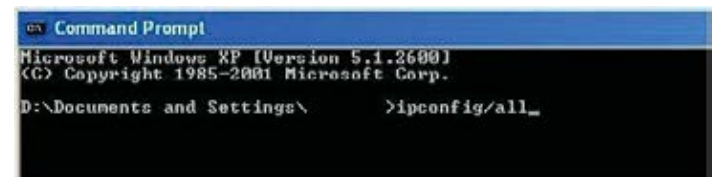


Figure F-31

Debugging

1. Occasionally, a failed operation is manifested by the desktop Active Display screen being all gray with no error messages. If this occurs, verify the correct network gateway setting by performing *ipconfig /all* from the command prompt as shown in Figures 30 and 31.

Vertex™ 72-Point Continuous Monitor

2. Failures because of DCOM settings are often accompanied by records in the Windows event log. These can be viewed by selecting

Start > My Computer > Manage.

Events correlated in time with the undesired behavior and any “Error” merit attention.

More detailed information as shown in Figure F-32 can be viewed by double-clicking on the event.

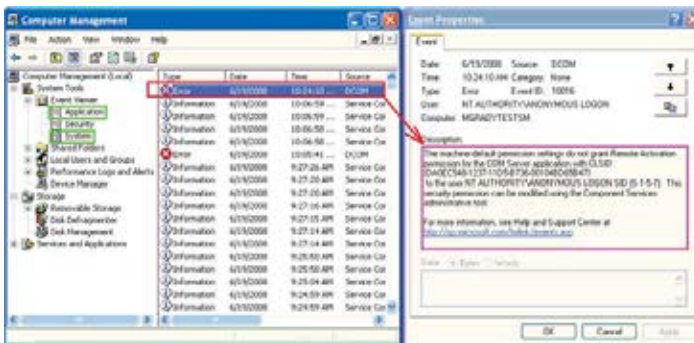


Figure F-32

G Line Integrity Test Option

Vertex™ 72-Point Continuous Monitor

Honeywell Analytics now offers the optional capability to check for leaks in Vertex sample lines. Analyzers equipped with option 1295-0510 detect a pneumatic signal from valves installed at the end of the sample line. Any leak in the tubing will cause a change in the signal and will be detected. This test is performed automatically as a line integrity test (LIT). This new test complements the ability of all Vertex analyzers to detect blocked sample lines.

The Line Integrity Test Option requires a minimum software revision of 1.21.1 and configuration of analyzer software by a Honeywell Analytics Field Service Engineer.

Pneumatic Overview

The pneumatic design of the Vertex rack is summarized in Figure 1. The Vertex analyzer contains eight sample pressure transducers, one for each point. The external tubing is terminated with a filter and a check valve. The check valve will not permit any flow until a “cracking” pressure of about 1.0 in. Hg is applied. (see Note 1) A leak between the analyzer and the check valve will result in an increase in pressure at the analyzer.

Before the LIT test can be performed, the Vertex and the external plumbing must be “characterized”. This process involves measuring the sample pressure when the tubes are known to be leak-free and otherwise correct. It is possible to confirm that a tube is leak-free by plugging the end and observing the sample flow decrease to zero. During the

characterization process, the Vertex records the observed sample pressure. Later LIT tests will issue a fault if the sample pressure increases significantly. Performing the characterization without a leak check invalidates the LIT.

Note :

In this document all pressures are given in inches of mercury. This may be converted to kilopascals by multiplying by 3.38. Furthermore, all pressures are reported as gauge pressure, not as vacuum. Using this nomenclature, the effect of a sample line leak is described as a pressure increase instead of a vacuum decrease.

Vertex™ 72-Point Continuous Monitor

because of synchronization delays.

The test is not compatible with shared sample lines.

The use of external filters is mandatory with Vertex LIT as it is with all Vertex points. [Appendix B, Specification, Section B.2 Filter Compatibility](#) contains guidance on filter selection.

Quantitative Performance

The pressure at the pump inlet must be less than -7.0 in Hg or the test will be inhibited. The sample line must be 4.8 mm ID [thin wall or 0.190 inch ID] and have a length of 90 meters or less. This supersedes table B-2 in Appendix B, Specifications.

The total gas flow (transport plus sample) is typically 1.3 liters per minute per point. This results in a differential pressure of about 1.2 in. Hg with the maximum tubing length. The check valve increases the differential pressure by an additional 1.0 in. Hg for a total of about 2.2 in Hg.

During characterization the differential pressure must be 0.8 in. Hg or more or a fault will be issued. During LI testing the differential pressure must be at least 70% of the characterization differential pressure or more or a fault will be issued. Leaks of 1 mm [0.039 inch] diameter or larger will cause a substantial decrease in the differential pressure and the generation of a fault.

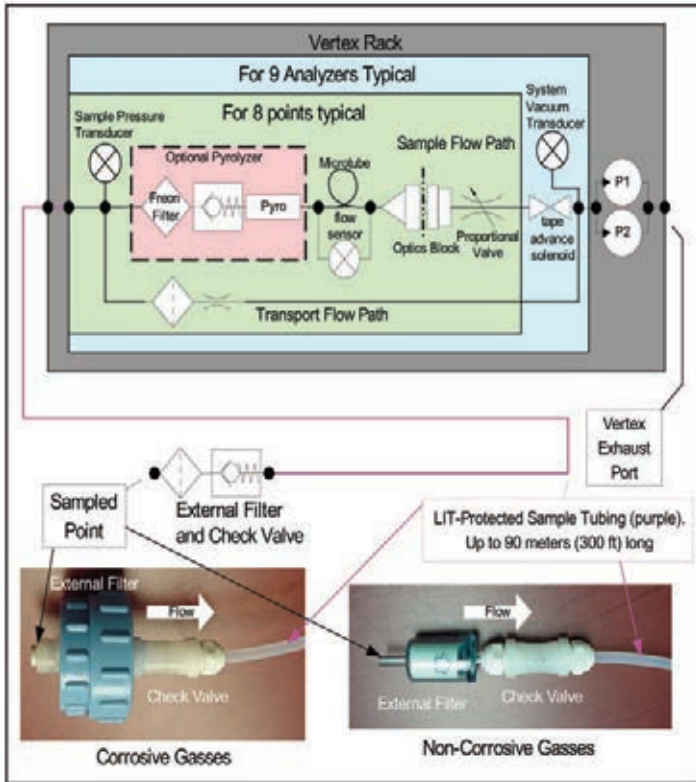


Figure G-1 -- Simplified Pneumatic Schematic

In practice, the sample pressure measurements are made as a differential measurement with the pump on and then off. This eliminates the effect of any transducer offset. However, since analyzers share a pump, performing the LIT requires that all analyzers stop monitoring. Pressures throughout the Vertex are allowed to stabilize for 30 seconds before taking any measurements. An LIT causes monitoring to be interrupted for about two minutes

Vertex™ 72-Point Continuous Monitor

The LIT measurement requires that the total pressure variance of the sampled point, the Vertex rack and the exhaust outlet must be less than 0.3 in. Hg. for correct operation (see Figure G-1).

Software Overview

Automatic LI tests can be scheduled to take place at any of the times when a time weighted average (TWA) is recorded. TWAs are recorded every eight hours so that up to three LI tests can be performed per day. As with previous software, the time of the TWA can be shifted up to eight hours so that the LI test time can be any time of day. The LI test can be disabled on a per-point basis to permit a rack with LIT to have some tube configurations that are incompatible with LIT.

Buttons are provided to start an LI characterization or an unscheduled test. These two buttons are on the RS View “Authorized Service” screen.

Accessing LIT Parameters

A checkbox on the Configure Point screen as highlighted by the red rectangle in Figure G-2, enables the selected analyzer to participate in the LIT. By default, all analyzers purchased with this option will participate. Clearing this checkmark removes the analyzer from the LIT and prevents the generation of LIT-related faults for the associated point. Otherwise, nuisance faults may be generated for points with incompatible external components.

Examples include tubes longer than 90m, medium-walled tubing, and shared sample lines.

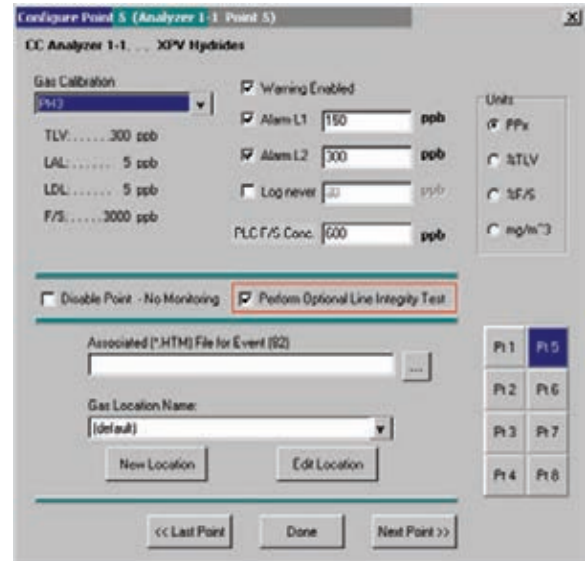


Figure G-2 -- LIT Access

Pressing the “Line Integrity Test” button shown in Figure G-3 causes the form shown in Figure G-4 to appear.

The three times displayed on the left of the new tabsheet indicate the TWA times. (TWA times are set on Data Logging tabsheet.)

The checkbox and labels on the right of the new page will become black if any of the left-side checkboxes are checked. Otherwise the right-side items will become gray.

The checkmark itself indicates the status of the point-specific checkboxes shown in Figure G-2. If the point-specific LIT checkboxes are all set, this

Vertex™ 72-Point Continuous Monitor

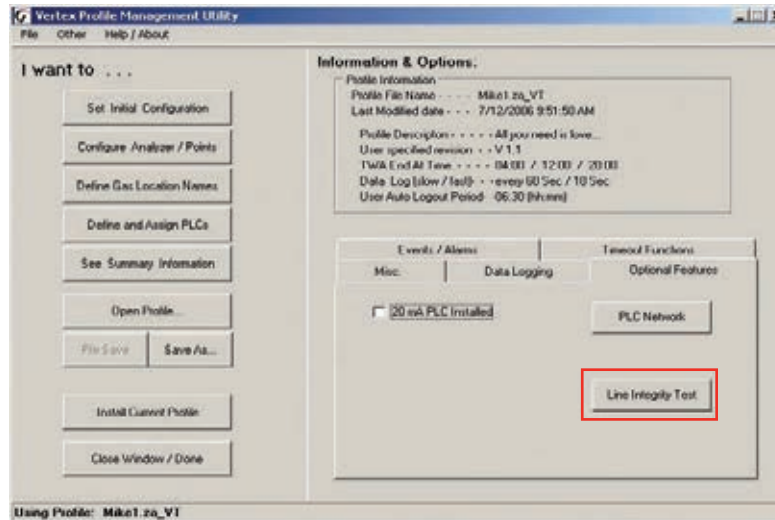


Figure 3 -- Configuration Editor New Button

checkmark will be set.

LIT Access from RSView

RSView has two buttons.

1. Two buttons in the Authorized Service screen as shown in Figure G-5. When the associated analyzer is in Monitor mode this will appear as shown in Figure G-6.

Access to the Authorized Service screen is restricted to RSView users with the “E” permission code turned on for their account. For RSView permission codes, see [Section 4.6.6 Security Access](#).



Figure G-5 -- LIT Access from Authorized Service Mode

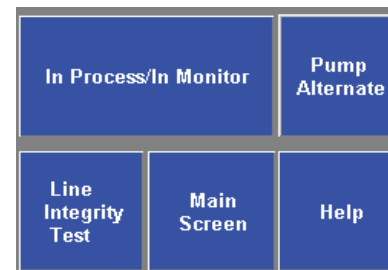


Figure G-6 -- LIT Access from Monitor Mode

Vertex™ 72-Point Continuous Monitor

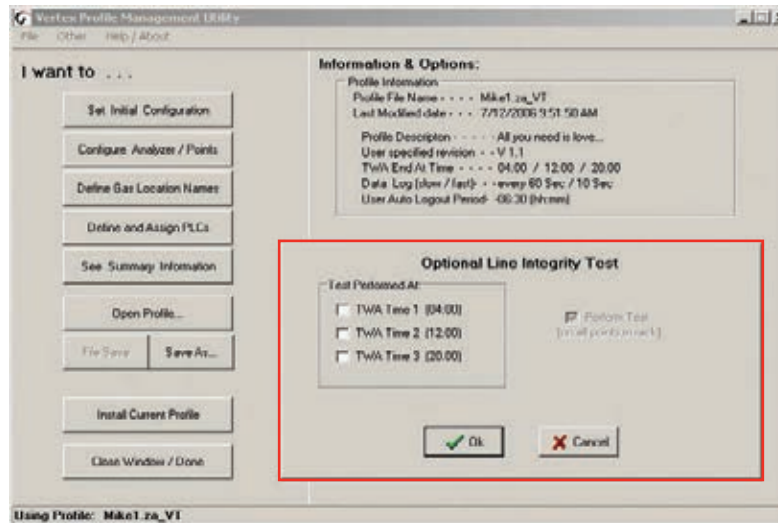


Figure 4 -- Configuration Editor New Page

Pressing the “Record Known Good LITC” button will cause a characterization to be performed on all analyzers in the rack. Similarly, pressing the “Line Integrity Test” button will cause a line integrity test to be performed immediately. This is in addition to the LITs which are scheduled by the checkboxes in Figure 4.

During a LIT test or characterization, the RSView analyzer status display will change from “MONT” or “IDLE” to “LIT”

LIT Related Events

The Vertex is capable of creating four Maintenance Faults 122 through 125 as shown in [Table 6-7: Maintenance Faults](#).

If the LIT generates Event 124, care must be taken to inspect the integrity of the sample line tubing along its length as the monitored sample may be taken from the break in the tubing, not from the intended area.

The Vertex is also capable of five new informational events as listed in [Table 6-9: Information Events](#).

Note :

If additional or replacement Vertex Analyzers are purchased without specifying the LIT option, no faults will be generated for the lack of the option in the new analyzer. However, an “INFO” message will be logged in the Event History each time the LIT option is invoked. Existing analyzers configured for LIT will be unaffected.



Vertex™ 72-Point Continuous Monitor

H Warranty Statement

Vertex™ 72-Point Continuous Monitor

Chemcassette® Device Warranty Statement

All products are designed and manufactured to the latest internationally recognized standards by Honeywell Analytics under a Quality Management System that is certified to ISO 9001.

As such, this instrument (including the pump) is warranted under proper use, to the original end-user purchaser, against any defects in materials or workmanship related failures for a period of 12 months from the date of first turn-on or 18 months from delivery from Honeywell Analytics to the customer, whichever is less. Separate warranty conditions apply to the sensor cartridges limited as indicated below. During this period, Honeywell Analytics will repair or replace defective parts on an exchange basis, F.O.B. to approved service centers on a global basis.

This warranty does not cover damage caused by accident, abuse, abnormal operating conditions or extreme poisoning of the sensor cartridge.

Defective equipment must be returned to Honeywell Analytics for repair. Before returning materials for repair or replacement, the Customer must obtain a Service Event Number (SE#) by contacting Honeywell Analytics Service in advance; include a detailed report stating the nature of the defect and ship the equipment prepaid to Honeywell Analytics' factory. If no detail report is included, Honeywell Analytics reserves the right to charge an investigative fee (prices available upon request) before any repair or replacement is performed.

Returned goods must detail the Service Event Number (SE#) clearly on the package.

Service in the field or at the customer's premises is not covered under these warranty terms. Time and travel expenses for on-site warranty services will be charged at Honeywell Analytics' normal billing rates. Contact your Honeywell Analytics representative for information on available Service Contracts.

Honeywell Analytics shall not be liable for any loss or damage whatsoever or howsoever occasioned which may be a direct or indirect result of the use or operation of the Contract Goods by the Buyer or any Party.

This warranty covers the gas detector and parts sold to the Buyer only by authorized distributors, dealers and representatives as appointed by Honeywell Analytics. This warranty does not cover defects attributable to improper installation, repair by an unauthorized person or the use of unauthorized accessories/parts on the product. A warranty claim will only be accepted if a proof of purchase is submitted and all conditions obtained within this Warranty are met.

Honeywell Analytics reserves the right to validate any warranty claim prior to processing. Upon acceptance of a warranty claim, Honeywell Analytics will repair or replace the defective product free of charge. The initial warranty period is not extended by virtue of any works carried out there after.

Vertex™ 72-Point Continuous Monitor

Instruments which have been repaired or replaced during the warranty period are warranted for the remainder of the unexpired portion of the original warranty period. Honeywell Analytics is released from all obligations under its warranty in the event repairs or modifications are made by persons other than its own authorized personnel, unless such work is authorized in writing by Honeywell Analytics. Honeywell Analytics is released from all obligations under its warranty in the event that detection substrates other than Honeywell Analytics' Chemcassettes® have been installed and used in Honeywell Analytics' instruments.

Honeywell Analytics reserves the right to change this policy at any time. Contact Honeywell Analytics for the most current warranty information.

Chemcassette® Warranty

All Chemcassettes® are warranted for a period not to exceed the Chemcassette® expiration date printed on each package, and tape reel.

Find out more

www.honeywellanalytics.com

Americas

Honeywell Analytics
405 Barclay Boulevard
Lincolnshire, IL 60069
United States
Tel: +1 847 955 8200
Toll free: +1 800 538 0363
Fax: +1 847 955 8208
detectgas@honeywell.com

**Europe, Middle East, and Africa**

Life Safety Distribution AG
Javastrasse 2
8604 Hegnau
Switzerland
Tel: +41 (0)1 943 4300
Fax: +41 (0)1 943 4398
gasdetection@honeywell.com

Asia Pacific

Honeywell Industrial Safety
7F SangAm IT Tower
434 Worldcup Buk-ro, Mapo-gu
Seoul 03922
Korea
Tel: +82 2 6909 0300
VOIP: +8 5401 0321
Mobile: +82 10 2512 6117
Fax: +82 2 6909 0329
analytics.ap@honeywell.com

Technical Services

ha.global.service@honeywell.com

www.honeywell.com

Please Note:

While every effort has been made to ensure accuracy in this publication, no responsibility can be accepted for errors or omissions.

Data may change, as well as legislation, and you are strongly advised to obtain copies of the most recently issued regulations, standards and guidelines.

This publication is not intended to form the basis of a contract.

Honeywell

1998M0391

Revision 26, February 2018

©2018 Honeywell Analytics



DETECTION | **S**AFETY | **P**ROTECTION

For Pricing or Further
Information Please Contact Us.



+441158390495



www.manonglobal.com



sales@manonglobal.com

**Leading UK Suppliers In
Gas Detection, Safety & Protection
Products
Brand New & Genuine OEM Parts
UK & Worldwide Deliveries Available**



Worldwide Delivery



1000+ Genuine Parts & Equipment